

Index

A

AGC

- decay code, 8–12
- status display, 3–8

Age, field, 4–8

Air flow

- field, 2–8
- low pressure status, 8–31

Angle

- acquisition, 8–49
- sync mode, 8–13

Antenna

- computer mode, 2–8
- configuration overview, 1–4
- control, 2–1
- control master reset, 8–29
- gain, 8–10
- height, latitude, & longitude, 8–24
- IRIS mode, 2–8
- local mode, 2–8
- local mode status, 8–32
- min/max elevation, 8–25
- position for moving platforms, 8–24
- position mode, 2–4
- repositioning moving speed, 8–52
- shutdown, qant command, 2–10
- Sun Tracking mode, 2–4 , 2–14
- testing, 1–5 , 2–13 , 4–1
- velocity mode, 2–4

AntExport, 9–1

Archive, output device, 8–73

- DVD, 8–74
- large disk archive (LDA), 8–74
- MO disk, 8–74
- tape, 8–74

Ascope utility, 3–1

- recording data, 3–22

Atmospheric attenuation. *See* Gaseous attenuation constant

Attenuation, correction, 8–55

Attenuator code, 8–18

Automatic gain control. *See* AGC

Azimuth

- initial mode for axis, 8–25
- min/max velocity, 8–25
- position indicator, 2–4

B

Beamwidth, 8–10

BITE

- address field, 4–11 , 4–13
- configuration menu, 4–7

Broadcast, IP address, 8–20

Byte count packet, 4–8

C

Cache, read size, 8–59

Calibration

- log receiver, 11–3
- overview, 1–7
- reflectivity
 - automatic, 10–16
 - manual, 10–14
 - zauto7 utility, 10–1
- signal generator, 10–18

Centroid value label, 8–63

Clutter, correction, 8–55

Clutter-to-signal ratio. *See* CSR threshold level

Coherency relationships, 3–37

Color

- conversion for Link output, 8–76
- example values, 5–11
- legend format, 5–7
- palette configuration, 5–10
- saturation, 5–6
- scale select, 5–5 , 5–6
- seam values, 5–7
- set configuration, 5–8
- special configuration, 5–10
- threshold, 5–6

Compression, for network output, 8–71

Config, pull-down menu

- change color set, 5–3

- set special colors, 5–3
- Continuous, Wave button, 2–7
- Control
 - bit, definitions, 8–28
 - panel, 2–6
- CSR, threshold, 3–13
- Customize
 - Bitex menu, 4–7
 - command, 4–6

D

- Data
 - truncation height, 8–49
 - width, 8–12
- DEFAULT.ASCOPE, output file, 3–21
- Delete, command, 5–6
- Device file, 8–4
- Digital, signal simulator, testing with, 3–32
- Doppler
 - mean velocity, sign check, 3–38
 - threshold. *See* SQI threshold
 - velocity spectrum plot, 3–18
- DSP
 - I and Q gain and offset pots, fine adjustment, 3–36
 - I, Q, LOG gain and offset pots, coarse adjustment, 3–34
 - parameter computations, 8–49
- DspExport, 9–1
- Dual-PRF, delay, 8–12

E

- Elevation
 - initial mode for axis, 8–25
 - min/max for antenna, 8–25
 - position indicator, 2–4
 - soft limits, 2–5
- Error
 - count field, 2–11
 - field, 2–5
 - permissible during scans, 8–51
 - response to fatal, 8–39
 - time, 2–11

- Example
 - color values, 5–11
 - open command, 5–3

F

- FCAST, maximum time difference, 8–62

G

- Gain control, fixed, 3–8
- Gaseous attenuation constant, 8–12

H

- Hardware name, 8–47
- Header, format for extended, 8–49
- Help, viewing online documentation, 1–12
- Hex ID number field, 4–8

I

- I gain and offset pots
 - coarse adjustment, 3–34
 - fine adjustment, 3–36
- I/O
 - field, 4–8
 - summary menu, 2–10
- IAGC, 8–17
- Image
 - sizing/positioning for Link output, 8–75
 - sizing/positioning for Window output, 8–68

- Increment, field, 2–6
- Inertial Navigation Unit. *See* INU

- Ingest
 - data source, 8–48
 - file space allocation, 8–41

- Input
 - count field, 2–11
 - devices, 8–35

- Interface type, 8–4
- Interference detection, during noise samples, 8–53
- Interlock, safety status, 8–32
- Interlock, field, 2–8
- INU, height offset for moving platforms, 8–25

Inverted velocity, 8–12
IQ Hysteresis feedback, 8–18
IQRMS field, field, A/D C, 3–15
IRIS
 max number of clients, 8–39
 style, 8–47

L

Latitude/longitude, values for antenna, 8–24
LDR, offset, 8–6
Levels command, 5–5
License, features and products, 8–46
Linear
 channel, A/D plots vs. range, 3–18
 receiver, dynamic range check , 3–36
Link, output device, 8–75
Listing file, 8–3
LOG
 channel, A/D plots vs. range, 3–18
 receiver
 calibration, 11–3
 gain and offset pots, coarse adjustment,
 3–34

M

Magnetron
 current status, 8–32
 field, 2–8
Map, outlines, overlay file, 7–12
Memory, mapped I/O, 8–38
Menu, format, 2–3 , 4–3
 control panel, 2–6
 status panel, 2–8
Movie, length for Window output, 8–68

N

Network
 file/filename format, 8–69
 files queued for send, 8–62
 signal warnings, 8–40
 status reports, 8–32
New command, 5–6

Noise
 generator control, 8–29
 PRF for sample, 8–8
 sampling, 8–53
 source button, 2–7
 toggle period, 8–27

O

Options, pull-down menu
 I/O summary command, 2–10
 stable platform parameters, 2–10
 time set, 2–10
Other-Product, file space allocation, 8–41
Output
 bin pattern pulsewidth, 8–15
 count field, 2–11
 devices
 general specifications, 8–66
 port number/name, 8–73
Overlay file
 creating, 7–20
 example, 7–16
 format, 7–10
 GIF underlay , 7–13
 header statements, 7–10
 listing and printing, 7–7
 map outline statements, 7–12
 naming convention, 7–7
 text statements, 7–11
 underlay statements, 7–13
 viewing, 7–8

P

Panel, fields, 4–3
Passive IRIS, 8–50
Plot
 linear channel A/D vs. range, 3–18
 LOG channel A/D vs. range, 3–18
 time series, 3–20
Polarization
 control in RCP, 8–27
 enabling in ingest, 8–5
 enabling in product generator, 8–59
 status for antenna controller, 8–27

Position
 actual, 2–5
 mode, 2–4
 requested, 2–5
Power spectrum window, 8–12
Pressure, field, 2–8
PRF, 8–8
Printer, output device, 8–67
Printer options, output device type, 8–66
Priority
 IRIS processes, 8–43
 product scheduling, 8–63
 transmit and receive processes, 8–23
Processor type, 8–4
Product
 generation status, 8–61
 made from partial Ingest scans, 8–58
 receive status timeout, 8–61
 scheduling priority, 8–63
PROJECTION statement, overlay file, 7–10
Pulse width change, during noise samples,
 8–53
Pulsewidth
 control in RCP, 8–27
 number of, 8–8
 status for antenna controller, 8–27
 status/control, 2–9
 value, 8–15
 wait time for change, 8–8

Q

qant command, 2–10

R

Radar, site ground height, 8–24
Radar Control Processor, 8–21
Radar Video Processor, 8–4
Radiate
 button, 2–7
 toggle period, 8–26
Range, mask spacing, 8–15
Raw-Product, file space allocation, 8–41

RCP
 external mode change, 8–39
 status field, 2–9 , 2–11
 reset button, 2–9
 shutdown status, 8–31
 testing, 4–1
RCP8
 network interface, 9–1
 serial interface, 9–12
Receiver
 format for RCP, 8–22
 losses, 8–10
 primary/auxiliary channel name, 8–23
Reference height, 8–59
Repair, setup errors, 8–3
Reports, network status, 8–32
RHI, elevation speedup ration, 8–51
RST, reporting modes, 8–33
Running utilities, 1–8
 utils menu, 1–9

S

Safety interlock, status, 8–32
SAMPLE.RES, overlay file, 7–16
Saturation, color, 5–6
Scanning, options, 8–50
Sensitivity Time Control. *See* STC
Servo power
 button, 2–7
 control, 8–28
 status, 8–30
Set time button, 2–12
Setup
 command line option, 4–2
 listing file, 8–3
Shipboard systems, 2–16
show_machine_code command, 8–47
Siggen
 calibration file, 10–18
 continuous wave control, 8–29
 continuous wave status, 8–30
Signal, network warnings, 8–40
Signal generator, button, 2–7
Signal generator
 control, 8–29

- power output, 8–27
- status, 8–30
- Signal processor
 - options, 8–12
 - overview, 1–6
- Site
 - name, 8–47
 - name/code, 8–45
 - number for AWS, 8–76
- Socket, external mode change, 8–39
- Speech, output for message types, 8–40
- SQI, threshold, 3–13
- Stable platform, 2–16
- Status
 - bit, definitions, 8–30
 - field, 2–5
- Status product, external mode change, 8–39
- STC, gain control, 8–17
 - status display, 3–8
- Stop
 - button, 2–4
 - light, 2–4
- Sun Tracking
 - button, 2–5
 - mode, 2–4 , 2–14
- System time, 8–38

T

- T/R
 - computer mode, 2–8
 - IRIS mode, 2–8
 - local mode, 2–8
 - local mode status, 8–32
 - power control, 8–28
 - power field, 2–6
 - power status, 8–30
- Tag lines, type of angle syncing, 8–49
- Test signal, losses, 8–10
- Testing
 - Digital Signal Simulator, 3–32
 - safeguards, 2–13
- Threshold, color, 5–6
- Time
 - coasting between tasks, 8–52

- elapsed since last report, 2–11
- error, 2–11
- of last report, 2–11
- reset, 2–12
- series at selected range plot, 3–20
- update field, 2–11
- warmup & settle for signal generator, 8–27
- Time zone, 8–38
- Timezone, in time packets, 8–23
- TRACK, maximum time difference, 8–62
- Transmitter
 - format to RCP, 8–22
 - power loss, 8–10
 - pulsewidth power, 8–16
 - radiation control, 8–28
 - radiation status, 8–30
 - standby status, 8–32
 - warm-up, idle time, 8–54
 - wavelength, 8–8

U

- UDP, port number, 8–20
- Underlay, defining in overlay file, 7–13
- Units, number of field, 4–8
- Unrecognized site code, 8–45

V

- Velocity
 - actual, 2–5
 - fallspeed correction, 8–57
 - mode, 2–4
 - requested, 2–5
 - sign, 8–12
 - unfolding, 8–56

W

- WARN
 - centroid value label, 8–63
 - maximum time difference, 8–62
- Warning
 - disable field, 4–12
 - flag field, 4–12
 - regions, 8–64

Waveguide pressure

status, 8–31

status indicator, 2–8

Wavelength transmission, 8–8

Web, setups, 8–77

Window

output device, 8–68

password, 8–47

power spectrum, 8–12

Window alerts, 8–44

Z

Z/R relationship, 8–58

Zauto7 utility, 10–1

zcalib.conf, config file, 10–13

ZDR, offset, 8–6