

Table of Contents

Preface	vi
1. Introduction and Specifications	1-1
1.1 General Architecture	1-2
1.2 RCP02 I/O Connections	1-6
1.2.1 Local Configuration and Manual Control Terminal	1-8
1.2.2 Antenna Servo I/O	1-8
1.2.3 Status Inputs	1-8
1.2.4 Control Outputs	1-9
2. Installation and Operation	2-1
2.1 Board Configuration and External Connections	2-1
2.1.1 Configuring the Wide-range Status Inputs	2-1
2.1.2 Configuring the Control Outputs	2-2
2.1.3 Motor Drive and Tachometer	2-3
2.1.4 External Servo Drive Relay	2-4
2.1.5 Azimuth and Elevation Position Inputs	2-4
2.1.6 Elevation Limit Switches	2-4
2.1.7 TTY and Host Computer Serial Lines	2-5
2.1.8 Analog Voltage Input Lines	2-5
2.2 The TTY Main Menu	2-6
2.2.1 TTY "Help Support" Command	2-7
2.2.2 TTY "Help View" Command	2-7
2.3 The TTY "MONITOR" Command	2-8
2.3.1 TTY Antenna Monitor and Control	2-8
2.3.1.1 Commands Recognized by the Angle Monitor	2-9
2.3.1.2 Alternate Display for Shipboard Platforms	2-10
2.3.1.3 Alternate Display of Antenna Dynamics	2-11
2.3.2 TTY Serial I/O Monitor	2-12
2.3.2.1 Commands Recognized by the Serial I/O Monitor	2-13
2.3.2.2 Alternate Displays of Raw SIO Records	2-13
2.3.3 TTY Inertial Navigation Unit Monitor	2-13
2.3.3.1 Alternate INU Monitor Presentations	2-14
2.3.4 TTY Status Line Monitor	2-14
2.3.5 TTY Control Request Monitor	2-15
2.3.6 TTY Internal LOG Monitor	2-16
2.3.7 TTY Analog Voltage Input Monitor	2-17
2.4 TTY "RESET" and "REBOOT" Commands	2-17
2.5 Suggested SETUP Sequence	2-18

3. TTY Nonvolatile Setups	3-1
3.1 Using the SETUP Menus	3-1
3.2 The "SAVE" and "RESTORE" Commands	3-9
3.3 The "SITE" Command	3-9
3.3.1 Front Panel Display Setups	3-9
3.3.2 Host Computer I/O Setups	3-11
3.3.3 Customer-Specific Site Setups	3-13
3.3.4 Data and Event Logging	3-18
3.3.5 Miscellaneous Site Setups	3-19
3.4 The "AXIS" Command	3-19
3.5 The "VSERVO" Command	3-25
3.6 The "PSERVO" Command	3-30
3.7 The "CONTROL" Command	3-31
3.7.1 Output Line Configuration	3-31
3.7.2 Logic Equation Control Qualifiers	3-31
3.7.3 Logic Equation Timer Variables	3-36
3.7.4 Logic Equation Examples	3-38
3.7.5 Logic Equation Configuration of Variables	3-41
3.7.6 Analog Voltage Input Control Logic Variables	3-41
3.8 The "STATUS" Command	3-42
3.9 The "INU" Command	3-42
4. Theory of Servo Operation	4-1
4.1 Overview of Servo Concepts	4-1
4.2 Velocity Servo Theory	4-2
4.2.1 Tachometer Input	4-3
4.2.2 Nominal Drive Slope	4-3
4.2.3 Velocity Feedback Slope and Dead Zone	4-3
4.2.4 Drive and Tach Sign Correction	4-4
4.3 Position Servo Theory	4-4
4.3.1 The Position Servo Response Curve	4-5
4.4 Fail-safe Antenna Features	4-6
4.5 Modification of Servos For Use on a Moving Platform	4-11
A. Connector and Wiring Specs	A-1
B. RCP02 Chassis	B-1
B.1 Use of Static Protection	B-1
B.2 Front Panel	B-1
B.3 Back Panel	B-1
B.3.1 Input Power	B-1
B.3.2 Fuses	B-2
B.3.3 25-pin D Connectors	B-2

B.4	Converting from Table Top to Rack Mount Option	B-2
B.5	Cooling	B-2
B.6	Shipping	B-2
B.7	Chassis Specifications	B-2
C.	Serial Control Formats	C-1
D.	Installing a Spare RCP02	D-1
D.1	Standard Spares Kit Contents	D-1
D.2	Successful Preparation for Failure	D-1
D.3	Documenting the Primary System Hardware	D-1
D.4	Documenting the Primary System D/A and A/D Spans	D-2
D.5	Documenting the Primary System TTY Setups	D-4
D.6	Configuring the Spare Board Hardware	D-5
D.7	Configuring the Spare Board TTY Setups	D-5
D.8	Configuring the D/A and A/D Convertor Spans	D-6
D.9	Re-Connect all Cables and Test	D-8
D.10	Operational Test	D-10
E.	Dual System Operation	E-1
E.1	Dual-System Applications	E-1
E.2	Dual System Architecture	E-2
E.3	Dual-System Special Cabling and Modifications	E-5
E.4	RCP02 TTY Setups for Dual-System	E-6
E.5	RVP7 TTY Setups for Dual-System Support	E-11
E.6	IRIS Configuration for Dual-System Support	E-12
E.7	IRIS Dual-System Switching Menu	E-17
E.8	Trouble Shooting with the Switching Menu	E-20
E.9	Dual-System Parallel Operation	E-26
E.9.1	RCP02 Setups for "Flip" or Simultaneous Operation	E-27
E.9.2	IRIS Setups for "Flip" or Simultaneous Operation	E-27
E.9.3	IRIS TASK Scheduler: "Flip" Operation	E-29
E.9.4	IRIS TASK Scheduler: Simultaneous Active/Passive Operation	E-29
Index	Index-1

Figures

Figure 1-1:	Example of RCP02 Applications	1-7
Figure 4-1:	Digital Velocity Servo	4-2
Figure 4-2:	Digital Position Servo	4-5
Figure 4-3:	Example of the Lower EL LIMITS.	4-8
Figure 4-4:	Modification of Velocity Servos	4-12
Figure A-1:	Schematic Page #1	A-13
Figure A-2:	Schematic Page #2	A-14
Figure A-3:	Schematic Page #3	A-15
Figure A-4:	Schematic Page #4	A-16
Figure A-5:	Schematic Page #5	A-17
Figure A-6:	Schematic Page #6	A-18
Figure B-1:	Back Panel Display of the RCP02	B-4
Figure B-2:	Front Panel Display of the RCP02	B-5

Tables

Table 1-1:	RCP02 Features and Specifications	1-2
Table 1-1:	RCP02 Features and Specifications, continued	1-3
Table 1-1:	RCP02 Features and Specifications, continued	1-4
Table 1-1:	RCP02 Features and Specifications, continued	1-5
Table A-1:	Back Panel Azimuth and Elevation Inputs	A-1
Table A-2:	Back Panel Control and Status Signals	A-2
Table A-3:	Back Panel Computer and TTY Serial Ports	A-3
Table A-4:	Back Panel Azimuth and Elevation Outputs	A-4
Table A-5:	Back Panel Inertial Navigation Unit	A-5
Table A-6:	Back Panel Motion Control, and Miscellaneous I/O	A-6
Table A-7:	Back Panel Synchro Input Connector (J13)	A-6
Table A-8:	Internal Mini Mate-n-Lock AMP Synchro Connector	A-7
Table A-9:	Spare Connectors	A-7
Table A-10:	DIN Connector Pin Assignments	A-8
Table A-11:	Standard Backplane Wirewrap Connections	A-9
Table A-11:	Standard Backplane Wirewrap Connections (Continued)	A-10
Table A-11:	Standard Backplane Wirewrap Connections (Continued)	A-11
Table A-11:	Standard Backplane Wirewrap Connections (Continued)	A-12
Table C-1:	Status Packet RCV01 Format (RCP02 to Host)	C-3
Table C-2:	Control Packet XMT01 Format (Host to RCP02)	C-4
Table C-3:	Status Packet RCV02 / RCV04 Format (RCP02 to Host)	C-5
Table C-4:	Control Packet XMT02 / XMT04 Format (Host to RCP02)	C-6
Table C-5:	Status Packet RCV03 Format (RCP02 to Host)	C-7
Table C-6:	Status Packet RCV05 Format (RCP02 to Host)	C-9
Table C-7:	Control Packet XMT05 Format (Host to RCP02)	C-10

Table C-8:	Time Packet (RCP02 to Host)	C-11
Table C-9:	Generic BITE Packet (RCP02 to/from Host)	C-11
Table C-10:	Internal BITE Packet (RCP02 to Host)	C-11
Table C-11:	Auxiliary Status/Control BITE Packets	C-13
Table C-12:	Internal A/D Converter Q-BITE (RCP02 to Host)	C-14
Table C-13:	Andrew-Kintec BITE Packet (RCP02 to Host)	C-14
Table C-14:	Orbit Pedestal BITE Packet (RCP02 to Host)	C-16
Table C-15:	Gigacom Transmitter BITE Packet (RCP02 to Host)	C-17
Table C-16:	Gigacom Transmitter Q-BITE (RCP02 to Host)	C-18
Table C-17:	MELCO TKY01 Q-BITE (RCP02 to Host)	C-19
Table C-18:	BITE Interrogate Packet (Host to RCP02)	C-19
Table C-19:	Chat-Mode Packet	C-20
Table C-20:	Background Operation Packet	C-20