

Table of Contents

Preface	viii
1. Installation	1-1
1.1 Before You Start	1-1
1.2 Mount the CD	1-2
1.3 New Software Installation	1-3
1.3.1 Preparing for a New Software Installation	1-3
1.3.2 Performing a New Software Installation	1-5
1.3.3 Copy SIGMET environment files into /home/operator	1-6
1.3.4 Run setup utility	1-6
1.3.5 Get your SIGMET license (IRIS or TS Archive systems ONLY) ...	1-7
1.3.6 Run sigmet_env	1-7
1.4 Initial Configuration	1-8
1.4.1 Setting up for rcp and other “r” commands	1-8
1.4.2 Setting up for scp and other ssh commands	1-8
1.4.3 Serial Line Setup	1-9
1.4.4 Create mount point for MO disks	1-9
1.4.5 Installation Security Issues	1-9
1.4.6 Startup profile File	1-10
1.4.6.1 How to Create and Modify the profile File	1-10
1.4.6.2 Operator list Defined in the Startup File	1-11
1.4.7 Do platform dependent configuration	1-11
1.5 Configuring Linux for the first time	1-12
1.5.1 Automatic startup of X and Default SIGMET Environment	1-12
1.5.2 Configuring NTP	1-12
1.5.3 Configuring xinetd	1-13
1.5.4 Configuring the root prompt	1-14
1.6 Configuring HP-UX	1-15
1.6.1 Create the SCSI Pass-Through Driver for the RVP	1-15
1.6.2 Configuring for Automatic Startup	1-16
1.6.3 Create link for libXmu.sl	1-16
1.6.4 Check patches	1-17
1.6.5 Check kernel parameters	1-17
1.6.6 Enable windows on the local host	1-17
1.6.7 Disabling the Distributed Printer Services	1-17
1.7 Upgrade Installation	1-18
1.7.1 Preparing for an Upgrade Installation	1-18
1.7.2 When should I upgrade?	1-18

1.7.3	What should I do before I upgrade?	1-18
1.7.4	Where to get software upgrades?	1-19
1.7.5	How should I upgrade	1-19
1.7.6	Getting the network upgrade files	1-20
1.7.7	Performing an Upgrade Installation	1-22
1.8	Install Utility Window Options	1-24
1.8.1	“Read From” Option	1-25
1.8.2	Install To Option (Including Network Installs)	1-25
1.8.3	Manuals Option	1-26
1.8.4	EMACS Text Editor Option	1-26
1.8.5	Headers, Source, and Objects	1-27
1.8.6	Product Example file option	1-27
1.8.7	Verbose Option	1-28
1.8.8	Keep Old Files Option	1-28
1.9	Troubleshooting	1-29
1.9.1	File Ownership and Protection	1-29
1.9.2	Authorizing remote X-Windows on Your Node	1-29
1.10	Basics of Login, Logout and Shutdown	1-30
1.10.1	Power up procedure	1-30
1.10.2	Local and remote login	1-30
1.10.3	Default operator and root login passwords	1-30
1.10.4	Login procedure	1-30
1.10.5	Logout procedure	1-32
1.10.6	Poweroff shutdown procedure	1-32
1.11	RVP8 & RCP8 (RDA) PCI Software Installation	1-33
1.11.1	Installation steps to “flash” FPGA’s in SIGMET devices	1-33
1.11.2	Reboot power-up check and RDA diagnostics	1-34
1.12	RDA Software Configuration	1-35
1.12.1	RCP8 Setup Configuration Summary	1-36
1.12.2	RVP8 Setup Configuration Summary	1-37
1.12.3	Configuring the softplane.conf file	1-39
1.13	Testing, Backup, and Calibration	1-50
1.13.1	Ascope Test (RVP8 Installations ONLY)	1-50
1.13.2	Antenna Test (RCP Installations ONLY)	1-50
1.13.3	IRIS Test (IRIS systems ONLY)	1-50
1.13.4	Print Special Files	1-50
1.13.5	Make a Full Backup	1-50
1.13.6	DSP Calibration (RVP Installations ONLY)	1-50
2.	UNIX Survival Skills	2-1
2.1	Setting up the Login Environment	2-1
2.2	Running IRIS Utilities from a Remote Node	2-2

2.3	Managing an IRIS System	2-3
2.3.1	Checking the IRIS Environment	2-3
2.3.2	Reporting the Free Blocks on a Disk	2-4
2.3.3	File Ownership and Protection	2-4
2.4	Command Summary	2-5
2.5	CDE Front Panel Configuration	2-6
2.5.1	Installing the IRIS Utilities Icon	2-6
2.5.2	Installing the Utilities List	2-6
2.5.3	Getting the icons to display	2-7
2.6	Automatic Windows Startup	2-9
2.7	HP-UX Issues	2-9
2.7.1	Backup Procedure	2-9
2.7.1.1	Backing up	2-9
2.7.1.2	Restoring	2-9
2.7.2	Controlling banner page printing	2-10
2.7.3	Configure routing to another network	2-10
2.7.4	Booting in single user mode	2-10
2.7.5	Extending a logical volume	2-10
2.7.6	Using the floppy to read DOS disks	2-11
2.7.7	Fix ClearLine warning message	2-11
2.8	Linux Issues	2-12
2.8.1	Backup Procedure	2-12
2.8.2	Time & Date	2-12
2.8.3	LINUX for experienced users of other OS's	2-12
2.8.3.1	Unix to Linux	2-12
2.8.3.2	DOS to Linux	2-13
2.8.3.3	VAX/VMS to Linux	2-13
2.8.4	Red Hat Configuration Utilities	2-13
3.	IRIS Diagnostic Utilities	3-1
3.1	sigmet_env Command	3-1
3.2	ps_iris Command	3-2
3.3	restart_iris Command	3-3
3.4	show_iris Command	3-4
3.5	structmap Command	3-6
A.	Installing Red Hat Linux	A-1
A.1	Installation Overview	A-2
A.1.1	Using this Manual	A-2
A.1.2	Types of installation media	A-2
A.1.3	Installation Preparation	A-3
A.2	Automatic Installation (Operational & Miniroot)	A-4
A.2.1	SIGCONFIG & SIGBUILDMINI	A-4

A.3	Manual Installation	A-6
A.3.1	Disk Partitioning	A-6
A.3.2	Using fdisk	A-9
A.3.3	Operational Linux Install	A-14
A.3.4	Formatting and assigning mount points to partitions	A-16
A.3.5	Operational Package Selection	A-25
A.3.6	Final Steps of Operational Linux Installation	A-27
A.3.7	Miniroot (System Recovery) Install	A-28
A.3.8	Final Steps of Miniroot Installation	A-38
A.4	Configuring LILO	A-39
A.5	Manual Installation Configuration	A-41
A.5.1	RHEL ES 3	A-41
A.5.2	User Account Configuration	A-41
A.5.3	Configuration for Automatic Startup	A-42
A.5.3.1	Copying of Automatic Startup Programs	A-42
A.5.3.2	Enabling Startup Programs	A-42
A.6	Automatic Installation Configuration	A-43
A.6.1	Configuring X Windows	A-43
A.6.2	Configuring your time zone	A-43
A.7	Network Configuration	A-44
A.7.1	Basic Network Configuration	A-44
A.7.2	TCP/IP Service Configuration	A-44
A.7.3	FTP for Red Hat Enterprise Linux and Red Hat 8.0 (vsftpd)	A-44
A.7.4	Rcp	A-44
A.7.5	Routing	A-45
A.8	Region Specific Settings	A-46
A.9	Earlier Versions of the RDA Installation CD	A-47
A.10	X-Windows Troubleshooting: Framebuffer Method	A-49
A.11	Installing Linux on Windows System (Dual Booting)	A-51
A.11.1	Dual Boot (Windows & Linux) Tips	A-53
A.12	Special notes for notebook installations	A-54
A.13	RxNet7	A-55
A.13.1	OS Installation	A-55
A.13.2	Network Driver	A-55
B.	UNIX System File Listings	B-1
B.1	/usr/sigmet/config_template/profile	B-1
C.	Printer Configuration	C-1
C.1	Configuring Printer Queues for IRIS use	C-1
C.2	Displaying Print Queues	C-3
C.3	Configuring Printer Options	C-4
3.5.1	Printer Setup Menu	C-4

D. sigbru Utility	D-1
D.1 System Configuration for sigbru	D-3
D.1.1 Authorization to login as root on a remote system	D-3
D.1.2 Authorization to use a remote tape drive or remote disk drive	D-3
D.1.3 Archive device and media configuration for sigbru	D-4
D.2 Starting sigbru	D-6
D.3 The sigbru Menu	D-9
D.4 Making System Backups for Linux Computers	D-14
D.5 Documenting Your Linux Disk Partitions	D-18
D.5.1 Running df	D-18
D.5.2 Running fdisk	D-19
D.6 Documenting Your Basic Network Configuration	D-20
D.7 Selected File Restore Functions	D-21
D.8 Linux Disk Restore Functions	D-23
D.8.1 Disk Restore Overview	D-23
D.8.2 Step 1: Basic Linux Installation into a Mini-Root Partition	D-24
D.8.3 Step 2: Restore the sigbru backup to main partition	D-26
D.8.4 Step 3: Configuring to boot from the main or mini partitions	D-31
D.9 Test IRIS and Backup Your Restored System	D-36
D.10 Disk Crash After Mini-Root is Installed	D-36
D.11 sigbru -auto: Auto Archive Features	D-37
E. Upgrading RedHat Linux	E-1
E.1 Before you start	E-1
E.1.1 Special instructions for RxNet7's	E-1
E.1.2 Checking your bootable partitions	E-1
E.2 Backing up important files	E-1
E.3 Do the install	E-2
E.4 Restoring from backup	E-2
E.5 Special files	E-2
E.6 IRIS Special files	E-2
F. Installing IRIS/Web Server	F-1
F.1 Installing IRIS/Web code	F-1
F.2 Installing the tomcat rpms	F-1
F.3 Configuring Java	F-1
F.4 Configuring Apache	F-2
F.5 Testing Apache	F-2
F.6 Configuring Tomcat4	F-2
F.7 Testing Tomcat	F-3
F.8 Configuring the default page	F-3
F.9 Testing	F-4

F.10 Comments about browsers	F-4
Index	Index-1

Figures

Figure 1–1:	Sample /etc/hosts.equiv File	1–8
Figure 2–1:	Sample .profile File	2–1
Figure A–1:	RedHat Greeting	A–4
Figure A–2:	RedHat Greeting	A–7
Figure A–3:	Language Selection	A–7
Figure A–4:	Keyboard Selection	A–8
Figure A–5:	Networking	A–8
Figure A–6:	Rescue	A–8
Figure A–7:	Rescue Command Shell	A–9
Figure A–8:	Rescue Command Shell	A–13
Figure A–9:	RedHat Greeting	A–14
Figure A–10:	Red Hat Enterprise Linux ES	A–14
Figure A–11:	Language Selection	A–15
Figure A–12:	Keyboard Selection	A–15
Figure A–13:	Mouse Selection	A–16
Figure A–14:	Disk Partitioning Setup	A–16
Figure A–15:	Format as Swap?	A–17
Figure A–16:	Partitioning (we are really editing)	A–17
Figure A–17:	Add Partition (we are really editing)	A–18
Figure A–18:	Add Partition Step 2	A–18
Figure A–19:	Add Partition Step 3	A–18
Figure A–20:	Operational LInux Partitioning	A–19
Figure A–21:	Format Warning	A–19
Figure A–22:	Boot Loader Configuration	A–20
Figure A–23:	Boot Loader Configuration (Step 2)	A–20
Figure A–24:	Boot Loader Configuration (Step 3)	A–20
Figure A–25:	Boot Loader Configuration (Step 4)	A–21
Figure A–26:	Network Configuration for eth0	A–21
Figure A–27:	Miscellaneous Network Settings	A–21
Figure A–28:	Hostname	A–22
Figure A–29:	Firewall Configuration	A–22
Figure A–30:	Language Support	A–23
Figure A–31:	Time Zone Selection	A–23
Figure A–32:	Root Password	A–24
Figure A–33:	Workstation Defaults	A–24
Figure A–34:	Package Group Selection	A–25
Figure A–35:	Installation to begin	A–25
Figure A–36:	Video Card Configuration	A–26
Figure A–37:	Monitor Configuration	A–26
Figure A–38:	Screen “X Customization”	A–27

Figure A-39: RedHat Greeting	A-28
Figure A-40: Red Hat Enterprise Linux ES	A-29
Figure A-41: Language Selection	A-29
Figure A-42: Keyboard Selection	A-30
Figure A-43: Mouse Selection	A-30
Figure A-44: Disk Partitioning Setup	A-31
Figure A-45: Partitioning (we are really editing)	A-31
Figure A-46: Add Partition (we are really editing)	A-32
Figure A-47: Add Partition Step 2	A-32
Figure A-48: Add Partition Step 3	A-32
Figure A-49: Partitioning	A-33
Figure A-50: Boot Loader Configuration	A-33
Figure A-51: Network Configuration for eth0 (and eth1 if available)	A-34
Figure A-52: Miscellaneous Network Settings	A-34
Figure A-53: Hostname	A-34
Figure A-54: Firewall Configuration	A-35
Figure A-55: Language Support	A-35
Figure A-56: Time Zone Selection	A-36
Figure A-57: Root Password	A-36
Figure A-58: Workstation Defaults	A-37
Figure A-59: Package Group Selection	A-37
Figure A-60: Installation to begin	A-38
Figure A-61: chkdisk	A-51
Figure A-62: Convert NTFS partition (c:) to FAT32	A-51
Figure A-63: Resize Partition	A-52

Tables

Table 2-1: UNIX Commands	2-5
--------------------------------	-----