

Index

A

Anchor point, IRIS directory structure, 1–3
Automatic Startup, 1–16 , A–42

B

Backup. *See* Sigbru
Backup procedure, 1–50
 HP-UX, 2–9
 Linux, 2–12

C

CDE, front panel configuration, 2–6
Checkup_iris command, 3–1

D

DAT drive. *See* Sigbru
Df command, 2–4
Directory structure
 anchor point, 1–3
 data directories, 1–4
Disk, space requirements, 1–3
DSP, calibration procedure, 1–50
DVD. *See* Sigbru

E

EMACS, installing, 1–26
Environment variable, data directories, 1–4

F

File, ownership and mode, 1–29
 checking and changing, 2–4
Framebuffer Method, A–47 , A–49

G

GNU EMACS, installing, 1–26

H

hosts.equiv file, 1–8

I

in-use bits, 3–4
Inetd, linux configuring, 1–13
Install utility, options, 1–24
IRIS_INGEST , environment variable, 1–4
IRIS_LOG, environment variable, 1–4
IRIS_OBSERVERS, environment variable,
 1–11
IRIS_OPERATORS, environment variable,
 1–11
IRIS_PRODUCT, environment variable, 1–4
IRIS_PRODUCT_RAW, environment vari-
 able, 1–4
IRIS_TAPE_INV, environment variable, 1–4
IRIS_TEMP, environment variable, 1–4

L

Library, installation option, 1–27
Login
 logout, 1–32
 operator, 1–30
 poweroff, 1–32
 procedure, 1–30
 root, 1–31

N

Ntp, 1–12

O

Object module, installation option, 1–27
Observer, user account, 1–3
Operating system, minimum version require-
 ments, 1–1
Operator
 list of valid operators, 1–11

user account, 1–3

P

Passwords, 1–30

Postscript Setup menu, C–4

- image color, C–5

- image position, C–5

- printing options, C–5

- image size, C–5

- paper orientation, C–5

- paper size, C–5

- printer queue, C–4

Power off, 1–32

Printer Options, configuring

- image color, C–5

- image position, C–5

- image size, C–5

- paper orientation, C–5

- paper size, C–5

- Postscript Setup menu, C–4

- printer queue, C–4

Printer Queue, Postscript Setup menu, C–4

Printers, C–1

- configuring for IRIS, C–1

- listing with `lpstat`, C–3

- local print queues, C–1

- network print queues, C–2

- remote print queues, C–3

Printing Options, Postscript Setup menu, C–5

Profile file, 1–10

- template, B–1

Ps_iris command, 3–2

R

RCP8 setup summary, 1–36

redhat-config utilities, 2–13

Remote node, installation option, 1–25

Restart_iris command, 3–3

Restore. *See* Sigbru

.rhosts file, 1–8

RVP8 setup summary, 1–37

S

SCSI interface, pass-through driver installation, 1–15

Serial line setup, 1–9

Show_iris command, 3–4

Show_machine_code command, 1–7

Sigbru utility, D–1

- DAT. *See* Sigbru

- devices. *See* Sigbru

- DVD. *See* Sigbru

- HDD. *See* Sigbru

sigmet_env Command, 3–1

sigmet_env, 1–7

Softplane, softplane.conf, 1–39

Software

- configuration

 - introduction, 1–35

 - softplane.conf, 1–39

 - utilities, 1–35

- installation

 - automatic startup, A–48

 - FPGA "flash", 1–33

 - from RDA CDROM, A–47 , A–48

 - reboot test, 1–34

- login, 1–30

- upgrade, download files, 1–20

- version, 1–18

Source code, installation option, 1–27

Structmap command, 3–6

su, 1–31

T

Tape drive. *See* Sigbru

Testing IRIS installation, 1–50

Time & Date, Linux, 2–12

U

User accounts, 1–3

X

X-Window , IRIS startup, 2–9