

Index

A

AGC
 decay code, 8–12
 status display, 3–8
Age, field, 4–8
Air flow
 field, 2–8
 low pressure status, 8–31
Angle, sync mode, 8–13
Antenna
 computer mode, 2–8
 configuration overview, 1–4
 control, 2–1
 control master reset, 8–29
 gain, 8–10
 height, latitude, & longitude, 8–24
 IRIS mode, 2–8
 local mode, 2–8
 local mode status, 8–32
 min/max elevation, 8–25
 position for moving platforms, 8–24
 position mode, 2–4
 repositioning moving speed, 8–52
 shutdown, qant command, 2–10
 Sun Tracking mode, 2–4 , 2–14
 testing, 1–5 , 2–13 , 4–1
 velocity mode, 2–4
AntExport, 9–1
Archive, output device, 8–74
 DVD, 8–75
 large disk archive (LDA), 8–75
 MO disk, 8–75
 tape, 8–75
Ascope utility, 3–1
 recording data, 3–22
Atmospheric attenuation. *See* Gaseous
 attenuation constant
Attenuation, correction, 8–56
Attenuator code, 8–18
Automatic gain control. *See* AGC

Azimuth
 initial mode for axis, 8–25
 min/max velocity, 8–25
 position indicator, 2–4

B

Beamwidth, 8–10
BITE
 address field, 4–11 , 4–13
 configuration menu, 4–7
Broadcast, IP address, 8–20
Byte count packet, 4–8

C

Cache, read size, 8–60
Calibration
 log receiver, 11–3
 overview, 1–7
 reflectivity
 automatic, 10–16
 manual, 10–14
 zauto7 utility, 10–1
 signal generator, 10–18
Centroid value signal, 8–64
Clutter, correction, 8–55
Clutter-to-signal ratio. *See* CSR threshold
 level
Coherency relationships, 3–37
Color
 conversion for Link output, 8–77
 example values, 5–11
 legend format, 5–7
 palette configuration, 5–10
 saturation, 5–6
 scale select, 5–5 , 5–6
 seam values, 5–7
 set configuration, 5–8
 special configuration, 5–10
 threshold, 5–6
Compression, for network output, 8–72
Config, pull-down menu
 change color set, 5–3
 set special colors, 5–3
Continuous, Wave button, 2–7

Control
 bit, definitions, 8–28
 panel, 2–6
CSR, threshold, 3–13
Customize
 Bitex menu, 4–7
 command, 4–6

D

Data
 truncation height, 8–49
 width, 8–12
DEFAULT.ASCOPE, output file, 3–21
Delete, command, 5–6
Device file, 8–4
Digital, signal simulator, testing with, 3–32
Doppler
 mean velocity, sign check, 3–38
 threshold. *See* SQI threshold
 velocity spectrum plot, 3–18
DSP
 I and Q gain and offset pots, fine
 adjustment, 3–36
 I, Q, LOG gain and offset pots, coarse
 adjustment, 3–34
 parameter computations, 8–49
DspExport, 9–1
Dual-PRF, delay, 8–12

E

Elevation
 initial mode for axis, 8–25
 min/max for antenna, 8–25
 position indicator, 2–4
 soft limits, 2–5
Error
 count field, 2–11
 field, 2–5
 permissible during scans, 8–52
 response to fatal, 8–39
 time, 2–11
Example
 color values, 5–11

open command, 5–3

F

FCAST, maximum time difference, 8–63

G

Gain control, fixed, 3–8
Gaseous attenuation constant, 8–12

H

Hardware name, 8–47
Header, format for extended, 8–50
Help, viewing online documentation, 1–12
Hex ID number field, 4–8

I

I gain and offset pots
 coarse adjustment, 3–34
 fine adjustment, 3–36
I/O
 field, 4–8
 summary menu, 2–10
IAGC, 8–17
Image
 sizing/positioning for Link output, 8–76
 sizing/positioning for Window output, 8–69

Increment, field, 2–6
Inertial Navigation Unit. *See* INU
Ingest

 data source, 8–48
 file space allocation, 8–41

Input
 count field, 2–11
 devices, 8–35

Interface type, 8–4
Interference detection, during noise samples,
 8–54

Interlock, safety status, 8–32

Interlock, field, 2–8

INU, height offset for moving platforms,
 8–25

Inverted velocity, 8–12

IQ Hysteresis feedback, 8–18
IQRMS field, field, A/D C, 3–15
IRIS
 max number of clients, 8–39
 style, 8–47

L

Latitude/longitude, values for antenna, 8–24
LDR, offset, 8–6
Levels command, 5–5
License, features and products, 8–46
Linear
 channel, A/D plots vs. range, 3–18
 receiver, dynamic range check , 3–36
Link, output device, 8–76
Listing file, 8–3
LOG
 channel, A/D plots vs. range, 3–18
 receiver
 calibration, 11–3
 gain and offset pots, coarse adjustment,
 3–34

M

Magnetron
 current status, 8–32
 field, 2–8
Map, outlines, overlay file, 7–12
Memory, mapped I/O, 8–38
Menu, format, 2–3 , 4–3
 control panel, 2–6
 status panel, 2–8
Movie, length for Window output, 8–69

N

Network
 file/filename format, 8–70
 files queued for send, 8–63
 signal warnings, 8–40
 status reports, 8–32
New command, 5–6
Noise
 generator control, 8–29

PRF for sample, 8–8
sampling, 8–53
source button, 2–7
toggle period, 8–27

O

Options, pull-down menu
 I/O summary command, 2–10
 stable platform parameters, 2–10
 time set, 2–10
Other-Product, file space allocation, 8–41
Output
 bin pattern pulsewidth, 8–15
 count field, 2–11
 devices
 general specifications, 8–67
 port number/name, 8–74
Overlay file
 creating, 7–20
 example, 7–16
 format, 7–10
 GIF underlay , 7–13
 header statements, 7–10
 listing and printing, 7–7
 map outline statements, 7–12
 naming convention, 7–7
 text statements, 7–11
 underlay statements, 7–13
 viewing, 7–8

P

Panel, fields, 4–3
Passive IRIS, 8–50
Plot
 linear channel A/D vs. range, 3–18
 LOG channel A/D vs. range, 3–18
 time series, 3–20
Polarization
 control in RCP, 8–27
 enabling in ingest, 8–5
 enabling in product generator, 8–60
 status for antenna controller, 8–27
Position
 actual, 2–5

- mode, 2–4
- requested, 2–5
- Power spectrum window, 8–12
- Pressure, field, 2–8
- PRF, 8–8
- Printer, output device, 8–68
- Printer options, output device type, 8–67
- Priority
 - IRIS processes, 8–43
 - product scheduling, 8–64
 - transmit and receive processes, 8–23
- Processor type, 8–4
- Product
 - generation status, 8–62
 - made from partial Ingest scans, 8–59
 - receive status timeout, 8–62
 - scheduling priority, 8–64
- PROJECTION statement, overlay file, 7–10
- Pulse width change, during noise samples,
8–54
- Pulsewidth
 - control in RCP, 8–27
 - number of, 8–8
 - status for antenna controller, 8–27
 - status/control, 2–9
 - value, 8–15
 - wait time for change, 8–8

Q

- qant command, 2–10

R

- Radar, site ground height, 8–24
- Radar Control Processor, 8–21
- Radar Video Processor, 8–4
- Radiate
 - button, 2–7
 - toggle period, 8–26
- Range, mask spacing, 8–15
- Raw-Product, file space allocation, 8–41
- RCP
 - external mode change, 8–39
 - status field, 2–9 , 2–11

- reset button, 2–9
- shutdown status, 8–31
- testing, 4–1
- RCP8
 - network interface, 9–1
 - serial interface, 9–13
- Receiver
 - format for RCP, 8–22
 - losses, 8–10
 - primary/auxiliary channel name, 8–23
- Reference height, 8–60
- Repair, setup errors, 8–3
- Reports, network status, 8–32
- RHI, elevation speedup ration, 8–51
- RST, reporting modes, 8–33
- Running utilities, 1–8
 - utils menu, 1–9

S

- Safety interlock, status, 8–32
- SAMPLE.RES, overlay file, 7–16
- Saturation, color, 5–6
- Scanning, options, 8–50
- Sensitivity Time Control. *See* STC
- Servo power
 - button, 2–7
 - control, 8–28
 - status, 8–30
- Set time button, 2–12
- Setup
 - command line option, 4–2
 - listing file, 8–3
- Shipboard systems, 2–16
- show_machine_code command, 8–47
- Siggen
 - calibration file, 10–18
 - continuous wave control, 8–29
 - continuous wave status, 8–30
- Signal, network warnings, 8–40
- Signal generator, button, 2–7
- Signal generator
 - control, 8–29
 - power output, 8–27
 - status, 8–30

Signal processor
 options, 8–12
 overview, 1–6
Site
 name, 8–47
 name/code, 8–45
 number for AWS, 8–77
Socket, external mode change, 8–39
Speech, output for message types, 8–40
SQI, threshold, 3–13
Stable platform, 2–16
Status
 bit, definitions, 8–30
 field, 2–5
Status product, external mode change, 8–39
STC, gain control, 8–17
 status display, 3–8
Stop
 button, 2–4
 light, 2–4
Sun Tracking
 button, 2–5
 mode, 2–4 , 2–14
System time, 8–38

T

T/R
 computer mode, 2–8
 IRIS mode, 2–8
 local mode, 2–8
 local mode status, 8–32
 power control, 8–28
 power field, 2–6
 power status, 8–30
Tag lines, type of angle syncing, 8–49
Test signal, losses, 8–10
Testing
 Digital Signal Simulator, 3–32
 safeguards, 2–13
Threshold, color, 5–6
Time
 coasting between tasks, 8–52
 elapsed since last report, 2–11
 error, 2–11

 of last report, 2–11
 reset, 2–12
 series at selected range plot, 3–20
 update field, 2–11
 warmup & settle for signal generator, 8–27
Time zone, 8–38
Timezone, in time packets, 8–23
TRACK, maximum time difference, 8–63
Transmitter
 format to RCP, 8–22
 power loss, 8–10
 pulsewidth power, 8–16
 radiation control, 8–28
 radiation status, 8–30
 standby status, 8–32
 warm-up, idle time, 8–55
 wavelength, 8–8

U

UDP, port number, 8–20
Underlay, defining in overlay file, 7–13
Units, number of field, 4–8
Unrecognized site code, 8–45

V

Velocity
 actual, 2–5
 fallspeed correction, 8–58
 mode, 2–4
 requested, 2–5
 sign, 8–12
 unfolding, 8–57

W

WARN
 centroid value signal, 8–64
 maximum time difference, 8–63
Warning
 disable field, 4–12
 flag field, 4–12
 regions, 8–65
Waveguide pressure
 status, 8–31

status indicator, 2–8
Wavelength transmission, 8–8
Web, setups, 8–78
Window
output device, 8–69
password, 8–47
power spectrum, 8–12

Window alerts, 8–44

Z

Z/R relationship, 8–59
Zauto7 utility, 10–1
zcalib.conf, config file, 10–13
ZDR, offset, 8–6