

# Table of Contents

|                                                             |            |
|-------------------------------------------------------------|------------|
| <b>Preface .....</b>                                        | <b>v</b>   |
| <b>1. Introduction to IRIS .....</b>                        | <b>1-1</b> |
| 1.1 Types of IRIS Systems .....                             | 1-2        |
| 1.2 IRIS Hardware .....                                     | 1-3        |
| 1.2.1 Workstation .....                                     | 1-3        |
| 1.2.2 Signal Processor .....                                | 1-3        |
| 1.2.3 Radar Control Processor .....                         | 1-3        |
| 1.2.4 Color Printer and Output File Formats .....           | 1-5        |
| 1.2.5 Tape Drive or Optical Storage .....                   | 1-6        |
| 1.3 IRIS Architecture .....                                 | 1-7        |
| 1.4 IRIS Menus .....                                        | 1-11       |
| 1.4.1 Starting IRIS Client (Menus) .....                    | 1-12       |
| 1.4.2 To exit from the IRIS menus .....                     | 1-12       |
| 1.5 IRIS Quick Look Windows .....                           | 1-14       |
| 1.6 Starting the IRIS Client/Server Model .....             | 1-15       |
| 1.6.1 Booting the Host Computer .....                       | 1-15       |
| 1.6.2 Logging on to the Host Computer .....                 | 1-16       |
| 1.6.3 Starting the IRIS Host .....                          | 1-16       |
| 1.6.4 Shutting Down the IRIS Host .....                     | 1-17       |
| <b>2. Running IRIS Menus .....</b>                          | <b>2-1</b> |
| 2.1 Customizing the List of Servers .....                   | 2-2        |
| 2.2 Connecting and Disconnecting Servers .....              | 2-4        |
| 2.3 Moving Among the IRIS Menus .....                       | 2-5        |
| 2.4 IRIS Menu Conventions .....                             | 2-6        |
| 2.4.1 Menu Title .....                                      | 2-6        |
| 2.4.2 Common IRIS Menu Commands .....                       | 2-6        |
| 2.4.3 Entering Information in Menus .....                   | 2-7        |
| 2.5 Using the Audio Setup .....                             | 2-9        |
| 2.6 Help and the Manuals Menu .....                         | 2-12       |
| 2.6.1 Moving Around in the Document .....                   | 2-13       |
| 2.6.2 Searching for Information .....                       | 2-14       |
| 2.6.3 Printing Online Documentation .....                   | 2-14       |
| 2.6.4 Accessing Other SIGMET Online Books .....             | 2-14       |
| 2.6.5 Getting Additional Help on Adobe Acrobat Reader ..... | 2-14       |
| <b>3. Using IRISnet .....</b>                               | <b>3-1</b> |
| 3.1 Starting IRISnet .....                                  | 3-2        |
| 3.2 Interpreting the IRISnet Status .....                   | 3-3        |

|                                                             |            |
|-------------------------------------------------------------|------------|
| 3.3 Using IRISnet to Launch Remote IRIS Applications .....  | 3-5        |
| 3.4 Drawing the IRISnet Diagram .....                       | 3-9        |
| 3.5 IRISnet Options->Config .....                           | 3-13       |
| <b>4. Radar Status Menu .....</b>                           | <b>4-1</b> |
| 4.1 Radar Status Menu .....                                 | 4-2        |
| 4.1.1 Control Section .....                                 | 4-3        |
| 4.1.2 Subsystem Status .....                                | 4-8        |
| 4.1.3 Antenna/Transmitter Status .....                      | 4-9        |
| 4.2 Running IRIS from the Radar Status Menu .....           | 4-12       |
| 4.3 Mode Switching in IRIS .....                            | 4-13       |
| 4.3.1 Manual Mode Switching .....                           | 4-13       |
| 4.3.2 RCP Mode Switching .....                              | 4-13       |
| 4.3.3 Socket Mode Switching .....                           | 4-13       |
| 4.3.4 Status Product Mode Switching .....                   | 4-13       |
| 4.3.5 Automatic Mode Switching .....                        | 4-13       |
| 4.3.6 Automatic Mode Switching Button .....                 | 4-14       |
| 4.4 Switching IRIS Configurations Automatically .....       | 4-14       |
| <b>5. Handling Errors .....</b>                             | <b>5-1</b> |
| 5.1 IRIS Message Popup .....                                | 5-2        |
| 5.2 Message List Menu .....                                 | 5-3        |
| 5.3 Fixing Common Problems .....                            | 5-5        |
| 5.3.1 Making Display Windows Appear .....                   | 5-5        |
| <b>6. Configuring Radar TASKS .....</b>                     | <b>6-1</b> |
| 6.1 TASK Configuration Menu .....                           | 6-2        |
| 6.1.1 TASK Names and Descriptions .....                     | 6-3        |
| 6.1.2 Antenna/Radar Control .....                           | 6-4        |
| 6.1.3 Processor Configuration .....                         | 6-8        |
| 6.1.4 Data Corrections .....                                | 6-13       |
| 6.1.5 Data Quality Thresholding .....                       | 6-14       |
| 6.2 Obtaining High Quality Data .....                       | 6-18       |
| 6.2.1 Optimizing thresholds .....                           | 6-18       |
| 6.2.2 Compromising samples, antenna speed and PRF .....     | 6-19       |
| <b>7. Scheduling Radar TASKS .....</b>                      | <b>7-1</b> |
| 7.1 TASK Scheduler Menu .....                               | 7-2        |
| 7.2 Adding, Editing, and Removing TASKS in a Schedule ..... | 7-6        |
| 7.3 Running and Stopping a TASK .....                       | 7-7        |
| 7.4 Scheduling Automatic TASKS .....                        | 7-8        |
| 7.5 Scheduling and Running Manual Scans .....               | 7-10       |
| 7.6 Passive IRIS .....                                      | 7-11       |

|                                                              |                |
|--------------------------------------------------------------|----------------|
| <b>8. Real Time Display .....</b>                            | <b>8-1</b>     |
| 8.1 Real Time Display Menu Features .....                    | 8-2            |
| 8.2 Configuring the Real Time Display Transmitter .....      | 8-8            |
| <b>9. Products and Displays at IRIS Radar .....</b>          | <b>9-1</b>     |
| 9.1 Configuring products .....                               | 9-1            |
| 9.2 Scheduling products .....                                | 9-2            |
| 9.3 Quick Look Window to view products .....                 | 9-3            |
| <b>A. Glossary of Terms and Abbreviations .....</b>          | <b>A-1</b>     |
| <b>B. Task Configuration Example .....</b>                   | <b>B-1</b>     |
| B.1 Summary of Configuration Examples .....                  | B-2            |
| B.2 Setting Up the Weather MONITOR Mode .....                | B-4            |
| <b>C. Passive IRIS Features .....</b>                        | <b>C-1</b>     |
| C.1 Overview .....                                           | C-1            |
| C.2 Passive IRIS Hardware Configurations .....               | C-1            |
| C.3 Passive IRIS Configuration in setup .....                | C-3            |
| C.4 TASK Configuration, Scheduling and Synchronization ..... | C-4            |
| C.5 Testing Passive IRIS .....                               | C-5            |
| <b>Index .....</b>                                           | <b>Index-1</b> |

## Figures

|                                                         |      |
|---------------------------------------------------------|------|
| Figure 1–1: Example of IRIS Configuration .....         | 1–4  |
| Figure 1–2: Schematic of Network IRIS Connections ..... | 1–5  |
| Figure 1–3: IRIS Processes .....                        | 1–7  |
| Figure 1–4: IRIS Menus in the IRIS Architecture .....   | 1–13 |
| Figure 1–5: IRIS Display Window .....                   | 1–14 |
| Figure B–1: SURVEILLANCE TASK Configuration .....       | B–5  |
| Figure B–2: PPI_VOL TASK Configuration .....            | B–6  |
| Figure B–3: RHI TASK Configuration .....                | B–7  |
| Figure B–4: MONITOR TASK Schedule .....                 | B–8  |
| Figure B–5: MONITOR Mode Radar Status Menu .....        | B–9  |
| Figure C–1: Passive IRIS Examples .....                 | C–2  |

## Tables

|                                                     |      |
|-----------------------------------------------------|------|
| Table 1–1: Access to IRIS Menus .....               | 1–11 |
| Table B–1: MONITOR MENUS .....                      | B–2  |
| Table B–2: MONITOR TASKS .....                      | B–2  |
| Table B–3: MONITOR Products .....                   | B–2  |
| Table B–4: TD_RWY_09 Menu Configuration Names ..... | B–3  |
| Table B–5: TD_RWY_09 TASKS .....                    | B–3  |
| Table B–6: TD_RWY_09 MONITOR Products .....         | B–3  |