

# Table of Contents

|   |            |
|---|------------|
| <b>Preface .....</b>  | <b>vii</b> |
| <b>1. Installation .....</b>  | <b>1-1</b> |
| 1.1 Before You Start .....  | 1-1        |
| 1.2 Mount the CD .....  | 1-2        |
| 1.3 New Software Installation .....                                 | 1-3        |
| 1.3.1 Preparing for a New Software Installation .....               | 1-3        |
| 1.3.2 Performing a New Software Installation .....                  | 1-4        |
| 1.3.3 Copy SIGMET environment files into /home/operator .....       | 1-6        |
| 1.3.4 Run setup utility .....                                       | 1-6        |
| 1.3.5 Get your SIGMET license (IRIS or TS Archive systems ONLY) ... | 1-7        |
| 1.3.6 Run sigmet_env .....  | 1-7        |
| 1.4 Initial Configuration .....                                     | 1-8        |
| 1.4.1 Setting up for rcp and other “r” commands .....               | 1-8        |
| 1.4.2 Setting up for scp and other ssh commands .....               | 1-8        |
| 1.4.3 Serial Line Setup .....                                       | 1-9        |
| 1.4.4 Create mount point for MO disks .....                         | 1-9        |
| 1.4.5 Installation Security Issues .....                            | 1-9        |
| 1.4.6 Startup profile File .....                                    | 1-10       |
| 1.4.6.1 How to Create and Modify the profile File .....             | 1-10       |
| 1.4.6.2 Operator list Defined in the Startup File .....             | 1-11       |
| 1.4.7 Do platform dependent configuration .....                     | 1-11       |
| 1.5 Configuring Linux for the first time .....                      | 1-12       |
| 1.5.1 Automatic startup of X and Default SIGMET Environment .....   | 1-12       |
| 1.5.2 Configuring the root prompt .....                             | 1-12       |
| 1.6 Configuring HP-UX .....   | 1-13       |
| 1.6.1 Create the SCSI Pass-Through Driver for the RVP .....         | 1-13       |
| 1.6.2 Configuring for Automatic Startup .....                       | 1-14       |
| 1.6.3 Create link for libXmu.sl .....                               | 1-14       |
| 1.6.4 Check patches .....   | 1-15       |
| 1.6.5 Check kernel parameters .....                                 | 1-15       |
| 1.6.6 Enable windows on the local host .....                        | 1-15       |
| 1.6.7 Disabling the Distributed Printer Services .....              | 1-15       |
| 1.7 Upgrade Installation .....                                      | 1-16       |
| 1.7.1 Preparing for an Upgrade Installation .....                   | 1-16       |
| 1.7.2 When should I upgrade? .....                                  | 1-16       |
| 1.7.3 What should I do before I upgrade? .....                      | 1-16       |
| 1.7.4 Where to get software upgrades? .....                         | 1-17       |

|           |  |            |
|-----------|--|------------|
| 1.7.5     | How should I upgrade .....                                   | 1-17       |
| 1.7.6     | Getting the network upgrade files .....                      | 1-18       |
| 1.7.7     | Performing an Upgrade Installation .....                     | 1-20       |
| 1.8       | Install Utility Window Options .....                         | 1-22       |
| 1.8.1     | “Read From” Option .....                                     | 1-23       |
| 1.8.2     | Install To Option (Including Network Installs) .....         | 1-23       |
| 1.8.3     | Manuals Option .....   | 1-24       |
| 1.8.4     | EMACS Text Editor Option .....                               | 1-24       |
| 1.8.5     | Headers, Source, and Objects .....                           | 1-25       |
| 1.8.6     | Product Example file option .....                            | 1-25       |
| 1.8.7     | Verbose Option .....   | 1-26       |
| 1.8.8     | Keep Old Files Option .....                                  | 1-26       |
| 1.9       | Troubleshooting .....  | 1-27       |
| 1.9.1     | File Ownership and Protection .....                          | 1-27       |
| 1.9.2     | Authorizing remote X-Windows on Your Node .....              | 1-27       |
| 1.10      | Basics of Login, Logout and Shutdown .....                   | 1-28       |
| 1.10.1    | Power up procedure .....                                     | 1-28       |
| 1.10.2    | Local and remote login .....                                 | 1-28       |
| 1.10.3    | Default operator and root login passwords .....              | 1-28       |
| 1.10.4    | Login procedure .....  | 1-28       |
| 1.10.5    | Logout procedure .....                                       | 1-30       |
| 1.10.6    | Poweroff shutdown procedure .....                            | 1-30       |
| 1.11      | RVP8 & RCP8 (RDA) Software Installation .....                | 1-31       |
| 1.11.1    | Install the upgraded kernal module .....                     | 1-31       |
| 1.11.2    | Installation steps to “flash” FPGA’s in SIGMET devices ..... | 1-31       |
| 1.11.3    | Reboot power-up check and RDA diagnostics .....              | 1-32       |
| 1.12      | RDA Software Configuration .....                             | 1-33       |
| 1.12.1    | RCP8 Setup Configuration Summary .....                       | 1-34       |
| 1.12.2    | RVP8 Setup Configuration Summary .....                       | 1-35       |
| 1.12.3    | Configuring the softplane.conf file .....                    | 1-37       |
| 1.13      | Testing, Backup, and Calibration .....                       | 1-48       |
| 1.13.1    | Ascope Test (RVP8 Installations ONLY) .....                  | 1-48       |
| 1.13.2    | Antenna Test (RCP Installations ONLY) .....                  | 1-48       |
| 1.13.3    | IRIS Test (IRIS systems ONLY) .....                          | 1-48       |
| 1.13.4    | Print Special Files .....                                    | 1-48       |
| 1.13.5    | Make a Full Backup .....                                     | 1-48       |
| 1.13.6    | DSP Calibration (RVP Installations ONLY) .....               | 1-48       |
| <b>2.</b> | <b>UNIX Survival Skills .....</b>                            | <b>2-1</b> |
| 2.1       | Setting up the Login Environment .....                       | 2-1        |
| 2.2       | Running IRIS Utilities from a Remote Node .....              | 2-2        |
| 2.3       | Managing an IRIS System .....                                | 2-3        |

|           |  |            |
|-----------|--|------------|
| 2.3.1     | Checking the IRIS Environment .....                      | 2-3        |
| 2.3.2     | Reporting the Free Blocks on a Disk .....                | 2-4        |
| 2.3.3     | File Ownership and Protection .....                      | 2-4        |
| 2.4       | Command Summary .....                                    | 2-5        |
| 2.5       | CDE Front Panel Configuration .....                      | 2-6        |
| 2.5.1     | Installing the IRIS Utilities Icon .....                 | 2-6        |
| 2.5.2     | Installing the Utilities List .....                      | 2-6        |
| 2.5.3     | Getting the icons to display .....                       | 2-7        |
| 2.6       | Automatic Windows Startup .....                          | 2-9        |
| 2.7       | HP-UX Issues .....                                       | 2-9        |
| 2.7.1     | Backup Procedure .....                                   | 2-9        |
| 2.7.1.1   | Backing up .....   | 2-9        |
| 2.7.1.2   | Restoring .....  | 2-9        |
| 2.7.2     | Controlling banner page printing .....                   | 2-10       |
| 2.7.3     | Configure routing to another network .....               | 2-10       |
| 2.7.4     | Booting in single user mode .....                        | 2-10       |
| 2.7.5     | Extending a logical volume .....                         | 2-10       |
| 2.7.6     | Using the floppy to read DOS disks .....                 | 2-11       |
| 2.7.7     | Fix ClearLine warning message .....                      | 2-11       |
| 2.8       | Linux Issues .....                                       | 2-12       |
| 2.8.1     | Backup Procedure .....                                   | 2-12       |
| 2.8.2     | Time & Date .....  | 2-12       |
| 2.8.3     | LINUX for experienced users of other OS's .....          | 2-12       |
| 2.8.3.1   | Unix to Linux .....                                      | 2-12       |
| 2.8.3.2   | DOS to Linux .....                                       | 2-13       |
| 2.8.3.3   | VAX/VMS to Linux .....                                   | 2-13       |
| 2.8.4     | Red Hat Configuration Utilities .....                    | 2-13       |
| <b>3.</b> | <b>IRIS Diagnostic Utilities .....</b>                   | <b>3-1</b> |
| 3.1       | sigmet_env Command .....                                 | 3-1        |
| 3.2       | ps_iris Command .....                                    | 3-2        |
| 3.3       | restart_iris Command .....                               | 3-3        |
| 3.4       | show_iris Command .....                                  | 3-4        |
| 3.5       | structmap Command .....                                  | 3-6        |
| <b>A.</b> | <b>Installing Red Hat Linux: RHEL ES Version 4 .....</b> | <b>A-1</b> |
| A.1       | Installation Overview .....                              | A-2        |
| A.1.1     | Using this Manual .....                                  | A-2        |
| A.1.2     | Types of installation media .....                        | A-2        |
| A.1.3     | Installation Preparation .....                           | A-3        |
| A.2       | Automatic Installation .....                             | A-4        |
| A.2.1     | SIGCONFIG .....  | A-4        |
| A.3       | Automatic Installation Post-Install Steps .....          | A-6        |

|           |   |            |
|-----------|---|------------|
| A.3.1     | Configuring X Windows .....   | A-6        |
| A.3.2     | Configuring your time zone .....                                    | A-6        |
| A.4       | Manual Installation .....   | A-7        |
| A.4.1     | Disk Partitioning .....   | A-7        |
| A.4.2     | Install Redhat Linux RHEL ES Version 4 .....                        | A-8        |
| A.5       | Manual Installation Post-Install Steps .....                        | A-14       |
| nA.5.1    | Disable Graphical Login .....                                       | A-14       |
| A.5.2     | Set the Root Prompt Symbol .....                                    | A-14       |
| nA.5.3    | Make a cd Mount Point .....   | A-14       |
| nA.5.4    | User Account Configuration .....                                    | A-14       |
| nA.5.5    | Configuration for Automatic Startup .....                           | A-15       |
| A.5.5.1   | Copying of Automatic Startup Programs .....                         | A-15       |
| A.5.5.2   | Enabling Startup Programs .....                                     | A-16       |
| A.5.6     | Basic Network Configuration .....                                   | A-16       |
| nA.5.7    | Service Configuration .....   | A-19       |
| A.5.8     | FTP for Red Hat Enterprise Linux (vsftpd) .....                     | A-20       |
| A.5.9     | rcp .....   | A-21       |
| A.5.10    | Routing .....   | A-22       |
| A.5.11    | Configuring NTP .....   | A-22       |
| A.5.12    | Configuring xinetd .....  | A-23       |
| A.6       | Region Specific Settings .....                                      | A-23       |
| A.7       | X-Windows Troubleshooting: Framebuffer Method .....                 | A-24       |
| A.8       | Installing Linux on Windows System (Dual Booting) .....             | A-26       |
| A.8.1     | Dual Boot Partition Example .....                                   | A-28       |
| A.9       | Special notes for notebook installations .....                      | A-28       |
| <b>B.</b> | <b>UNIX System File Listings .....</b>                              | <b>B-1</b> |
| B.1       | /usr/sigmet/config_template/profile .....                           | B-1        |
| <b>C.</b> | <b>Printer Configuration .....</b>                                  | <b>C-1</b> |
| C.1       | Configuring Printer Queues for IRIS use .....                       | C-1        |
| C.2       | Displaying Print Queues .....                                       | C-3        |
| C.3       | Configuring Printer Options .....                                   | C-4        |
| 3.5.1     | Printer Setup Menu .....  | C-4        |
| <b>D.</b> | <b>sigbru Utility .....</b>   | <b>D-1</b> |
| D.1       | System Configuration for sigbru .....                               | D-3        |
| D.1.1     | Authorization to login as root on a remote system .....             | D-3        |
| D.1.2     | Authorization to use a remote tape drive or remote disk drive ..... | D-3        |
| D.1.3     | Archive device and media configuration for sigbru .....             | D-4        |
| D.2       | Starting sigbru .....   | D-6        |
| D.3       | The sigbru Menu .....   | D-9        |
| D.4       | Making System Backups for Linux Computers .....                     | D-14       |

|  |                |
|--|----------------|
| D.5 Documenting Your Linux Disk Partitions .....                         | D-18           |
| D.5.1 Running df .....   | D-18           |
| D.5.2 Running fdisk .....  | D-19           |
| D.6 Documenting Your Basic Network Configuration .....                   | D-20           |
| D.7 Selected File Restore Functions .....                                | D-21           |
| D.8 Linux Disk Restore Functions .....                                   | D-23           |
| D.8.1 Disk Restore Overview .....  | D-23           |
| D.8.2 Step 1: Basic Linux Installation into a Mini-Root Partition .....  | D-24           |
| D.8.3 Step 2: Restore the sigbru backup to main partition .....          | D-26           |
| D.8.4 Step 3: Configuring to boot from the main or mini partitions ..... | D-31           |
| D.9 Test IRIS and Backup Your Restored System .....                      | D-36           |
| D.10 Disk Crash After Mini-Root is Installed .....                       | D-36           |
| D.11 sigbru -auto: Auto Archive Features .....                           | D-37           |
| <b>E. Upgrading RedHat Linux .....</b>                                   | <b>E-1</b>     |
| E.1 Check your disk first .....  | E-1            |
| E.2 Backing up important files .....                                     | E-1            |
| E.3 Do the OS install .....  | E-1            |
| E.4 Do the IRIS or RDA install .....                                     | E-1            |
| E.5 Restoring from backup .....  | E-1            |
| E.6 Upgrade release notes .....  | E-2            |
| E.7 Done .....   | E-2            |
| <b>F. Installing IRIS/Web Server .....</b>                               | <b>F-1</b>     |
| F.1 Removing tomcat 4.1 .....  | F-1            |
| F.2 Installing tomcat 5.0 .....  | F-1            |
| F.3 Installing IRIS/Web code .....                                       | F-1            |
| F.4 Configuring Java .....   | F-1            |
| F.5 Configuring Apache .....   | F-2            |
| F.6 Testing Apache .....   | F-2            |
| F.7 Integrating Tomcat with Apache .....                                 | F-2            |
| F.8 Testing Apache and Tomcat .....                                      | F-3            |
| F.9 Configuring the default page .....                                   | F-4            |
| F.10 Testing .....   | F-4            |
| F.11 Comments about browsers .....                                       | F-4            |
| F.12 Debugging .....   | F-4            |
| <b>Index .....</b>   | <b>Index-1</b> |

## Figures

|             |  |      |
|-------------|--|------|
| Figure 1–1: | Sample /etc/hosts.equiv File .....         | 1–8  |
| Figure 2–1: | Sample .profile File .....                 | 2–1  |
| Figure A–1: | RedHat Greeting .....                      | A–4  |
| Figure A–2: | chkdsk .....                               | A–26 |
| Figure A–3: | Convert NTFS partition (c:) to FAT32 ..... | A–26 |
| Figure A–4: | Resize Partition .....                     | A–27 |

## Tables

|            |                     |     |
|------------|---------------------|-----|
| Table 2–1: | UNIX Commands ..... | 2–5 |
|------------|---------------------|-----|