

## 9.6 License Setups

License and Site Information		Help
License #1	0001C001-050101-AHNXKJ-01-3F7CC9	
License #2	0000D3FF-050101-AHNXKJ-03-4JJJJY	
License #3		
License #4		
License #5		
License #6		
IRIS Style	Radar <input type="checkbox"/>	
Site name	SIGMET, cyclone	
Hardware name	SIGMET, cyclone	
QLW Password	*****	

- *License #1 – #6* — Use these fields to enter the software licenses you received from SIGMET.. These numerous slots can be used for entering both operational and backup licenses and IRIS will try to start with either license. Also, if you are testing new features using a temporary license from SIGMET, IRIS will automatically grant the cumulative features based on all of the licenses. Once the temporary license expires, IRIS will default to the original operational license.
- *Features license/Products license* — In the license file you receive from SIGMET, there will always be a Features and a Products license, and possibly an RDA license. These licenses can go in any of the six license fields, but SIGMET recommends using the first two fields for organizational purposes. These licenses consist of a 32-character string plus a user comment or description:

XXXXXXXX-XXXXXX-XXXXXX-XX-XXXXXX comment

The license is SIGMET's way of copy protecting the software. The license number is machine dependent. To get your license, call SIGMET with your machine code. (The machine code is displayed by typing **show\_machine\_code** at the operating system prompt.) The machine code changes when the site name is changed or a new version of the operating system is installed.

- *IRIS Style* — Enter one of the following IRIS styles to configure the menu selections and remove unneeded fields:

**Radar**     The full function IRIS/Radar system.

**Analysis**     The IRIS/Analysis and IRIS/Display systems.

- *Site name* — Enter up to 16 characters of arbitrary text that is saved with the data and placed on color displays and printouts. When the site name is changed, a new license must be obtained from SIGMET.
- *Hardware name* — Normally this is set the same as the site name above. This string is used to tell which computer is running in a dual computer system where two computers have the same IRIS site name. The hardware name is used as the site name when making status products.
- *Window password* — Enter a password of up to 15 characters. The password will not be displayed. This password must be entered by a window user to use an operator privileged feature.