

Table of Contents

Preface	vi
1. Introduction and Specifications	1-1
1.1 General Architecture	1-2
1.1.1 Mother Board or Single-Board Computer (SBC)	1-3
1.1.2 I/O-62 PCI Card and I/O Connector Panel	1-4
1.2 System Network Architecture Options	1-6
1.2.1 Case 1: Standard Serial Line Interface	1-7
1.2.2 Case 2: Combined RCP8/RCW	1-8
1.2.3 Case 3: Socket Interface Using AntExport	1-9
1.3 RCP8 Specifications	1-10
1.3.1 Antenna Control I/O and Features	1-10
1.3.2 Fail-safe Antenna Protection Features	1-10
1.3.3 Optional Shipboard Stabilization	1-11
1.3.4 Radar Status/Control I/O and Features	1-11
1.3.5 Application Software for Test/Monitoring	1-12
1.3.6 SIGMET I/O-62 PCI Card	1-13
1.3.7 RCP8 Standard Connector Panel	1-14
1.3.8 Physical and Environmental Characteristics	1-16
2. Hardware Installation	2-1
2.1 Overview and Input Power Requirements	2-1
2.2 Initial Power-Up Prior to Connecting to Radar	2-3
2.3 RCP8 Chassis	2-4
2.3.1 RCP8 Chassis Overview	2-4
2.3.2 Power Requirements, Size and Physical Mounting	2-4
2.3.3 Main Chassis Direct Connections	2-5
2.4 RCP8 Connector Panel	2-6
2.5 Host Computer Serial Interface	2-10
2.6 Socket Interface	2-11
3. TTY Menu Control and Monitoring	3-1
3.1 Starting the TTY Menus	3-2
3.2 The TTY Main Menu	3-3
3.3 The TTY Help Menu	3-4
3.3.1 TTY "Help Support" Command	3-4
3.3.2 TTY "Help View" Command	3-4
3.4 The TTY "MONITOR" Command	3-5
3.4.1 TTY Antenna Monitor and Control	3-5
3.4.1.1 Commands Recognized by the Angle Monitor	3-7

3.4.1.2	Alternate Display for Shipboard Platforms	3-7
3.4.1.3	Alternate Display of Antenna Dynamics	3-8
3.4.2	TTY Serial I/O Monitor	3-9
3.4.2.1	Commands Recognized by the Serial I/O Monitor	3-10
3.4.2.2	Alternate Displays of Raw SIO Records	3-10
3.4.3	TTY Inertial Navigation Unit Monitor	3-11
3.4.3.1	Alternate INU Monitor Presentations	3-11
3.4.4	TTY Status Line Monitor	3-12
3.4.5	TTY Control Request Monitor	3-12
3.4.6	TTY Internal LOG Monitor	3-13
3.4.7	TTY Analog Voltage Input Monitor	3-14
3.5	TTY "RESET" Command	3-14
4.	TTY Setup Menus	4-1
4.1	Using the SETUP Menus	4-2
4.2	Summary of Setup TTY Configuration Parameters	4-3
4.3	The "SAVE" and "RESTORE" Commands	4-9
4.4	The "SITE" Command	4-9
4.4.1	Front Panel Display Setups	4-9
4.4.2	Host Computer I/O Setups	4-11
4.4.3	Customer-Specific Site Setups	4-13
4.4.4	Data and Event Logging	4-19
4.4.5	Miscellaneous Site Setups	4-20
4.5	The "AXIS" Command	4-21
4.6	The "VSERVO" Command	4-29
4.7	The "PSERVO" Command	4-33
4.8	The "CONTROL" Command	4-35
4.8.1	Output Line Configuration	4-35
4.8.2	Logic Equation Control Qualifiers	4-35
4.8.3	Logic Equation Timer Variables	4-40
4.8.4	Logic Equation Examples	4-43
4.8.5	Logic Equation Configuration of Variables	4-45
4.8.6	Analog Voltage Input Control Logic Variables	4-45
4.9	The "STATUS" Command	4-46
4.10	The "INU" Command	4-47
5.	Theory of Servo Operation	5-1
5.1	Overview of Servo Concepts	5-1
5.2	Velocity Servo Theory	5-2
5.2.1	Tachometer Input	5-3
5.2.2	Nominal Drive Slope	5-3
5.2.3	Velocity Feedback Slope and Dead Zone	5-3
5.2.4	Drive and Tach Sign Correction	5-4

5.3	Position Servo Theory	5-4
5.3.1	The Position Servo Response Curve	5-5
5.4	Fail-safe Antenna Features	5-6
5.5	Modification of Servos For Use on a Moving Platform	5-11
A.	Serial Control Formats	A-1
B.	Antenna Stabilization Procedure	B-1
B.1	Shipboard INU and Pedestal Alignment	B-3
C.	RVP8/RCP8 Packaging	C-1
C.1	Main Chassis General Description	C-2
C.1.1	Main Chassis Front Panel	C-7
C.1.2	Main Chassis Back Panel	C-8
C.1.3	Main Chassis Back Panel Power Section	C-9
C.1.4	Main Chassis Back Panel PC I/O Section	C-10
C.1.5	Main Chassis Back Panel PCI Card Section	C-11
C.2	I/O-62 and Connector Panel	C-14
C.3	IFD Module (RVP8 Only)	C-30
C.4	DAFC Module (RVP8 only)	C-33
Index	Index-1

Figures

Figure 1-1:	RCP8 Architecture	1-2
Figure 1-2:	Front Panel Display	1-3
Figure 1-3:	Network Architecture- Case 1: Standard Serial Interface	1-7
Figure 1-4:	Network Architecture- Case 2: Combined RCP8/RCW	1-8
Figure 1-5:	Network Architecture- Case 3: Socket with AntExport	1-9
Figure 1-6:	Antenna and Bitex utility examples	1-12
Figure 4-1:	Digital Velocity Servo	5-2
Figure 4-2:	Digital Position Servo	5-5
Figure 4-3:	Example of the Lower EL LIMITS.	5-8
Figure 4-4:	Modification of Velocity Servos	5-12
Figure C-1:	Main Chassis- Front Panel	C-3
Figure C-2:	Main Chassis- Back Panel	C-4
Figure C-3:	Main Chassis- Right Side View	C-5
Figure C-4:	Main Chassis Internal Cabling	C-6
Figure C-5:	RVP8 I/O-62 Connector Panel	C-16
Figure C-6:	RCP8 I/O-62 Connector Panel	C-17
Figure C-7:	RVP8/IFD Module	C-31
Figure C-8:	IFD Front Panel	C-32
Figure C-9:	View of DAFC Module	C-33

Tables

Table 2-1:	Direct Connections to RCP8 Main Chassis	2-5
Table A-1:	Status Packet RCV01 Format (RCP8 to Host)	A-3
Table A-2:	Control Packet XMT01 Format (Host to RCP8)	A-4
Table A-3:	Status Packet RCV02 / RCV04 Format (RCP8 to Host)	A-5
Table A-4:	Control Packet XMT02 / XMT04 Format (Host to RCP8)	A-6
Table A-5:	Status Packet RCV03 Format (RCP8 to Host)	A-7
Table A-6:	Status Packet RCV05 Format (RCP8 to Host)	A-9
Table A-7:	Control Packet XMT05 Format (Host to RCP8)	A-10
Table A-8:	Time Packet (RCP8 to Host)	A-11
Table A-9:	Generic BITE Packet (RCP8 To/From Host)	A-11
Table A-10:	Q-BITE Status Packet (Both ways)	A-11
Table A-11:	Internal BITE Packet (RCP8 to Host)	A-13
Table A-12:	Auxiliary Status/Control BITE Packets	A-15
Table A-13:	WSR-88D DCU BITE Packet (RCP8 to Host)	A-16
Table A-14:	WSR-88D DCU Self-Test1 BITE Packet (RCP8 to Host)	A-18
Table A-15:	WSR-88D DCU Self-Test2 BITE Packet (RCP8 to Host)	A-19
Table A-16:	WSR-88D DAU BITE Packet (RCP8 to Host)	A-20
Table A-17:	WSR-88D DAU Q-BITE Packet (RCP8 to Host)	A-24
Table A-18:	BITE Interrogate Packet (Host to RCP8)	A-25

Table A-19: Q-BITE Interrogate Packet (Host to RCP8)	A-25
Table A-20: BITE Individual Request Packet (Host to RCP8)	A-25
Table A-21: Chat-Mode Packet	A-26
Table C-1: RVP8 and RCP8 I/O-62 Card Jumper Settings	C-12
Table C-2: RVP8/Rx Card Jumper Settings	C-13
Table C-3: RVP8/Tx Card Jumper Settings	C-13
Table C-4: J1 "AZ INPUT"	C-18
Table C-5: J2 "AZ OUTPUT"	C-19
Table C-6: J3 RVP8: "PHASE OUT"; RCP8 "CONTROL"	C-20
Table C-7: J4 "EL INPUT"	C-21
Table C-8: J5 "EL OUTPUT"	C-22
Table C-9: J6 "RELAY"	C-23
Table C-10: J7: RVP8 "SPARE"; RCP8 "BITE 19:0"	C-24
Table C-11: J8: RVP8 "SPARE"; RCP8 "ANALOG IN"	C-25
Table C-12: J9 RVP8: "MISC I/O" ; RCP8: "PED/STATUS"	C-26
Table C-13: J10 "SERIAL"	C-27
Table C-14: J11 "SERIAL"	C-27
Table C-15: J12 "S-D"	C-28
Table C-16: RVP8 BNC Connector Pin Assignments	C-29
Table C-17: RCP8 BNC Connector Pin Assignments	C-29