

Index

A

- A/D input, C-25
- Angle
 - S/D input, 2-9
 - TTL input, 2-7
 - TTL output, 2-7
- Angle inputs
 - active high, 4-23
 - BCD format, 4-23
 - number of bits, 4-23
 - offset, 4-23
 - parallel vs. synchro, 4-22
- Angle outputs, BCD format, 4-23
- Antenna utility, introduction, 1-12
- Antenna servo, specifications, 1-10
- Azimuth angle, C-18 , C-19 , C-28

B

- Back panel, C-8
- BITE interrogate packet, A-25
- BITE serial format, A-11 , A-13
- Bitex utility, introduction, 1-12

C

- Chassis
 - connector panel, 2-6
 - direct connections, 2-5
 - initial power-up, 2-3
 - input power, 2-1 , 2-4
 - installation, 2-4
 - keyboard, mouse, monitor, 2-5
 - specifications, 1-16
- Chat mode packet, A-26
- Co-plane scans, 5-12
- commands
 - ".", 3-5
 - ALT, 3-5
 - MAIN, 3-5

- Connector panel, 2-6
- Connector panel, C-14
 - introduction, 1-4
 - specifications, 1-14

D

- DAFC, drawings, pin out, C-33
- Dead host detection time, 4-13
- Drive output
 - offset, 4-29
 - reversing sign, 4-28

E

- Elevation, soft limits, 5-7
- Elevation angle, C-21 , C-22 , C-28
- Environment, 1-16

F

- Fail safe, features, 5-6
- Fail-safe features, 1-10
- Front panel display, 1-3
 - brightness, 4-9
 - templates, line, 4-10
 - update time, 4-9

H

- Host computer, serial interface, 2-10
- Host computer setups, data format, 4-12

I

- I/O
 - features, 1-11
 - specifications, 1-14
- I/O monitor, 3-9
 - commands, recognized, 3-10
- I/O-62
 - connector panel
 - drawings, C-14
 - pin out, C-14
 - connector panel, 2-6
 - introduction, 1-2 , 1-4
 - specifications, 1-13

IFD, drawings, C-30

Installation

hardware, 2-1

status and control, 2-7

Internal simulator, 4-21

Introduction, 1-1

INU

built-in simulation, 4-47

dead detection time, 4-47

negate signs, 4-47

offsets to input angles, 4-47

pedestal alignment, B-3

velocity extrapolation, 4-47

L

Limit switches, elevation, 5-6

Logic equations, in TTY setup, 4-35

M

Main chassis

back panel, C-8

drawings, C-2

general description, C-2

input power, C-7 , C-9

PC I/O, C-10

PCI cards, C-11

Main menu, monitor status, 3-12

Moment of Inertia, in TTY Setup, 4-26

Monitor angles command, 3-6

Monitoring antenna motion, 3-5

Motherboard, introduction, 1-3

Moving platform

corrections, A-1

servo modification, 5-11

N

Network, socket interface, 2-11

P

Position servo

configuration procedure, 4-33

hysteresis zones, 4-34

interval slopes, 4-35

position break points, 4-34

response curve, 5-5

theory, 5-4

Power requirements, 1-16 , 2-1 , 2-4 , C-7 ,
C-9

R

RCV01 serial format, A-3

RCV02 serial format, A-5

RCV03 serial format, A-7

Relays, C-23

Reliability, 1-16

S

S/D input, C-28

SBC, introduction, 1-3

Serial control formats, A-1

BITE, A-11

BITE interrogate, A-25

chat mode packet, A-26

internal BITE, A-13

RCV01 format, A-3

RCV02 format, A-5

RCV03 format, A-7

time, A-11

XMT01 format, A-4

XMT02 format, A-6

Serial interface, 2-10

Servo

moving platform, 5-11

position. *See* Position servo

theory of operation, 5-1

velocity, 5-2

See also Velocity servo

SETUP, configuring sequence, B-1

Shipboard, specifications, 1-11

Shipboard platform

alternate monitor format, 3-7

INU monitor, 3-11

Shutdown

EL limit switches, 4-20

elevation limit switches, 5-6

elevation position limit, 4-26 , 5-6

- exiting, 3–14
- Tachometer consistency check, 4–26 , 5–8
- unresponsive antenna, 4–26 , 5–9
- Shutdown limits, elevation, 5–6
- Socket interface, 2–11
- Specifications, 1–10
- Status and control, features, 1–11
- Status inputs, monitoring, 3–12
- Support software, introduction, 1–12
- Synchro angles, 2–9
- Synchro input, C–28

T

- Tachometer
 - consistency shutdown, 5–8
 - in TTY Setup, 4–24
 - offset, 4–29
 - reversing sign, 4–28
 - use in velocity servo, 5–3
 - virtual tach, 4–24
- Test point, output , 2–9
- Time serial format, A–11
- TTY menus
 - alternate monitor format, 3–7
 - antenna control commands, 3–5
 - control and monitoring, 3–1 , 3–2
 - display antenna dynamics, 3–8
 - help, 3–4
 - help support, 3–4
 - help view, 3–4
 - I/O monitor, 3–9
 - INU monitor, 3–11
 - main menu, 3–3
 - monitor, 3–5
 - overview, 3–1 , 3–2
 - RESET command, 3–14
 - status input monitoring, 3–12
- TTY setup
 - AXIS command, 4–21
 - CONTROL command, 4–35
 - INU command, 4–47
 - PSERVO command, 4–33

- RESTORE command, 4–9
- SAVE command, 4–9
- SITE command, 4–9
- STATUS command, 4–46
- summary of all commands, 4–3
- using setup menus, 4–2
- VSERVO command, 4–29

U

- Unresponsive antenna, shutdown, 5–9

V

- Velocity servo
 - configuration procedure, 4–29
 - deadzone, 5–3
 - drive filter, 4–32
 - drive slew rate limit, 4–33
 - drive slope, 5–3
 - feedback slope, 5–3
 - maximum velocity, 4–31
 - motor start drives, 4–29
 - nominal drive slopes, 4–30
 - sign correction
 - drive, 5–4
 - tach , 5–4
 - tach filter, 4–32
 - tachometer input, 5–3
 - theory, 5–2
 - velocity feedback
 - deadzone, 4–30
 - slope, 4–30
 - velocity shutdown, 4–31

X

- XMT01 serial format, A–4
- XMT02 serial format, A–6

Y

- Year, setting present year, 4–20