


# User Guide

IRIS Focus

Version 5.0

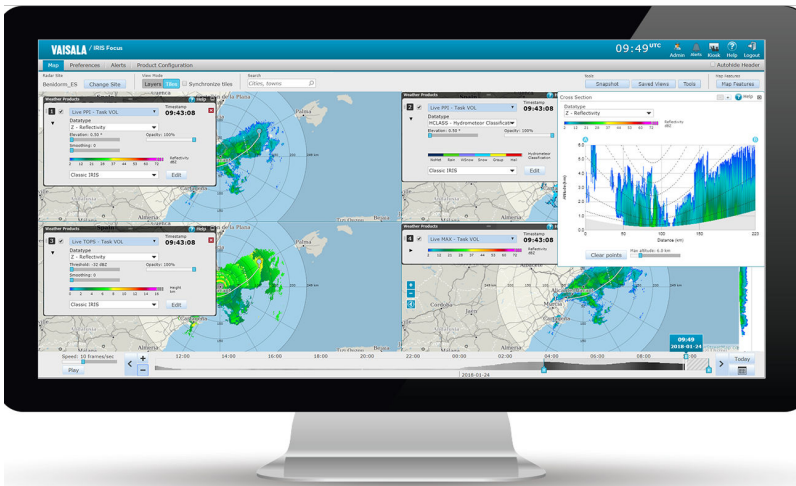

## PUBLISHED BY

Vaisala Oyj  
Vanha Nurmijärventie 21, FI-01670 Vantaa, Finland  
P.O. Box 26, FI-00421 Helsinki, Finland  
+358 9 8949 1

Visit our Internet pages at [www.vaisala.com](http://www.vaisala.com).

© Vaisala 2018

No part of this manual may be reproduced, published or publicly displayed in any form or by any means, electronic or mechanical (including photocopying), nor may its contents be modified, translated, adapted, sold or disclosed to a third party without prior written permission of the copyright holder. Translated manuals and translated portions of multilingual documents are based on the original English versions. In ambiguous cases, the English versions are applicable, not the translations.

The contents of this manual are subject to change without prior notice.

Local rules and regulations may vary and they shall take precedence over the information contained in this manual. Vaisala makes no representations on this manual's compliance with the local rules and regulations applicable at any given time, and hereby disclaims any and all responsibilities related thereto.

This manual does not create any legally binding obligations for Vaisala towards customers or end users. All legally binding

obligations and agreements are included exclusively in the applicable supply contract or the General Conditions of Sale and General Conditions of Service of Vaisala.

This product contains software developed by Vaisala or third parties. Use of the software is governed by license terms and conditions included in the applicable supply contract or, in the absence of separate license terms and conditions, by the General License Conditions of Vaisala Group.

This product may contain open source software (OSS) components. In the event this product contains OSS components, then such OSS is governed by the terms and conditions of the applicable OSS licenses, and you are bound by the terms and conditions of such licenses in connection with your use and distribution of the OSS in this product. Applicable OSS licenses are included in the product itself or provided to you on any other applicable media, depending on each individual product and the product items delivered to you.

## Table of Contents

<b>1.</b>	<b>About This Document</b> .....	7
1.1	Version Information.....	7
1.2	Related Documents.....	7
1.3	Trademarks.....	7
1.4	Documentation Conventions.....	7
<b>2.</b>	<b>IRIS Focus Overview</b> .....	9
2.1	IRIS Product Family.....	10
2.2	Licensing.....	11
<b>3.</b>	<b>Using IRIS Focus</b> .....	13
3.1	Map View.....	13
3.1.1	Map Layers.....	13
3.1.2	Editing Base Layers.....	14
3.1.3	Radar Product Layers.....	15
3.1.4	Radar Product Layer Settings.....	16
3.1.5	Map Units.....	17
3.2	Radar Sites.....	18
3.3	Animation Timeline.....	20
3.4	Map Tools.....	21
3.4.1	Cursor Tool.....	21
3.4.2	Color Scale Editor.....	21
3.4.3	Cross Section Tool.....	23
3.4.4	Ruler Tool.....	24
3.4.5	Snapshot Tool.....	25
3.4.6	Tracking Tool.....	25
3.5	Composites.....	27
3.5.1	Viewing Composites.....	28
3.5.2	IRIS Focus Composite Methods.....	29
3.6	Nowcasting.....	30
3.6.1	Calculating Nowcasting Predictions.....	32
3.6.2	Calculating Advection Products.....	33
3.7	User Preferences.....	35
3.8	Saved Views.....	36
3.9	Supported Browsers.....	37
<b>4.</b>	<b>Managing Weather Alerts and Places of Interest</b> .....	38
4.1	Alerts for Significant Weather.....	38
4.1.1	Required User Roles for Event Criteria and Places of Interest.....	39
4.2	Places and Areas of Interest.....	40
4.2.1	Drawing Areas of Interest.....	40
4.2.2	Editing Areas of Interest.....	41
4.2.3	Working with Circles.....	42
4.2.4	Working with Shapes.....	43
4.2.5	Enabling or Disabling an Area of Interest.....	44
4.2.6	Removing Areas of Interest.....	44

4.3	Event Criteria.....	45
4.3.1	Example Event Criteria.....	47
4.3.2	Configuring Event Criteria.....	47
4.4	Assigning Event Criteria to Areas of Interest.....	50
4.5	Acknowledging Weather Alerts.....	51
4.6	Example Weather Alert Symbols.....	51
4.7	Pinning Locations on the Map.....	52
4.7.1	Enabling or Disabling a Pin.....	53
4.7.2	Removing Pins.....	53
4.8	Viewing Places of Interest on the Map.....	53
4.9	Viewing Active Events and Alerts on the Map.....	54
<b>5.</b>	<b>Radar Products.....</b>	<b>56</b>
5.1	Measuring Radar Data.....	56
5.1.1	Bins, Sweeps, and Volumes.....	57
5.1.2	Radar Beam.....	57
5.1.3	Data Flow.....	59
5.1.4	Data Types.....	59
5.2	Radar Product Codes.....	61
5.3	Radar Product Colors.....	63
5.4	Radar Product Smoothing.....	64
5.5	Radar Product Reflectivity Threshold.....	64
5.6	On-demand Radar Products.....	65
5.6.1	On-demand Echo Base (BASE).....	66
5.6.2	On-demand Constant Altitude Plan Position Indicator (CAPPI).....	68
5.6.3	On-demand Maximum Data (MAX).....	72
5.6.4	On-demand Plan Position Indicator (PPI).....	76
5.6.5	On-demand Echo Thickness (THICK).....	79
5.6.6	On-demand Echo Tops (TOPS).....	81
5.7	IRIS Analysis Radar Products.....	83
5.7.1	Supported IRIS Analysis Products.....	84
5.7.2	Motion Vector Field (MVF).....	86
5.7.3	Warning/Centroid (WARN).....	90
<b>6.</b>	<b>Administration.....</b>	<b>93</b>
6.1	Managing Users.....	93
6.1.1	Users View.....	94
6.1.2	Creating User Accounts.....	95
6.1.3	Managing User Accounts.....	97
6.1.4	Removing User Accounts.....	97
6.1.5	Logged In Users View.....	97
6.1.6	Identity Configuration.....	98
6.1.7	Password Configuration View.....	99
6.1.8	Publishing Notifications to Users.....	99
6.1.9	Application Subscriptions View.....	100
6.2	Managing Organizations.....	101
6.2.1	Setting-up and Viewing Organizations.....	102

6.3	Licensing Management.....	103
6.3.1	Licensing on Server Restart.....	103
6.4	Map Management.....	104
6.4.1	Working with Map Layers.....	104
6.4.2	Map View Context.....	105
6.4.3	Adding External Map Layers.....	105
6.5	Configuring Nowcasting.....	107
6.5.1	Configuring MVF.....	107
6.6	Configuring Composites.....	109
6.6.1	Setting-up Pre-defined Composites.....	109
6.6.2	Editing Pre-defined Composites.....	110
6.6.3	Deleting Pre-defined Composites.....	110
6.6.4	Max Time Span.....	110
6.6.5	Viewing a List of IRIS Analysis Composites.....	111
6.7	Setting-up Dataflow Alerts.....	112
6.8	Viewing Dataflow Alerts.....	113
<b>Appendix A: File Locations.....</b>		<b>114</b>
<b>Appendix B: Map Layer Configuration Options.....</b>		<b>115</b>
<b>Appendix C: Nowcasting Configuration Files.....</b>		<b>116</b>
C.1.	nowcast.ini.....	116
C.2.	vsoweb-override.ini.....	118
<b>Glossary.....</b>		<b>121</b>
<b>Index.....</b>		<b>125</b>
<b>Warranty.....</b>		<b>131</b>
<b>Technical Support.....</b>		<b>131</b>
<b>Recycling.....</b>		<b>131</b>

## List of Figures

Figure 1	IRIS Focus Main View.....	9
Figure 2	IRIS Focus Data Flow.....	10
Figure 3	IRIS Focus Map View.....	13
Figure 4	IRIS Focus Product Data Layers.....	14
Figure 5	Layered and Tiled view modes.....	15
Figure 6	On-demand and IRIS Analysis Product Settings.....	16
Figure 7	Animation Controls.....	20
Figure 8	Cursor Tool Example for 4 Radar Products.....	21
Figure 9	Color Scale Editor Modes.....	22
Figure 10	Open and Non-open color scales.....	22
Figure 11	Cross Section Tool, CAPPI Example.....	23
Figure 12	Ruler Tool Example.....	25
Figure 13	Radar Composite Example.....	27
Figure 14	Viewing Nowcasted Data.....	31
Figure 15	Nowcasting Architecture.....	32
Figure 16	Product Advection.....	34
Figure 17	User preferences window.....	36
Figure 18	Saved Views Example.....	37
Figure 19	Viewing Events and Alerts.....	38
Figure 20	Calculating Event Criteria - Hail Detection Example.....	46
Figure 21	Bins and Sweeps.....	57
Figure 22	Radar resolution across the detected area.....	58
Figure 23	Example of 15-tilt Volume Scan.....	59
Figure 24	IRIS Focus Data Flow.....	59
Figure 25	Radar Product Code Examples.....	62
Figure 26	Signal reflectivity in precipitation.....	63
Figure 27	Smoothing Level Examples.....	64
Figure 28	Reflectivity Threshold.....	65
Figure 29	On-demand BASE Example.....	66
Figure 30	BASE and TOPS Products.....	66
Figure 31	BASE, -20 and 40 dBZ Thresholds.....	67
Figure 32	On-demand CAPPI Example.....	68
Figure 33	CAPPI Measuring the Defined Altitude.....	69
Figure 34	CAPPI with 3 km and 5 km Heights.....	70
Figure 35	Pseudo CAPPI Extending from CAPPI.....	71
Figure 36	Calculating the AzEq Cylinder Volume From 2 Nearest Data Points.....	72
Figure 37	On-demand MAX Example.....	72
Figure 38	MAX Views.....	74
Figure 39	MAX Settings.....	75
Figure 40	On-demand PPI Example.....	76
Figure 41	PPI Measuring the Defined Elevation.....	77
Figure 42	PPI With Elevation Angles of 45° and 20°.....	78
Figure 43	On-demand THICK Example.....	79
Figure 44	THICK with BASE and TOPS.....	79

Figure 45	THICK with -20 dBZ and 40 dBZ Thresholds.....	80
Figure 46	On-demand TOPS Example.....	81
Figure 47	BASE and TOPS Products.....	81
Figure 48	TOPS with -20 dBZ and 40 dBZ Thresholds.....	82
Figure 49	IRIS Analysis Product Data Flow to IRIS Focus.....	83
Figure 50	On-demand and IRIS Analysis Product Settings.....	84
Figure 51	MVF Example.....	87
Figure 52	Calculating TREC.....	89
Figure 53	Users View.....	94
Figure 54	Logged In Users View.....	98
Figure 55	Identity Configuration view.....	98
Figure 56	Password Configuration view.....	99
Figure 57	Login Page.....	100
Figure 58	Application Subscriptions view.....	101
Figure 59	Creating a new Subscription.....	101
Figure 60	Organizations View.....	102
Figure 61	Licensing Management Status.....	103
Figure 62	Editing the Map Context.....	105
Figure 63	Composite Settings.....	109
Figure 64	10 minute Max Time Span.....	111



# 1. About This Document

## 1.1 Version Information

This document provides information for using IRIS Focus software.

Table 1 Document Versions

Document Code	Date	Description
M211849EN-E	August 2018	This document. Fifth version of this document.
M211849EN-D	December 2017	Fourth version of this document.
M211849EN-C	February 2017	Third version of this document.

## 1.2 Related Documents

Table 2 Related Documents

Document Code	Name
M211850EN	<i>IRIS Focus Administrator Guide</i>
M211849EN	<i>IRIS Focus User Guide</i>
M211904EN	<i>IRIS Focus Release Notes</i>

## 1.3 Trademarks

HydroClass™ is a trademark of Vaisala Oyj.

IRIS™ is a trademark of Vaisala Oyj.

All other product or company names that may be mentioned in this publication are trade names, trademarks, or registered trademarks of their respective owners.

## 1.4 Documentation Conventions



**WARNING! Warning** alerts you to a serious hazard. If you do not read and follow instructions carefully at this point, there is a risk of injury or even death.



**CAUTION! Caution** warns you of a potential hazard. If you do not read and follow instructions carefully at this point, the product could be damaged or important data could be lost.



**Note** highlights important information on using the product.



**Tip** gives information for using the product more efficiently.



Lists tools needed to perform the task.



Indicates that you need to take some notes during the task.

## 2. IRIS Focus Overview

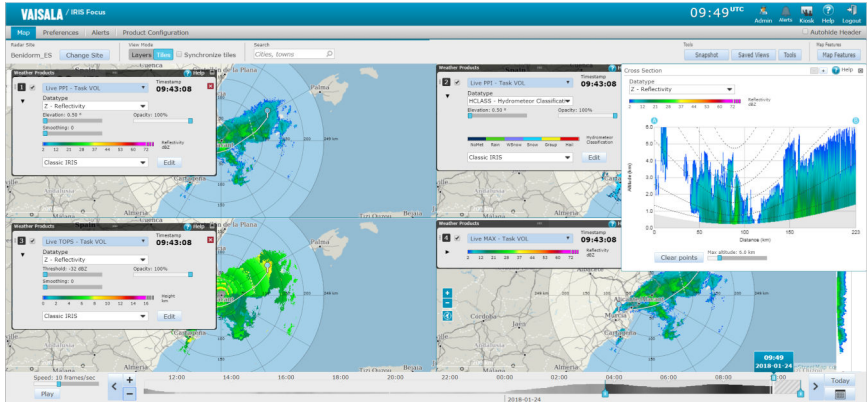


Figure 1 IRIS Focus Main View

IRIS Focus provides user-friendly, browser-based tools for viewing and analyzing weather data received from weather radars.

Weather data is overlaid on a geographical map that is centered on a selected radar site or site composite. Data is gathered from a single weather radar or a network of radar sites.

With the zoomable animation timeline, users can easily visualize and animate current, nowcasted, or historical data.

Nowcasting performs advection calculations on motion data from radar products to predict weather movement and severity up to, for example, 2 hours in the future.

Significant weather events such as hail, wind shear, or heavy rain are automatically detected when they enter an area of interest.

### Radar Products

The displayed data consists of radar products. Radar products are raw signal data from a radar receiver processed to provide information about current weather conditions.

Radar products measure information such as radar signal reflectivity or rain intensity for analysis by meteorologists.

<p><i>On-demand radar products</i></p>	<p>On-demand products are based on raw data from the IRIS back-end. IRIS Focus reads raw volume data and generates radar products in real-time.</p> <p>On-demand products provide control over the presentation of weather data in the IRIS Focus user interface. For example, users can change the reflectivity threshold of a selected radar product on the fly.</p> <p>IRIS Focus users can create composites of on-demand products by selecting multiple radar sites from the radar site selector.</p>
<p><i>IRIS Analysis radar products</i></p>	<p>IRIS Analysis radar products are configured and produced in IRIS Analysis and displayed by IRIS Focus on request.</p>

**More Information**

- [On-demand Radar Products \(page 65\)](#)
- [IRIS Analysis Radar Products \(page 83\)](#)

## 2.1 IRIS Product Family

IRIS provides an intuitive user experience for professional users, such as meteorologists and analysts. It is closely integrated with Vaisala weather radar systems, where IRIS Focus forms the visualization front-end and other IRIS components handle radar control, radar product generation, and data distribution.

IRIS Focus runs on a web server that users can connect to in an enterprise intranet or from an external location or the Internet. Network connections between IRIS Focus and the data processing back-end go through a socket server, a custom protocol over TCP/IP that delivers radar data from the IRIS back-end services to IRIS Focus. IRIS Focus polls the server for data and displays it on screen using the browser.

The following figure shows a setup where IRIS Focus is used as part of a complete Vaisala weather radar network consisting of 2 radar sites.

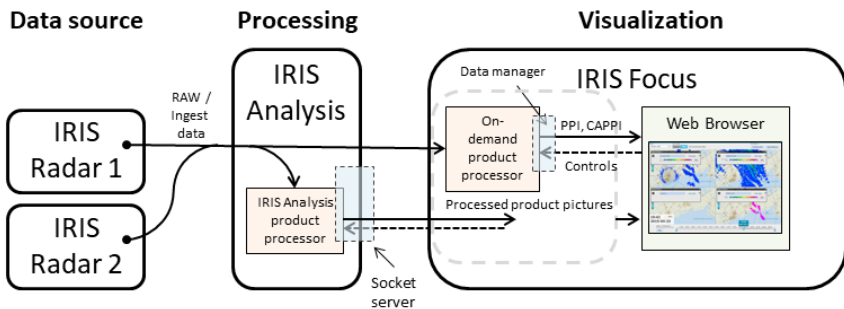


Figure 2 IRIS Focus Data Flow

In this case, IRIS Analysis and IRIS Radar can be considered back-end services for the IRIS Focus front-end interface. IRIS Focus communicates with IRIS Analysis through a secure socket server connection.

The components have the following functions:

- *IRIS Radar* - Operates the radar site and stores data gathered from the radar signals in RAW format.
- *IRIS Analysis* - Receives RAW data from IRIS Radar through secure connection and processes it into displayable radar products.
- *IRIS Focus* - Polls pre-configured radar products from IRIS Analysis and displays them on the web interface and generates on-demand radar products from RAW data.

## 2.2 Licensing

IRIS Focus requires a software license to run. To activate the license, you need a product key.

Vaisala delivers the product key when you purchase the software.

If you have purchased the software and you have not received the product key, please contact Vaisala.

For server deliveries, Vaisala activates the product key in the factory and a Vaisala representative sends you the key for future reference.

The license is mapped to the hardware of your IRIS Focus server. If your hardware configuration changes and you need to re-install IRIS Focus, you must request a replacement license from your Vaisala representative.

### License Options

The IRIS Focus license includes the following:

- **IRIS Focus Light**  
IRIS Focus Light has an unlimited number of seats and provides access to the map view. If the license is missing, users cannot log in while admins can log in but cannot access the map view.
- **IRIS Focus**  
The IRIS Focus license is required to use IRIS Focus features and products. IRIS Focus licensing is based on a floating seat pool.
- **Nowcasting**  
The optional nowcasting feature requires a separate license in addition to an IRIS Focus license.

### IRIS Focus Seat-based License

IRIS Focus licenses are available in different configurations. To increase your seat count, you must replace the current license with a new one by contacting your Vaisala representative.

The seat count defines how many users can access IRIS Focus at the same time. When a user logs in, they occupy a seat. When a user logs out, the seat is released and the next user can take it. If a user logs in when all the licenses are reserved, the user is shown IRIS Focus Light until an IRIS Focus license is released.

Nowcasting is only available to users with an IRIS Focus seat.

Seat counts within a workstation are browser-based. For one license reservation, users may view IRIS Focus in as many instances or tabs of one browser, such as Firefox®, as they like. If a user opens IRIS Focus in a different browser, such as Google Chrome™, they reserve one license for each browser.

**More Information**

- [Managing Users \(page 93\)](#)
- [Licensing Management \(page 103\)](#)

## 3. Using IRIS Focus

### 3.1 Map View

The IRIS Focus main view is a scrollable map area centered around the selected radar site. The map around the area is drawn using azimuthal equidistant projection that uses the radar site as a point of origin, which means that all distances and directions measured from the radar site are accurate.

In the map view, you can select multiple simultaneous weather data measurements, and display them on separate tiled windows, or on a combined layer overlay view.

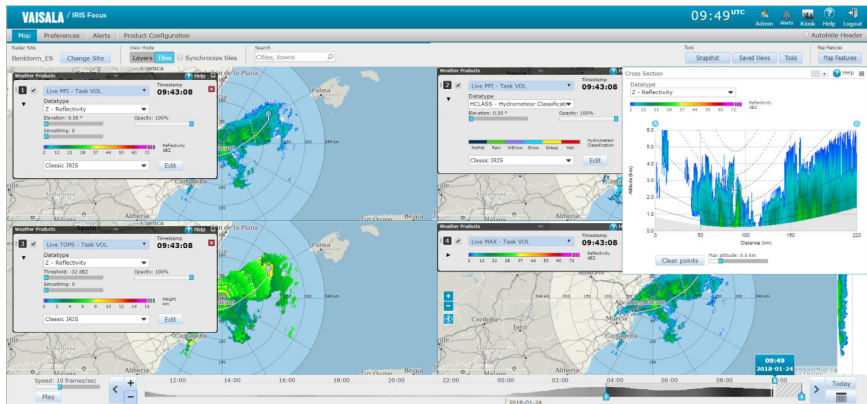


Figure 3 IRIS Focus Map View

The map engine in IRIS Focus runs on the open source [GeoServer](#) map server. The map data is gathered from the collaborative [OpenStreetMap](#) project, and the JavaScript user interface is built with the [OpenLayers](#) library. To improve performance, map data is cached as bitmap tiles with [GeoWebCache](#).

#### 3.1.1 Map Layers

The background map and the weather data visualizations from the radar products are drawn as individual layers and then combined to form an overview of current weather conditions around the radar site.

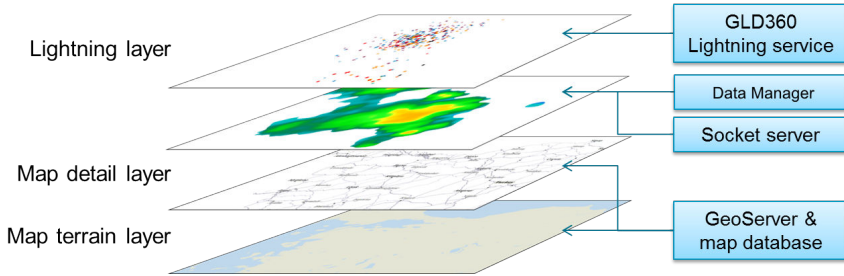


Figure 4 IRIS Focus Product Data Layers

## Base Layers

The background (also known as base) consists of a number of non-interactive layers. At the bottom is a terrain map that can be enhanced with additional layers containing roads, province boundaries, and other similar terrain features.

## Radar Product Layers

The interactive radar product layers (1 to 4) are drawn on top of the background layers.

### 3.1.2 Editing Base Layers

To manage map settings, styles, and additional map layers, such as roads, select **Map Features** on the top right corner of the UI.

Available **Base Map** styles include:

- **Standard**  
Basic terrain with oceans, lakes, rivers, landmasses, and islands. All waters are blue, and all land areas gray. Cities and dense settlement areas are brown. This is the default map view.
- **Simplified**  
Same as **Standard**, without cities.
- **Terrain**  
Same as **Standard**, with landforms added so mountain ranges and other terrain features are more visible.



Changing from one map style to another takes some time while the new terrain assets are cached.

Table 3 Map Detail Settings

Map Detail	National borders	Province borders	Airports	Roads	Labels
None					

Map Detail	National borders	Province borders	Airports	Roads	Labels
Minimal	✓				
Aviation	✓		✓		
Roads	✓			✓	
General	✓	✓			✓
Full	✓	✓	✓	✓	✓

### 3.1.3 Radar Product Layers

IRIS Focus supports up to 4 simultaneous radar product layers that can be displayed on top of each other (**Layers mode**) or in separate tiles (**Tiles mode**).

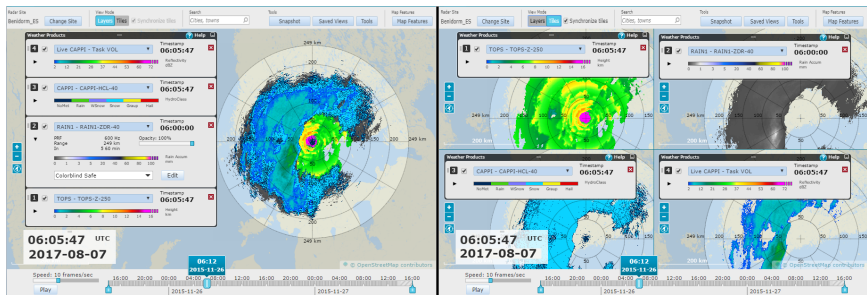


Figure 5 Layered and Tiled view modes

All active radar product layers are listed in the **Weather Products** panel.



Each additional layer requires more processing capacity from the system. To improve performance, avoid having unnecessary background or radar product layers on screen.

### Tiles Mode

In **Tiles mode**, the tiles are synchronized by default.

When synchronized, all tiles pan and zoom automatically to the same coordinates when you interact with one of the tiles.

To disable the synchronization, deselect the **Synchronize tiles** check box.

## Layers Mode

In **Layers** mode, the layers are drawn on the screen in the same order as they are listed on the **Weather Products** panel. The topmost layer in the panel is also drawn on top in the map view.

To change the order of the layers, drag them to new positions in the panel. IRIS Focus re-draws the radar products on the map view using the new layer order.

In **Layers** mode, layer number 1 always defines the overall presentation of the map view. For example, the range rings around the radar site are based on layer 1, so if the products on layer 1 and 2 have respective ranges of 100 and 250 km, the range rings on the map view are drawn only up to 100 km, which is the maximum range of the product on layer 1. The weather data from layer 2 is still drawn on the map, even though it "appears" to be outside the radar range. This also affects radar products that include some additional UI elements, such as Maximum Data (**MAX**).

### More Information

- [Radar Products \(page 56\)](#)

## 3.1.4 Radar Product Layer Settings

Each **Weather Products** panel includes settings for radar product layers.

The contents of the panel depend on the radar product type.

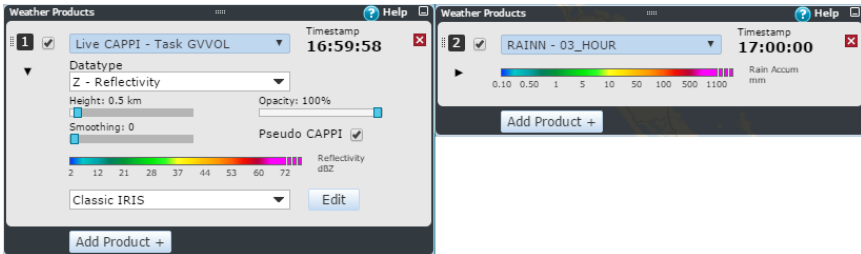


Figure 6 On-demand and IRIS Analysis Product Settings

The opacity value, which sets the transparency of a layer, is available for all radar product layers.

On-demand product layers include the following attributes:

Table 4 On-demand Product Attributes

Attribute	Description
Data type	Sets the measured data type. See <a href="#">Data Types (page 59)</a>

Attribute	Description
Height ( <b>CAPPI</b> ) Elevation ( <b>PPI</b> )	Defines the height (measured from sea level) of the horizontal cross section being displayed, or elevation of the current radar beam.
Pseudo <b>CAPPI</b>	Toggles Pseudo <b>CAPPI</b> on/off. Pseudo <b>CAPPI</b> attempts to visualize those parts within the radar range that are not measured with current settings. See <a href="#">Pseudo CAPPI (page 70)</a> .
Smoothing	Blends adjacent pixels closer together depending on their distance from each other. See <a href="#">Radar Product Smoothing (page 64)</a> .
Threshold ( <b>BASE, TOPS, THICK</b> )	Defines reflectivity threshold (dBZ) for the amount of data displayed in the image. See <a href="#">Radar Product Reflectivity Threshold (page 64)</a> .
<b>Composite Method</b>	When viewing composite data from many radar sites, choose how the display handles overlapping data. See <a href="#">Composites (page 27)</a> .

#### More Information

- [IRIS Focus Overview \(page 9\)](#)

### 3.1.5 Map Units

IRIS Focus supports the following unit sets. To change them, select **Preferences**.

Unit	Metric	Imperial	Aviation
Distance	km	miles	nmi
Velocity	m/s	mph	kt
Angle change	deg/km	deg/mile	deg/nmi
Altitude	km	ft	ft
Rainfall	mm/h	inch/h	inch/h
Vertically Integrated Liquid ( <b>VIL</b> )	mm	inch	inch

#### More Information

- [User Preferences \(page 35\)](#)


## 3.2 Radar Sites

With IRIS Focus, you can view data from any radar in your network.


To get a bigger picture, select a pre-defined composite site or create a dynamic composite to view composite data from many weather radars.

- ▶ 1. In the top menu, select **Change Site**.  
The radar site selector mode starts, showing:
  - A map view with the available radars and composites shown on the map.
  - A site selector window listing the available radars and composites.

2. To select one or more radar sites, do one of the following:
  - On the map, select one or more radar rings.

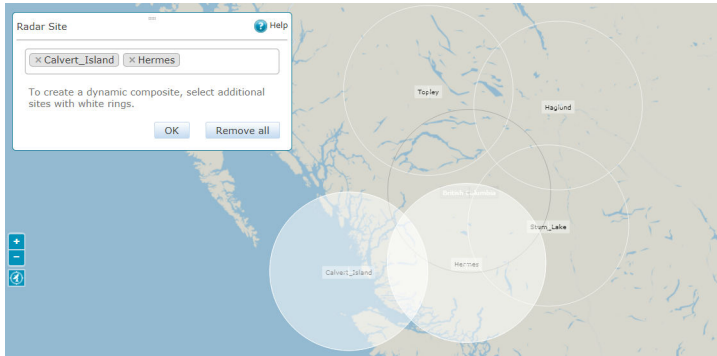

- In the **Change Site** pane, select the site selection field to show the list of available radars and select one or more radars on the list.

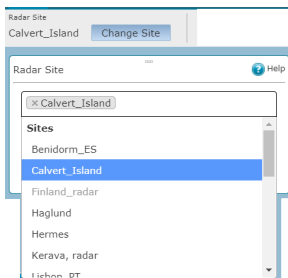

Select radar sites indicated with white rings to create dynamic composites.

The selections are indicated on the map and listed in the **Change Site** pane.

3. Select **OK**.  
The map shows data from the selected site or composite.



You can also press **CTRL** to start or exit the site selector mode.

## More Information

- [Composites \(page 27\)](#)

## 3.3 Animation Timeline

With the zoomable animation timeline, users can easily visualize and animate current, nowcasted, or historical data.

Histograms provide at-a-glance information on the amount and intensity of weather for points in time.

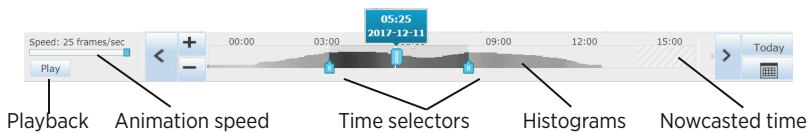


Figure 7 Animation Controls

- ▶ 1. On the animation timeline, select the time of the data you want to view:
  - To find an approximate time, pan the indicator back and forth.
  - To zoom in and out on the level of detail, scroll the mouse wheel.
  - To select a time, select the search icon on the right of the time line.
  - To return to the current time, select **Today**.
2. To start a looping animation of the data, select **Play**.
  - Move the beginning and end time indicators along the time line.
  - To select the animation speed, on the lower left corner of the user interface, select 1 ... 25 frames per second.
  - To set only a part of the weather history to be animated, drag the start and end points to the desired positions on the timeline. The animation settings update in real time.
  - By default, the animation stops for 1 second before looping back to the beginning. To change this, select **Preferences**.

Most radar products have an update interval of 15 minutes, but some are updated every 5 minutes or every 60 minutes. The length of the animation is defined by the update interval of layer number 1, that is, the bottom layer.

3. To view and animate nowcasted data, drag the playback slider along the timeline into the future.

Nowcasting performs advection calculations on motion data from radar products to predict weather movement and severity up to, for example, 2 hours in the future.

The timestamp formatting indicates that the display is showing nowcasted data. For example:

**11:26:53 UTC**  
**2018-01-19**

**More Information**

- [User Preferences \(page 35\)](#)
- [Nowcasting \(page 30\)](#)

## 3.4 Map Tools

### 3.4.1 Cursor Tool

When you hover the mouse cursor on the map view, a small overlay box opens next to it. The overlay box contains the coordinates and radar product values for that location.



Figure 8 Cursor Tool Example for 4 Radar Products

When you select multiple radar products, the cursor tool lists values for each product in the same order they are displayed on the screen.

The cursor tool works in both layered and tiled modes. In tiled modes, the overlay box displays values for each radar product at the current position, even if the tiles are not synchronized.

### 3.4.2 Color Scale Editor

To access the editor, select **Edit** on a radar product panel.

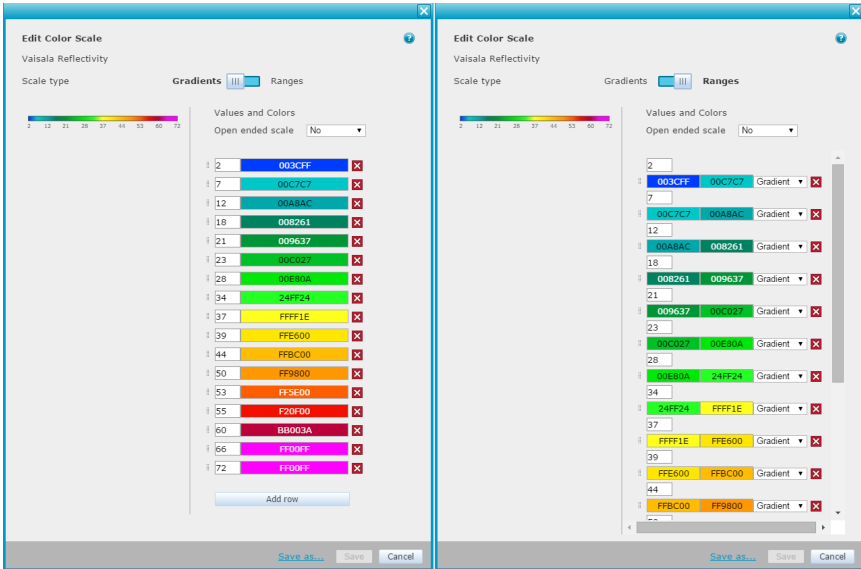


Figure 9 Color Scale Editor Modes

The editor displays the current color scale gradient. On the right side is a list of the keypoints of the color scale. Each keypoint sets the RGB color of a defined value in the radar product, and the values between keypoints are interpolated to make a smooth gradient. By optimizing the keypoints for site-specific conditions, you can make measurement ranges close to each other more distinct, and improve the users' ability to perform visual analysis on the data.

The open-ended scale setting allows you to define how values outside the upper and lower thresholds of the color gradient are displayed on the map. Open-ended scales continue drawing values beyond the thresholds with the same color as the lowest or highest keypoint in the color scale. Non open-ended scales do not draw any values outside the thresholds on the map.

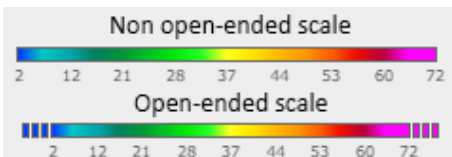


Figure 10 Open and Non-open color scales



Using non-open scales, especially for the low end, is an effective way to remove signal noise or clutter from the radar product layer.

The **Ranges** mode allows more fine-tuned options for editing color scales. On the tab you can set each step between two keypoints on the color scale to be either gradients or single solid color.

To change a color in a keypoint, click on it and select a new color from the color picker, or enter a new numerical RGB value directly into the color field.

#### More Information

- [Radar Product Colors \(page 63\)](#)

### 3.4.3 Cross Section Tool

IRIS Focus calculates vertical cross sections from the radar product data for all on-demand radar products.

The cross section window shows a vertical slice of the atmosphere on the selected line. The dotted lines are beam center lines that show the altitudes where the radar signal has passed at a given distance. The weather phenomena are drawn with the same colors as in the main view. The area outside radar range is greyed out.

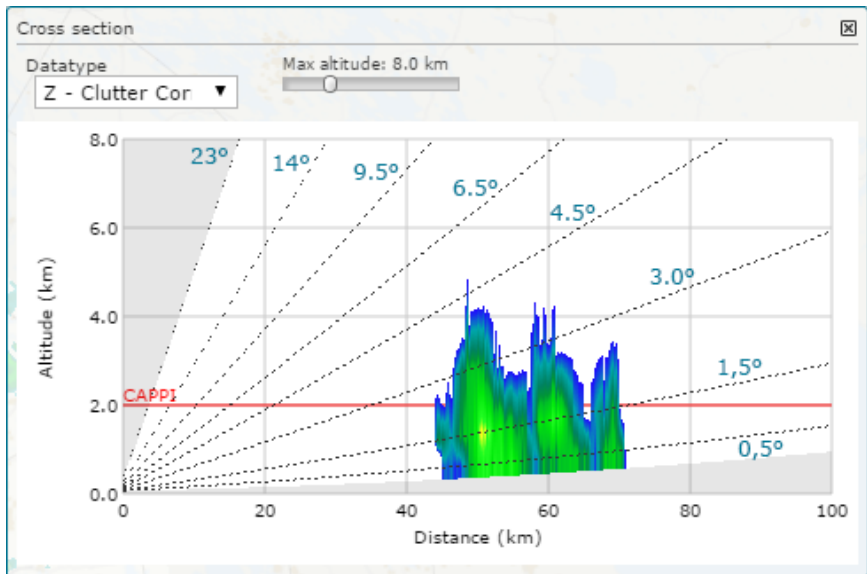


Figure 11 Cross Section Tool, **CAPPI** Example

- ▶ 1. In top right corner of the map view, select **Tools > Cross Section**.
2. Select an on-demand radar product.

3. Select points on the map:
  - Straight line – click on two points on the map to create endpoints for a vertical cross section of the radar product.
  - Curved line – click on the map and drag the mouse cursor to draw a freeform curved line and then release the mouse button.

The cross section is calculated on a line between those endpoints.  
You can move the curve and the endpoints afterwards.



If you are using an on-demand **CAPPI** product, the selected **CAPPI** altitude is drawn with a red line.

4. If you wish, change the product data type from the drop-down menu.

#### More Information

- [Data Types \(page 59\)](#)
- [On-demand Radar Products \(page 65\)](#)
- [On-demand Constant Altitude Plan Position Indicator \(CAPPI\) \(page 68\)](#)

### 3.4.4 Ruler Tool

Use the **Ruler Tool** to measure the distance between points on the map.

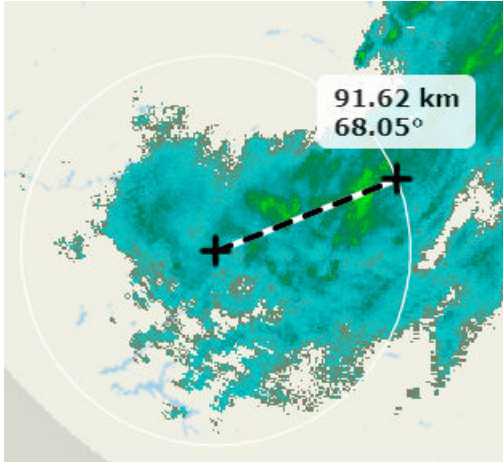


Figure 12 **Ruler Tool** Example

- ▶ 1. On top right of the main UI, select **Tools > Ruler Tool**.



Press **SHIFT**+click to snap to the radar center.

2. On the map view, click the start point, slide the mouse, and click the end point. The map shows the distance between the 2 points.
3. When you are finished, on the menu bar, select **Ruler Tool** to disable the tool.

### 3.4.5 Snapshot Tool

You can use the **Snapshot** tool to capture interesting weather events in an image.

- ▶ 1. On the **Map** view, select **Tools > Snapshot**.  
A PNG file of the current screen is downloaded to your computer.

### 3.4.6 Tracking Tool


Use the **Tracking Tool** to track the movement of weather fronts or other visible elements in radar products.

- ▶ 1. On top right of the main UI, select **Tools > Tracking Tool**.
2. On the animation timeline, drag the playback slider to the time where you want start tracking something.

3. On the map view, click the position you intend to track.  
Usually this is an edge of a weather front or an interesting local weather event.
4. Drag the playback slider forward and add a second tracking point to where the tracked event appears to have moved.

The **Tracking Tool** draws a line by continuing with the same path and speed. The first 6 estimated hours are always drawn on the screen. To run the tracking point further, drag the playback slider onwards.

In the following image, the black circles are tracking points and blue is a future estimate point based on the tracking points. The floating overlay box next to the tracking points shows a timestamp.

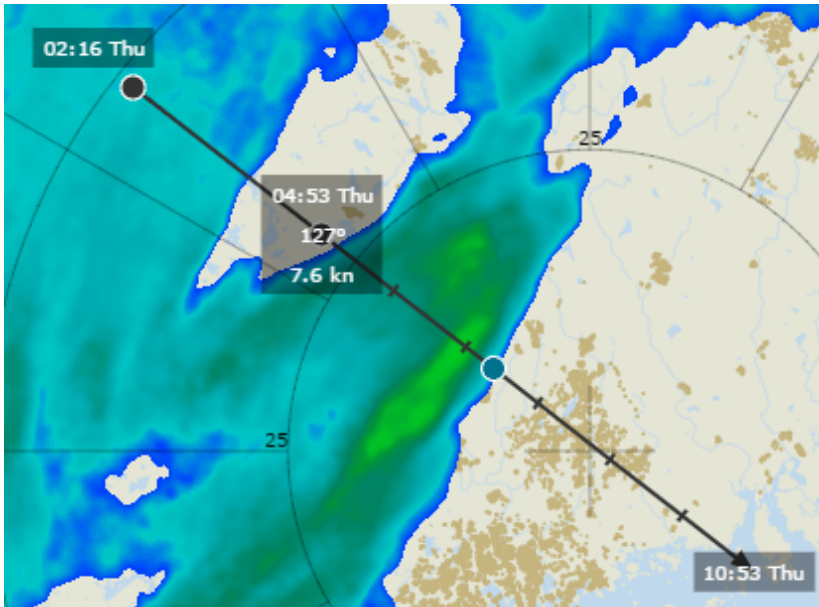

5. When you are finished or want to start another tracking event, clear the tracking points by selecting **Tracking Tool > Clear tracking points**.

## 3.5 Composites

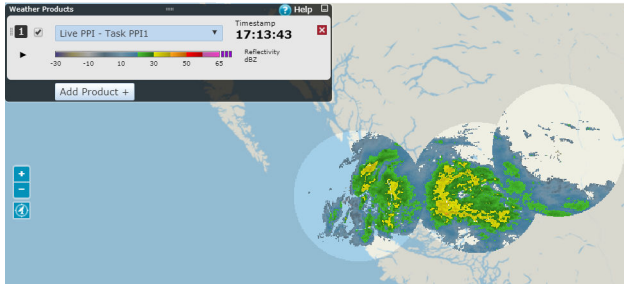


Figure 13 Radar Composite Example

Radar product composites combine data from many radars to give forecasters an expanded area of coverage to:

- Fill-in blind spots caused by mountains or required sector blanking.
- Fill-in blind spots caused by scan strategy limitations (for example, not scanning to high elevation angles).
- Simplify product management so users do not need to check multiple single-radar images.

With IRIS Focus, you can view the following composite types.

### Dynamic Composites

IRIS Focus users can create composites of on-demand products by selecting multiple radar sites from the radar site selector.

### Pre-defined Composites

IRIS Focus administrators can set up and manage pre-defined composites.

Configuring pre-defined composites provides more control over settings such as the combining algorithm and **Max Time Span**.

### IRIS Analysis Composites

IRIS Analysis Composites are set up in IRIS Analysis as IRIS **COMP** products and sent to IRIS Focus much like other pre-configured products.

#### More Information


- [Configuring Composites \(page 109\)](#)

### 3.5.1 Viewing Composites


IRIS Focus can create dynamic composites if a radar sends **RAW** data to IRIS Analysis. In site selector mode, these sites are indicated on the map with white rings.

Pre-configured composites, IRIS Analysis composites, and sites that do not support dynamic composites are indicated on the map with black rings. You can view radar data from these sites one at a time.


- ▶ 1. In the top menu, select **Change Site**.  
The radar site selector mode starts, showing:
  - A map view with the available radars and composites shown on the map.
  - A site selector window listing the available radars and composites.
2. To create a dynamic composite, select more than one site.
  - On the map, select one or more radar rings.

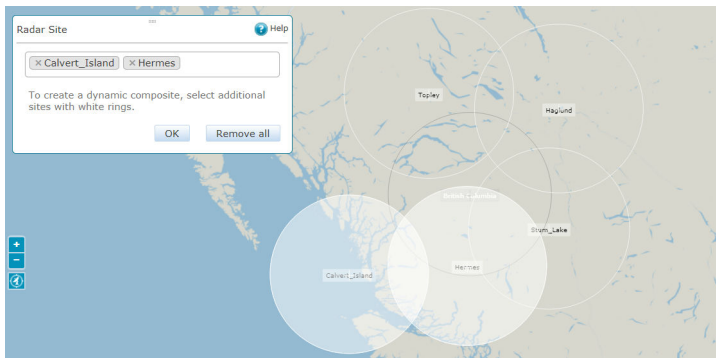

- In the **Change Site** pane, select the site selection field to show the list of available radars and select one or more radars on the list.

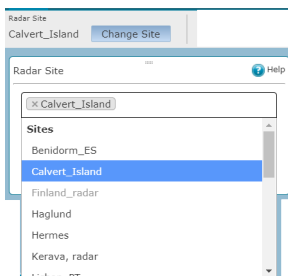

- To view a pre-defined or IRIS Analysis composite, scroll down the list of radar sites and select the composite from the from the list.

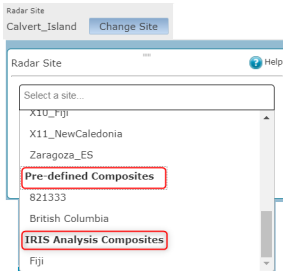

If you do not see the composite you want, contact your administrator to configure it for you.

- On the **Weather Products** pane, select the product and data type. See [Radar Product Layer Settings \(page 16\)](#).
- To change the composite method, on the **Weather Products** pane, select an option under **Composite Method**.  
For dynamic composites, the default composite method is *Maximum*. See [IRIS Focus Composite Methods \(page 29\)](#).
- To view a cross-section of the composite data, select **Cross Section**. See [Cross Section Tool \(page 23\)](#).

### 3.5.2 IRIS Focus Composite Methods

For regions where radars overlap, you can select one of the following methods for combining radar data:

- Maximum*  
Maximum uses the maximum value to combine the data. This is the most common setting.
- Average*  
Average uses the average of the available data. This is a poor choice if you are trying to cover blocked regions.



IRIS Analysis supports an expanded set of composite methods. For more information, see *IRIS Product and Display Guide*.

## 3.6 Nowcasting

Nowcasting performs advection calculations on motion data from radar products to predict weather movement and severity up to, for example, 2 hours in the future.

In this time range IRIS Focus can predict smaller features such as individual showers and thunderstorms with reasonable accuracy using image advection techniques. As part of the techniques, nowcasting extrapolates storm (echo) motion  $n$  hours into the future.

Nowcasting does not attempt to imply laws of physics into the model, such as performed in numerical weather prediction (NWP). By using advection extrapolation instead of NWP, nowcasting can include details that cannot be solved by NWP models running over longer forecast periods.

Nowcasting can be used by, for example, road, energy, or airport organizations to provide real-time decision making support.

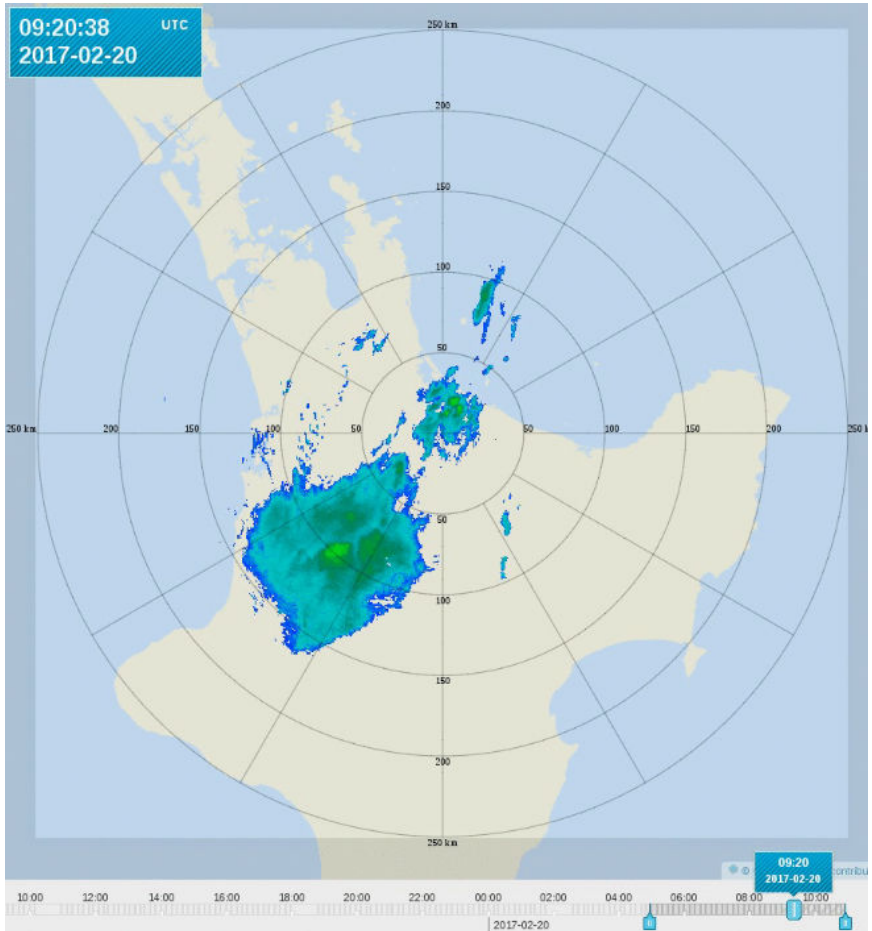


Figure 14 Viewing Nowcasted Data

IRIS Focus nowcasting uses an area-based method in which a motion vector field (MVF) is estimated over the entire observed area to provide insight into many types of precipitation. The IRIS Focus display advects cartesian products into the future.

You can view nowcasted data in IRIS Focus by moving the slider on the animation timeline. When you are in nowcasting mode, the appearance of the timestamps change to indicate that you are viewing nowcasted data.

**More Information**

- [Animation Timeline \(page 20\)](#)
- [Motion Vector Field \(MVF\) \(page 86\)](#)
- [Configuring Nowcasting \(page 107\)](#)

### 3.6.1 Calculating Nowcasting Predictions

In nowcasting, a precipitation field is considered a single pattern that can move and change with time. Placing the analyzed area on a grid, the first step in nowcasting is to compute a set of velocity vectors, one for each tile of a fixed size and then use them to predict future movement. Calculations are based on a cross-correlation of patterns.

In IRIS Focus, the motion vector fields (MVF) calculated to support nowcasting cover the area measured by the radar. Zooming in and out of the display does not change the calculations.

### Nowcasting Process

The following process explains how IRIS Focus creates nowcasts of its cartesian products in two steps: first create a motion vector field (MVF) and then use the MVF to advect products into the future.

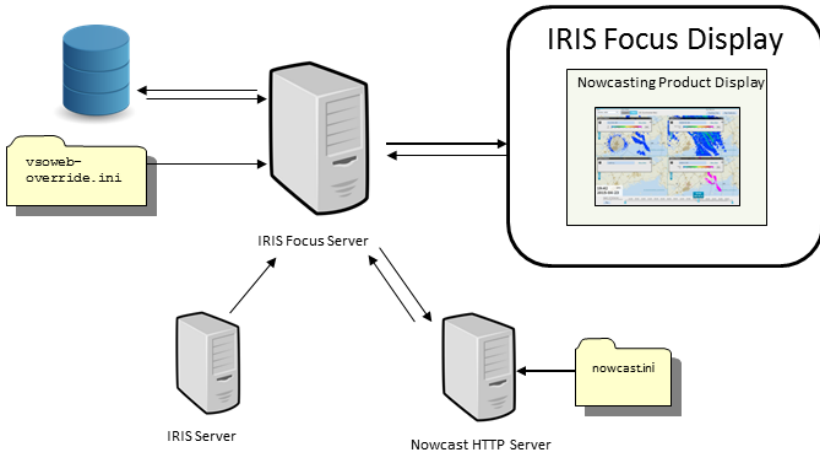


Figure 15 Nowcasting Architecture

1. Read the nowcasting configuration on start-up.
2. Run the radar data sequence.

3. Calculate the current velocity as a motion vector based on configurable settings. MVF generation is done in the nowcast server, which by default is installed on the IRIS Focus server. The nowcast server takes requests from the web application and returns MVF products. Advected product generation is done in the web application. MVF calculations use the last few products generated of a Cartesian product and passes them through the nowcasting algorithms. Note that since the last generated products are used, depending on the product schedule, it is possible that the first advected image is before the current time. The MVFs are visible in IRIS Focus as a separate product and are used by IRIS Focus in nowcasting other radar products. See [Motion Vector Field \(MVF\) \(page 86\)](#).
4. Run the nowcasting advection and velocity calculation algorithms to determine how the precipitation elements in the atmosphere will move in the near future. See [Calculating Advected Products \(page 33\)](#) and [Calculating Motion Velocity \(page 88\)](#).
5. Display nowcasting predictions in IRIS Focus. See [Animation Timeline \(page 20\)](#).

### 3.6.2 Calculating Advected Products

When you view nowcasted products by moving the animation slider into the nowcasting region, you see advected products.

IRIS Focus generates advected products using the last motion vector field (MVF) generated for a site along with the last product of the type you are viewing. IRIS Focus generates the advected products on-demand.

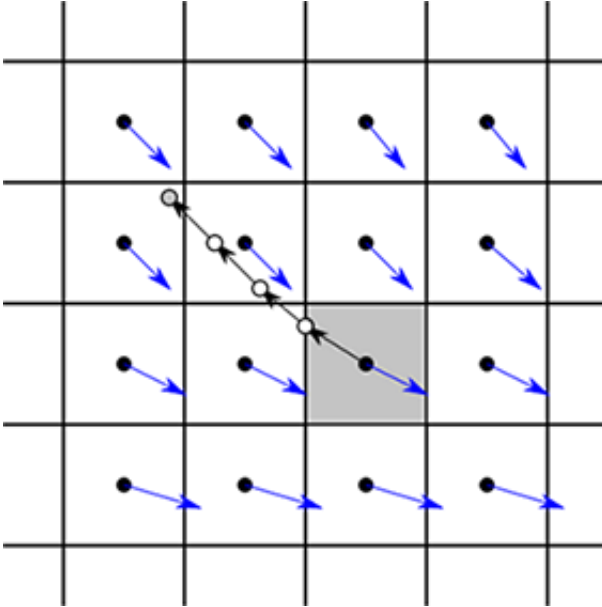



Figure 16 Product Advection

## Calculating Advected Products

The advection algorithm back traces each pixel's previous positions. To determine the value of one pixel (shown in gray in the previous image), the algorithm performs the following calculations:

1. Shift the position of the pixel using the MVF point for that pixel, but in the opposite direction.  
The new value is determined by interpolating the raster value at the previous location of the pixel.
2. To determine value in the pixel  $N$  frames in the future, the algorithm performs the shift  $N$  times.

3. The algorithm determines the MVF vector components at each intermediate location using the same interpolation procedure as for the raster value at the previous location. The interpolation computes a weighted average of raster values in four surrounding points.

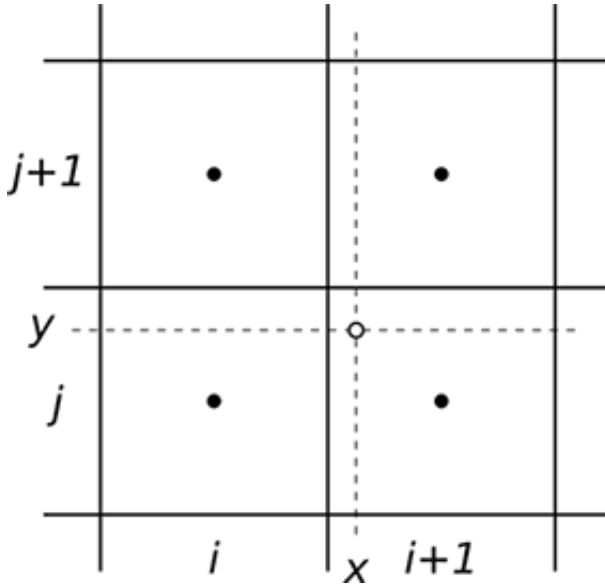

### 3.7 User Preferences

To view and change user-specific settings, select **Preferences**.

You can change:

- Your password
- Default animation settings
- Interface language
- Measurement units used in IRIS Focus. See [Map Units \(page 17\)](#).

### User Settings

Username: admin

[Change password](#)

### Animation

Animation pause  seconds (0-3600) i

Default animation speed  FPS (1-25) i

### Language

English (en)

Español (es)

Português (pt)

Русский (ru)

### Units

Metric

Imperial (miles)

Aviation (nmi / knots)

Figure 17 User preferences window

**More Information**

- [Animation Timeline \(page 20\)](#)

## 3.8 Saved Views

Many IRIS Focus users work from the same **Map** views from one session to the next.

You can use **Saved Views** to save your frequently used views so they are available each time you log in to IRIS Focus.

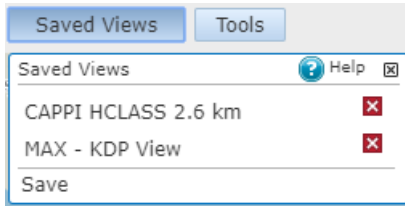


Figure 18 Saved Views Example

- ▶ 1. In the IRIS Focus **Map** view, set-up the view you want to save. For example, you can save the settings for:
  - **Weather Products**
  - Map tools such as the cross-section and tracking tools
  - Zoom level
2. Select **Saved Views > Save**.
3. Name the view and select **Save**.  
The new view is added to the **Saved Views** list for your future use.
4. To update a saved view:
  - a. Under **Saved Views**, select the view you want to update.
  - b. On the **Map**, update the view settings.  
For example, change the zoom level or the product data type.
  - c. Select **Saved Views > Save**.
  - d. Save the view with the same name as the view you want to update.
5. To delete a saved view, in the list of saved views, select the **X** next to the view you want to delete.

## 3.9 Supported Browsers

IRIS Focus data is available through a secure network connection, and can be displayed on multiple client workstations across your organization.

IRIS Focus supports current Internet Explorer®, Mozilla Firefox®, and Google Chrome™ browsers.

## 4. Managing Weather Alerts and Places of Interest

### 4.1 Alerts for Significant Weather

IRIS Focus can provide alerts for weather phenomena such as the approach of a severe storm, turbulence, lightning hazard, or flood potential.

In IRIS Focus, a weather *event* is an occurrence of a configured set of alert criteria appearing in the display.

A weather *event* becomes an *alert* when the configured set of alert criteria moves into an area of interest in the display.

You configure alerts to detect significant weather events in a pre-defined area of interest.

When you assign weather criteria to an area of interest, you receive weather alerts about that criteria from the current time onwards.

When IRIS Focus detects an event in an area of interest, the icon and the border around the area turn red. You can hover over the area to show more information about the alert.

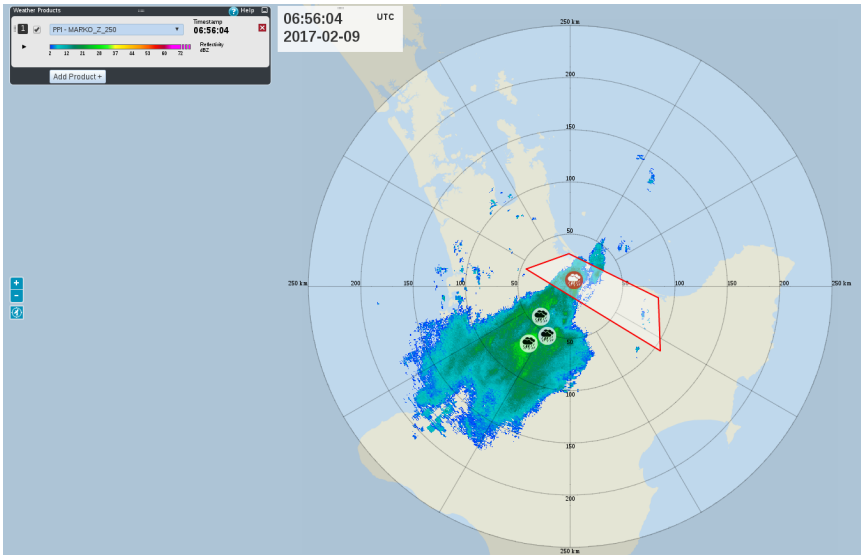


Figure 19 Viewing Events and Alerts

Alerts have a hysteresis period of 20 minutes. If new events of the same type, and in the same area of interest, arrive, IRIS Focus keeps the alert active. Once there have been no new events for 20 minutes, the alert is turned off.

When you are working with historical data, consider the following:

- When you browse historical data, you see information about weather events and alerts that were recorded in real time.
- If you delete an area of interest or some alert criteria, the area and any recorded alerts associated with that area remain visible when browsing historical data.

## 4.1.1 Required User Roles for Event Criteria and Places of Interest

Table 5 User Roles for Event Criteria and Areas of Interest

	focus	poweruser
Define event criteria	--	✓
Create, edit, or delete organization-level areas of interest	--	✓
Assign event criteria to organization-level areas of interest	--	✓
Create, edit, or delete organization-level pins	--	✓
Create, edit, or delete personal areas of interest	✓	--
Assign event criteria to personal areas of interest	✓	--
Create, edit, or delete personal pins	✓	--
View organization-level areas of interest and alerts	✓	✓
View organization-level pins	✓	✓

### Organization-Level Areas of Interest

Users must be assigned a **poweruser** role to be able to create, edit, or delete an organization-level area of interest.

The **poweruser** role also provides the user with the rights to assign event criteria to organization-level areas of interest.

All users receive alerts about weather events occurring within organization-level areas of interest

## Personal Areas of Interest

Users assigned a **focus** role can create personal areas of interest that:

- Are only visible to the user who created the area of interest
- Can be assigned event criteria defined by a **poweruser**
- Generate alarms that are only visible to the user who created the area of interest

### More Information

- [Managing Users \(page 93\)](#)
- [Managing Organizations \(page 101\)](#)

## 4.2 Places and Areas of Interest

In IRIS Focus, places of interest may be either an area or a single point on the map.

### Pins

Pins on a map indicate points of interest with reference points and labels.

### Areas of Interest

An area of interest is a geographical area that is monitored for certain weather events.

If the system detects a weather event in an area of interest, it generates an alert.

To receive weather alerts, you must define an area of interest in IRIS Focus and then attach sets of event criteria to that area.

### More Information

- [Pinning Locations on the Map \(page 52\)](#)

### 4.2.1 Drawing Areas of Interest

- ▶ 1. Select **Alerts**.  
The **Places of Interest** panel opens.
2. Select the type of area you want to create: **Circle** or **Shape**.
3. Give the area of interest a unique name.
4. Define the area settings.  
The settings vary depending on the area type. For example, for a **Circle**, you define the center point and radius.

5. Select if the area is **Enabled**.



**CAUTION!** If the area is not defined as **Enabled**, you will not receive weather alerts about significant weather in the area.

6. Select **Show label** to show the area name on the map.  
In the **Places of Interest** view, when enabled, the map also displays the icon for the event criteria assigned to the area interest.
7. Assign event criteria to the area of interest.  
See [Assigning Event Criteria to Areas of Interest \(page 50\)](#).
8. Select **Save**.

IRIS Focus generates an alert when a weather event enters the area of interest.


#### More Information

- [Working with Circles \(page 42\)](#)
- [Working with Shapes \(page 43\)](#)
- [Viewing Places of Interest on the Map \(page 53\)](#)

### 4.2.2 Editing Areas of Interest

- ▶ 1. On the map, click an area of interest. The configuration panel for that area opens.
2. In the area of interest configuration panel, update the configuration settings.  
You can also use the mouse to adjust the dimensions of the area on the map.
3. Select **Save**.

## 4.2.3 Working with Circles

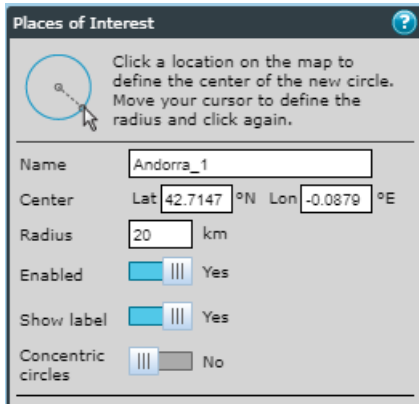

- ▶ 1. Select **Alerts**.  
The **Places of Interest** panel opens.
2. Select **Circle** to create a new area.
3. Give the area of interest a unique name.
4. To define the area using map co-ordinates, use the **Places of Interest** panel:
  - a. Define the latitude and longitude of the center of the circle.
  - b. Define the radius of the circle.
5. To draw the circle on the map:
  - a. Click the location on the map where you want to place the center of the circle.
  - b. Drag the mouse to define the radius of the circle.
  - c. To move the circle on the map, drag the center point of the circle.
  - d. To resize the circle on the map, use the corner points around the circle.
6. To show concentric circles between the center point and the outer edge of the area of interest circle, select **Concentric circles**.
7. To show the name of the area of interest on the map, select **Show label**.
8. To activate the area of interest, select **Enabled**.



**CAUTION!** If the area is not defined as **Enabled**, you will not receive weather alerts about significant weather in the area.


9. Select **Save**.

**More Information**

- [Drawing Areas of Interest \(page 40\)](#)

**4.2.4 Working with Shapes**

**Places of Interest**
?



Move your cursor to where you want to start drawing.  
Click points on the map to form the shape.  
To finish drawing your shape, click the starting point.

To edit an existing protected area, click an existing shape, hover on an edge and click+drag to add new points.

To remove points, press SHIFT+click.

---

Name

Enabled  Yes

Show label  No

Coordinates

Lat	<input type="text" value="42.586"/>	°N	Lon	<input type="text" value="1.7075"/>	°E
Lat	<input type="text" value="42.4226"/>	°N	Lon	<input type="text" value="1.4295"/>	°E
Lat	<input type="text" value="42.6164"/>	°N	Lon	<input type="text" value="1.4343"/>	°E

- ▶ 1. Select **Alerts**.  
The **Places of Interest** panel opens.
2. Select **Shape** to create a new area.
  - a. Give the area of interest a unique name.
  - b. On the map, move your cursor to where you want to start drawing.
  - c. To form the shape, click points on the map.
  - d. To close the shape, click the starting point.

3. Continue editing the shape as needed:
  - a. To add new points to a shape, hover on an edge and click and drag the mouse.
  - b. To move an existing point, hover over it and click and drag the mouse to move it.
4. To show the name of the area of interest on the map, select **Show label**.
5. To activate the area of interest, select **Enabled**.



**CAUTION!** If the area is not defined as **Enabled**, you will not receive weather alerts about significant weather in the area.

6. Select **Save**.

#### More Information

- [Drawing Areas of Interest \(page 40\)](#)

## 4.2.5 Enabling or Disabling an Area of Interest

The **Enabled** setting available for each area of interest allows you to manage which areas of interest generate weather alerts.

For example, if you want to monitor severe weather conditions that are only meaningful to an area of interest for a period of time, you can control when you receive weather notifications for that area.



**CAUTION!** If the area is not defined as **Enabled**, you will not receive weather alerts about significant weather in the area.

- ▶ 1. Select **Alerts**.  
The **Places of Interest** panel opens.
2. In the area of interest configuration pane, update the **Enabled** setting.
3. Select **Save**.

#### More Information

- [Viewing Places of Interest on the Map \(page 53\)](#)

## 4.2.6 Removing Areas of Interest

When you remove an area of interest from IRIS Focus, it is unavailable for tracking significant weather in future. When you browse historical data, the area and any recorded alerts for that area remain in the system.



**CAUTION!** Take care when removing areas of interest from your map. You cannot undo an action that removes an area of interest.

- ▶ 1. To remove the area of interest through the **Places of Interest**:
  - a. Select **Alerts**.  
The **Places of Interest** panel opens.
  - b. In the list of places of interest, select the **x** for the area you wish to remove.
- 2. To remove the area of interest through the map:
  - a. Select the area you wish to remove.
  - b. Press **DELETE**.

The area of interest is removed from the IRIS Focus display.

You will no longer be alerted to weather events in this area.

## 4.3 Event Criteria

In IRIS Focus, a weather *event* is an occurrence of a configured set of alert criteria appearing in the display.

A weather *event* becomes an *alert* when the configured set of alert criteria moves into an area of interest in the display.



To be effective, weather alert criteria must be based on the local climatology and experience.

Vaisala can work with you to develop such a climatology or to better understand the capabilities and limitations of the criteria.

Vaisala makes no warranty, either express or implied, that the weather alerts can detect all hazardous weather situations. In no event can Vaisala be held liable for damages of any kind for failure of the system to issue a warning, or for false alarms that may be issued by the system.

You must define alert criteria to detect significant weather in IRIS Focus.

### Example: Detecting Hail

The occurrence of 45 dBZ at 1.5 km above the freezing level is a good indicator of hail in many mid-latitude locations. Assuming that the freezing level is at 4 km, and you run an echo **TOPS** product for the 45 dBZ contour, your configured event criteria could check if:

- The **TOPS** product shows 45 dBZ tops at heights greater than 5.5 km. If yes, there is a high probability of hail.
- To avoid issuing an alarm based on a single pixel, a "threshold region" parameter checks if the region of hail signature at least 10 km<sup>2</sup>.
- The **VIL** for the same region (1 ... 10 km) is greater than 5 mm (or a value determined from the local climatology of hail).

## Event Criteria Use

Vaisala recommends using up to 3 criteria. The thresholding and smoothing is performed separately for each criteria and then the results are linked with **AND** operators.

IRIS Focus identifies weather as significant only if the recorded values are smaller or larger than the thresholds defined in the weather criteria.

The units of measure depend on the selected product. For example:

- **TOPS** thresholds are specified in km
- **VIL** thresholds are specified in mm.

The following figure shows how IRIS Focus calculates the event criteria to identify significant weather events.

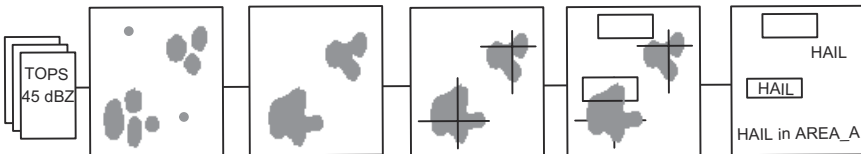


Figure 20 Calculating Event Criteria - Hail Detection Example

- 1 Threshold the input product (45 dBZ **TOPS** in the example) so that only points larger than the threshold are considered (for example,  $>>5.5$  km). The result is a 2-D binary array.
- 2 Smooth and connect the significant weather regions that are almost touching, and eliminate any isolated bins.
- 3 Contiguous regions are identified. The location and size of each region is computed. Regions below the threshold size are discarded.
- 4 Determine whether any part of any region is in an area of interest.
- 5 Show the significant weather, hail, as an event outside areas of interest or as an alert within areas of interest.

### 4.3.1 Example Event Criteria

The following table shows some examples of event criteria.

Each criterion, surrounded by square brackets above, is one set of event criteria. The results of multiple criteria or event tasks are linked with AND operators.

Table 6 Example Event Criteria

Criteria	Example
Wind shear detection	<p>[Shear &gt;10 m/s/km at 0.5° EL] AND [ ... at 0.7° EL]</p> <p>over an area of 3 km<sup>2</sup></p>
Storm turbulence detection	<p>[Spectrum Width &gt;6 m/s] AND [Reflectivity &gt;20 dBZ]</p> <p>over an area of 10 km<sup>2</sup></p>
Hail detection	<p>[45 dBZ TOPS &gt;1.5 km above freezing level]</p> <p>over an area of 10 km<sup>2</sup></p>
Precipitation surveillance detection	<p>[1.5 to 14 km VIL &gt;1 mm]</p> <p>over an area of 10 km<sup>2</sup></p>
Severe storm detection or lightning hazard	<p>[1.5 to 15 km VIL &gt;10 mm] AND [10 dBZ TOPS &gt;8 km]</p> <p>over an area of 10 km<sup>2</sup></p>
Flash flood warning	<p>[Hourly Rainfall or N-Hour Rainfall &gt;5 mm]</p> <p>over an area of 25 km<sup>2</sup></p>

### 4.3.2 Configuring Event Criteria



You must be assigned a *poweruser* role to configure event criteria.

Edit event criteria:

Cancel Add new

Hail detection

Symbol HAIL

Icon Hail

Over an area of 10 km\*km

For more than 10 minutes

---

TOPS threshold 45 dBZ

Z > height 1.5 km

Add criterion

Cancel Save

Alerts to weather events in areas of interest are based on configured sets of event criteria.

Event criteria specify the message, the area of the threshold region, and a number of weather product settings.

- ▶ 1. Select **Alerts**.  
The **Places of Interest** panel opens.
2. Under **Event Criteria**, select **Edit**.  
The weather criteria panel opens.
3. Do one of the following:
  - Select **Add New** to create a new set of existing criteria.
  - Select an existing criteria set to update a configuration.
4. Select an icon from the predefined list of options.  
This icon is shown on the map when an event matching the weather alert criteria occurs.
5. Name the set of event criteria.
6. In **Symbol**, specify the text used in the alert messages.  
The messages are available to systems that require this information.

7. Define the first criterion.

- a. Select a product type.
- b. Define the data types and thresholds for the selected product.  
 Radar product data type defines what is calculated from the received radar pulse reflections.  
 The available data types and threshold criteria vary depending on the selected product.




The list of product names shows products currently in your system.

See [Data Types \(page 59\)](#).

- c. In **Over an area of**, enter the the minimum size of a thresholded region (km<sup>2</sup>)  
 Weather events that do not meet or exceed this size are discarded.  
 For example, for a 3 x 3 km size area, type 9.
- d. In **For more than**, type a time value (minutes).  
 The **For more than** value refers to the time interval during which the weather criteria must persist in an area of interest.  
 IRIS Focus sends an alert if the event persists in an area of interest for longer than the defined interval. Weather events that do not meet or exceed this time span are discarded.  
 You must know your task schedule. In general, if all of your product criteria are based on the same task, set the **For more than** time to 00:00:00 so that only data from the same run are used.

On-demand Products	IRIS Analysis Products
IRIS Focus records when the criteria starts and continues monitoring for defined time interval time to check when the time criterion is met.	You must define a time criterion that takes into account the frequency at which the products are sent to IRIS Focus.
IRIS Focus applies the event conditions to all tasks.	IRIS Analysis products are attached to a task, so the event criteria are applied only over those tasks used for IRIS Analysis product generation.  IRIS Focus checks the area to and see if a radar is producing the requested IRIS Analysis product.

8. Select **Add Criterion** to add more criteria to the criteria set.  
Vaisala recommends using up to 3 criteria.

 Additional criteria are included in the weather alert criteria set using the **AND** condition.  
To use the **OR** condition, create another set of event criteria and apply it to the same area of interest.

9. Select **Save**.

You can now assign the event criteria to one or more areas of interest.


You can view events and alerts about the event criteria on the map after you have attached it to an area of interest.

**More Information**

- [Viewing Active Events and Alerts on the Map \(page 54\)](#)

## 4.4 Assigning Event Criteria to Areas of Interest

To receive alerts about significant weather, you must assign one or more sets of event criteria to an area of interest.

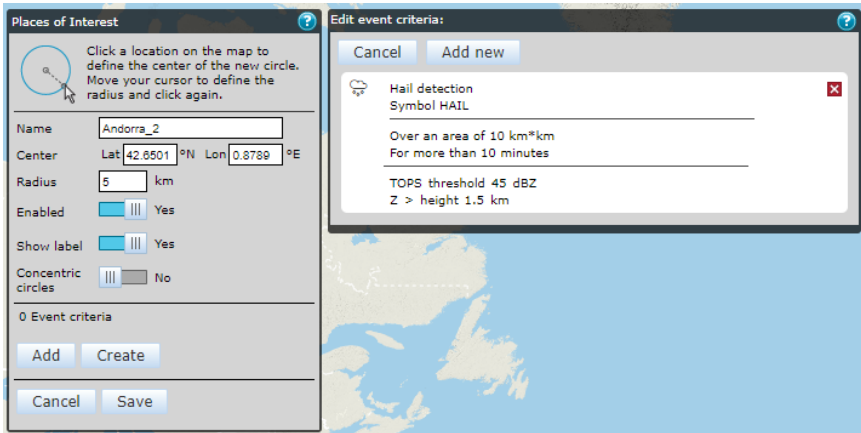

1. Select **Alerts**.  
The **Places of Interest** panel opens.
2. In the **Places of Interest** panel, select an area of interest.  
The configuration panel for that area opens.

- In the **Event Criteria** section, select **Add**.  
The list of available event criteria opens.
- In the **Event Criteria** panel, click the center of a set of event criteria to attach it to the area.  
You can attach many sets of event criteria to an area of interest.



Make sure the products defined in the criteria are available to the radar site monitoring the area of interest. If the products are unavailable, the criteria for triggering an alert cannot be met.

If the area of interest is **Enabled**, you will receive an alert if weather events corresponding to the event criteria occur in the area of interest.

## 4.5 Acknowledging Weather Alerts

A weather *event* becomes an *alert* when the configured set of alert criteria moves into an area of interest in the display.

When an alert is in an area of interest area, both the event icon and the protected area are red and the alarm icon in the menu indicates a new alarm, which you can acknowledge.



- ▶ 1. On the right side of the main menu, select **Alerts > Weather**.
- 2. In the **Alerts** panel, acknowledge the alert.  
The acknowledgement records who has seen the alert and when. Acknowledging alerts has no effect on the alert status.

## 4.6 Example Weather Alert Symbols

The following table shows some examples of the weather alert symbols available in IRIS Focus. When you configure event criteria, you can assign any icon to the criteria set.

Table 7 IRIS Focus Alert Symbol Examples


Example	IRIS Focus Event Icon	IRIS Focus Alert Icon
Downburst		
Hail		
Wind		

Example	IRIS Focus Event Icon	IRIS Focus Alert Icon
Other value		

## 4.7 Pinning Locations on the Map

You can add pins to the map to indicate points of interest with useful reference points and labels.

You cannot attach alert criteria to pins or receive alerts about weather events occurring near pins.

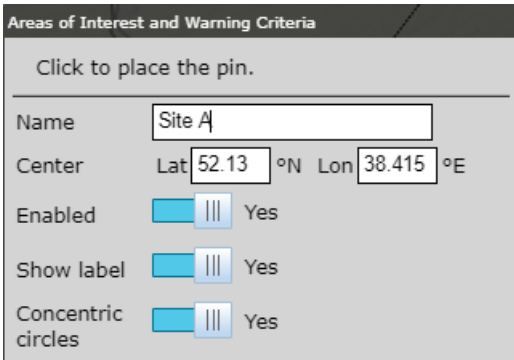

1. Select **Alerts**.  
The **Places of Interest** panel opens.
2. Select **Pin** to mark a new point of interest.
3. To add a pin to the map, do one of the following:
  - In the configuration panel, type the latitude and longitude of the pin location.
  - On the map, click the pin location.
4. To show concentric circles around the pin, select **Concentric circles**.
5. To show the name of the pin on the map, select **Show label**.
6. Select **Save**.

### More Information

- [Map View \(page 13\)](#)
- [Places and Areas of Interest \(page 40\)](#)

## 4.7.1 Enabling or Disabling a Pin

The **Enabled** setting available for each pin allows you to manage which pins are shown on the map. For example, you can hide a pin from view but save it for showing on the map later on.

- ▶ 1. Select **Alerts**.  
The **Places of Interest** panel opens.
- 2. In the pin configuration pane, update the **Enabled** setting.
- 3. Select **Save**.

## 4.7.2 Removing Pins

When you remove a pin from IRIS Focus, it is deleted from the system.




**CAUTION!** You cannot undo an action that removes a pin.

- ▶ 1. Select the pin you wish to remove.
- 2. Press **DELETE**.  
The pin is removed from the IRIS Focus map and from the list of pins in the **Places of Interest** pane.

## 4.8 Viewing Places of Interest on the Map

You can manage whether **Enabled** areas of interest and pins are shown on the map.

If an area of interest is **Enabled**, you will receive weather alerts about significant weather in the area even if the area is not shown on the map.

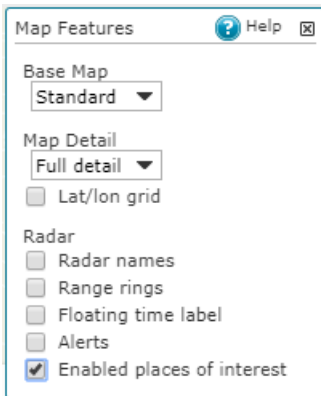



**CAUTION!** If the area is not defined as **Enabled**, you will not receive weather alerts about significant weather in the area.


- ▶ 1. Select **Map Features**.
- 2. Select **Enabled places of interest**.  
IRIS Focus shows enabled pins and areas of interest on the map.

**More Information**

- [Map View \(page 13\)](#)
- [Drawing Areas of Interest \(page 40\)](#)
- [Viewing Active Events and Alerts on the Map \(page 54\)](#)
- [Enabling or Disabling an Area of Interest \(page 44\)](#)

## 4.9 Viewing Active Events and Alerts on the Map

You can choose to display active weather events and alerts on the IRIS Focus map.

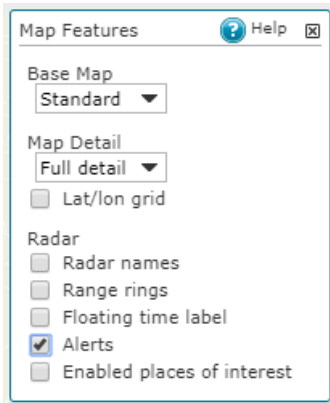

**CAUTION!** If the area is not defined as **Enabled**, you will not receive weather alerts about significant weather in the area.



The alert panel is always active and lists weather alerts even if the **Map Features > Alerts** option not selected

- ▶ 1. Select **Map Features**.
2. Select **Alerts**.  
Active weather events and alerts are displayed on the map.

#### More Information

- [Map View \(page 13\)](#)
- [Viewing Places of Interest on the Map \(page 53\)](#)
- [Configuring Event Criteria \(page 47\)](#)

## 5. Radar Products

A weather radar transmits pulse signals outwards to the atmosphere and receives reflected echoes of the signal. As the radar rotates around its vertical and horizontal axes, it gathers raw data by sending and receiving signals.

The raw data can be analyzed for signal properties, such as reflectivity and Doppler velocity, that are affected by the atmospheric conditions in the measured area. For example, a dense precipitation area reflects a stronger echo signal back toward the radar. These signal properties are processed to create radar products that are useful for meteorological purposes.

IRIS Focus is designed for use with dual polarization Doppler radars that transmit and receive both horizontally and vertically polarized pulses. The combination of differential polarization modes allows for detailed analysis of atmospheric events such as detecting different precipitation types.

Radar products are raw signal data from a radar receiver processed to provide information about current weather conditions. IRIS Focus supports:

<i>On-demand radar products</i>	<p>On-demand products are based on raw data from the IRIS back-end. IRIS Focus reads raw volume data and generates radar products in real-time.</p> <p>On-demand products provide control over the presentation of weather data in the IRIS Focus user interface. For example, users can change the reflectivity threshold of a selected radar product on the fly.</p> <p>IRIS Focus users can create composites of on-demand products by selecting multiple radar sites from the radar site selector.</p>
<i>IRIS Analysis radar products</i>	<p>IRIS Analysis radar products are configured and produced in IRIS Analysis and displayed by IRIS Focus on request.</p>

For information on the algorithms used to process raw signal data in IRIS, see *IRIS and RDA Dual Polarization User Guide* and *RVP900 Digital Receiver and Signal Processor User Guide*.

### More Information

- [IRIS Product Family \(page 10\)](#)

## 5.1 Measuring Radar Data

IRIS Focus uses the data generated by weather radars to detect hydrometeors in the atmosphere such as rain, snow, or hail.

### 5.1.1 Bins, Sweeps, and Volumes

As the radar rotates around its axis  $360^\circ$  in a sweep, the weather radar transmits microwave pulses into the atmosphere and receives signals reflected off hydrometeors. After a sweep, the radar usually changes its elevation and starts a new sweep.

The reflection measurements from a pulse are sorted into bins. A bin is a single sample of weather data detected at a known direction, altitude, and distance from the radar site. The radial size of a bin decreases with distance, so bins further from the radar site cover a larger area than nearby bins. Each sweep typically contains the same number of bins independent of the elevation.

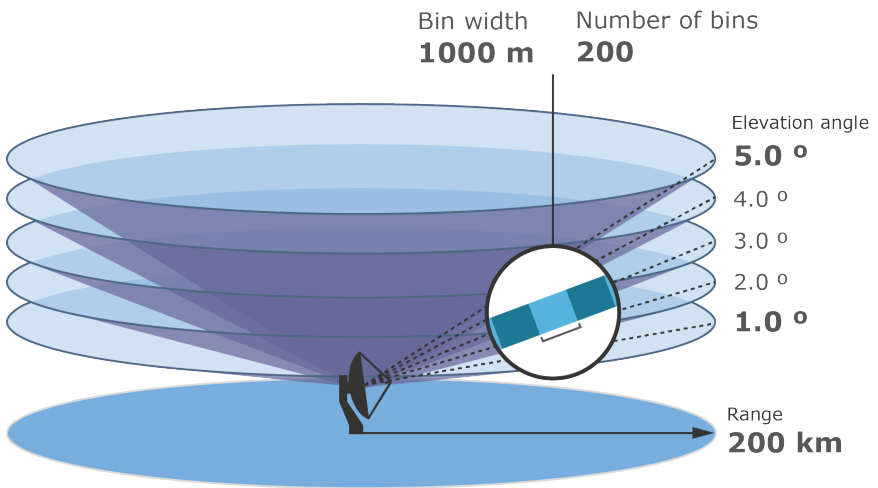


Figure 21 Bins and Sweeps

Volumes, a complete set of raw measurement data collected during sweeps, are used to calculate a model of the atmosphere. The maximum volume is half of a sphere (from  $0^\circ$  elevation upwards), but other shapes are more typical.

### 5.1.2 Radar Beam

As the distance from the radar site increases, the granularity of the radar beam decreases, which degrades the accuracy of radar products. For example, a  $1^\circ$  wide beam sent at the antenna has a width of 2 km across at 120 km distance. The following image shows how the detected bins grow larger further away from the radar.

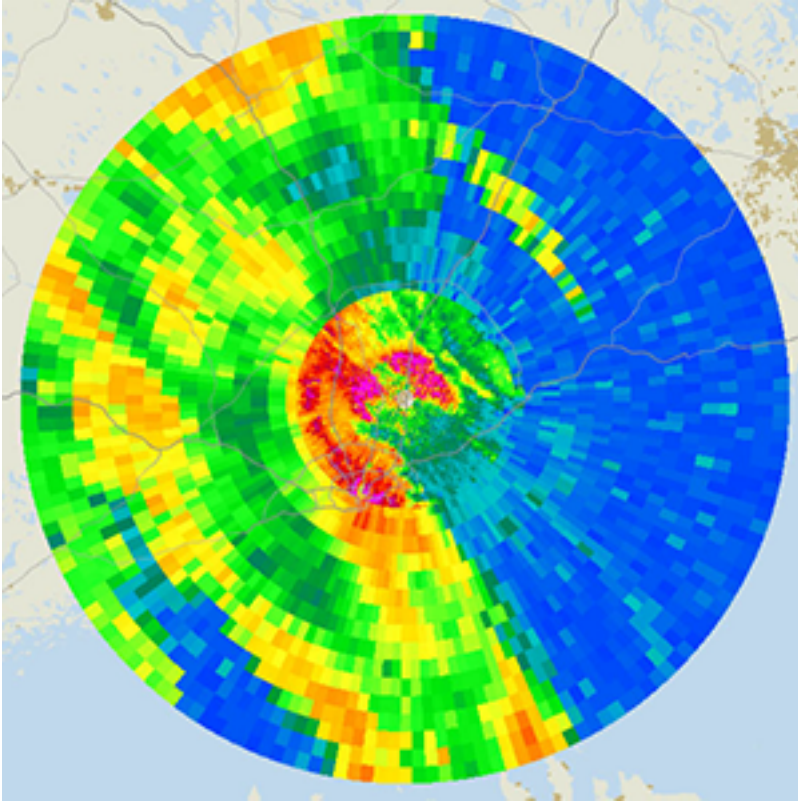


Figure 22 Radar resolution across the detected area

Many radar products are affected by the curvature of the Earth. A radar beam transmitted at a  $0^\circ$  vertical angle from the radar site on a flat environment would be 780 meters above ground at 100 km distance, before accounting for atmospheric refraction. While all IRIS Focus radar products are corrected for curvature and refraction effects, weather phenomena from below the curvature threshold cannot be detected.

The following image shows a vertical cross-section of a typical volume scan action. The image is corrected for earth curvature. Note how the vertical resolution increases with longer horizontal distance. The same applies to horizontal resolution.

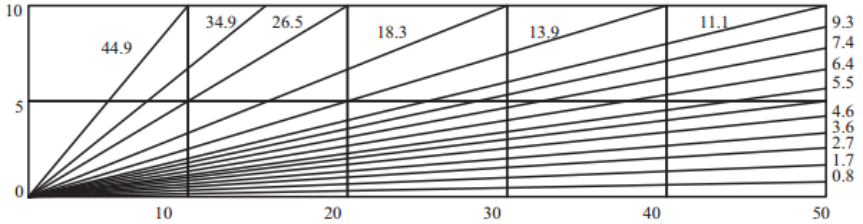


Figure 23 Example of 15-tilt Volume Scan

### 5.1.3 Data Flow

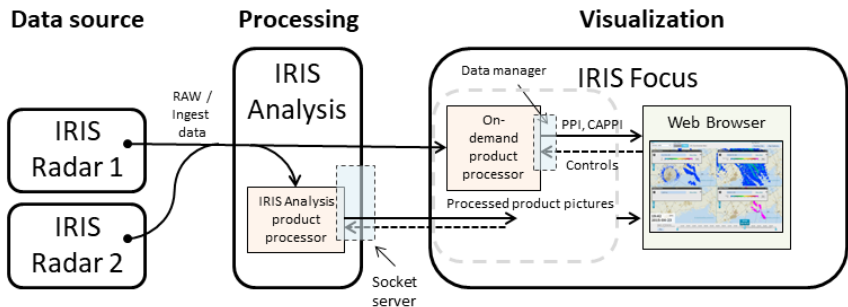


Figure 24 IRIS Focus Data Flow

The IRIS back-end collects data in different configurations, which are defined as *tasks* in IRIS Analysis. Tasks are sets of operating parameters for the radar hardware and signal processing components, for example:

- Surveillance **PPI** scan at a single elevation angle
- Complete volume scan at multiple elevation angles
- Wind velocity scan

Each task type provides different source data. Users can select the task type when selecting an on-demand radar product to display in IRIS Focus.

### 5.1.4 Data Types

Radar product data type defines what is calculated from the received radar pulse reflections.

The data types are used in both IRIS Analysis and on-demand products.

- In IRIS Analysis products, the data type is indicated in the radar product name.
- In on-demand products, you can select the intended data type from the drop-down menu on the **Weather Products** pane.

Data types in IRIS Focus never use letters from the Greek alphabet, and are always written in uppercase, even when signal processing and meteorological conventions use subscript. For example, instead of  $\Phi_h$ , IRIS Focus uses PHIH.

Horizontally and vertically polarized pulses are generally abbreviated in the data types as H and V. Data types that use both sent and received signals as input include a combination of letters H and V to describe the process. For example, HV refers to horizontal transmit and vertical receive.

Table 8 IRIS Focus Data Types

Data type	Definition	Description
HCLASS	Hydrometeor Classification	Estimated hydrometeor type in the precipitation area.
KDP	Specific Differential Phase	An indicator of the rate of change of the phase difference between horizontally and vertically polarized pulses of the radar. A greater horizontal shift results in a positive KDP value, and a greater vertical shift results in a negative KDP value. Typical cause for a high KDP area is heavy rain.
LDRH (LDRV)	Linear Depolarization Ratio H to V (or V to H).	The ratio of cross-polar to co-polar reflectivity measured in dB.
PHIH (PHIV)	Horizontal (or Vertical) Differential Phase	Phase difference for the total round trip between radar and the volume where the signal is reflected.  PHIH is measured between HH and HV channels. PHIV is measured between VV and VH channels.
PHIDP	Differential Phase	The phase difference due to propagation between the HH and VV channels of the radar.
RHOHV (RHOH/RHOH)	Correlation coefficient between HH and VV (or HH and HV / VV and VH) channels )	Higher (>0.95) values indicate uniform precipitation areas and lower values more mixed hydrometeor types, such as melting snow, wet snowflakes, or airborne debris.
SNR	Signal to Noise Ratio	Generic measurement of signal-noise ratio in dB.
SQI	Signal Quality Index	A value between 0 ... 1 that measures the signal's Doppler coherency, that is the correlation between the signal and its Doppler lag. <ul style="list-style-type: none"> <li>• 0 indicates white noise</li> <li>• 1 is the perfect Doppler point target</li> </ul>
T	Total Reflectivity	Total power returned to the radar in reflectivity units. It typically represents the horizontal reflectivity without ground clutter correction.

Data type	Definition	Description
TV (TE)	Total Vertical (HV Enhanced) Reflectivity	Total reflectivity from the vertical polarization channel (TV) and combination of the horizontal and vertical channel (TE).
V	Velocity	Average radial velocity (towards or away from the radar) of detected hydrometeor areas.
VC	Corrected Velocity	Same as Velocity, but corrected for effects of range folding and velocity folding.
W	Spectral Width	Variability of Doppler velocity values within the measurement area.
Z	Reflectivity	Usually referred to as dBZ in professional literature. It is the common data type that measures radar signal reflectivity, and is used to estimate precipitation intensity from that. All Z measurements are corrected for ground clutter.
ZV (ZE)	Vertical (HV Enhanced) Reflectivity	Total reflectivity from the vertical polarization channel (ZV) and combination of the horizontal and vertical channel (ZE). Corrected for ground clutter.
ZC	Corrected Reflectivity	Same as Z, but corrected for attenuation and beam blockage effects.
ZDR	Differential Reflectivity	The ratio of SNR in the horizontal channel to the SNR in the vertical channel.  Positive values indicate more prominent horizontal echoes and negative values more prominent vertical echoes.  Larger hydrometeor sizes are usually identified by high positive ZDR values.
ZDRC	Corrected Differential Reflectivity	Same as ZDR, but corrected for attenuation and beam blockage effects.

#### More Information

- [Radar Product Codes \(page 61\)](#)
- [On-demand Radar Products \(page 65\)](#)
- [IRIS Analysis Radar Products \(page 83\)](#)

## 5.2 Radar Product Codes

All radar products are identified by a product code that shows the relevant characteristics of that product.

The codes are specified in IRIS Analysis in the following format:

[Product type]-[Data type]-[Range]

For example, a product called **PPI-Z-400** is:

- **PPI**  
PPI radar product.  
See [On-demand Plan Position Indicator \(PPI\)](#) (page 76).
- **Z**  
Measuring reflectivity in dBZ.  
See [Data Types](#) (page 59).
- **400**  
Up to horizontal range of 400 km.

The **Weather Products** pane lists radar products by their product codes.

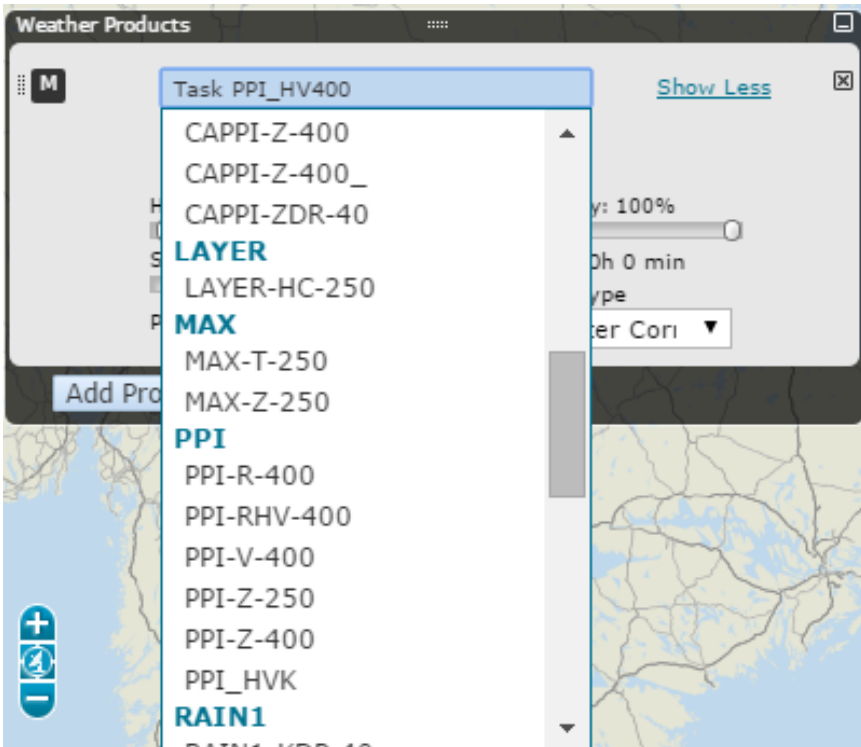


Figure 25 Radar Product Code Examples

**More Information**

- [On-demand Radar Products \(page 65\)](#)
- [IRIS Analysis Radar Products \(page 83\)](#)
- [Data Types \(page 59\)](#)
- [IRIS Product Family \(page 10\)](#)

## 5.3 Radar Product Colors

All radar product visualizations are drawn on the map using an editable color scale gradient, which illustrates the intensity of the detected weather phenomena or values of the received signal. The default color scales are useful for most conditions, and you can edit them further with the built-in color scale editor.

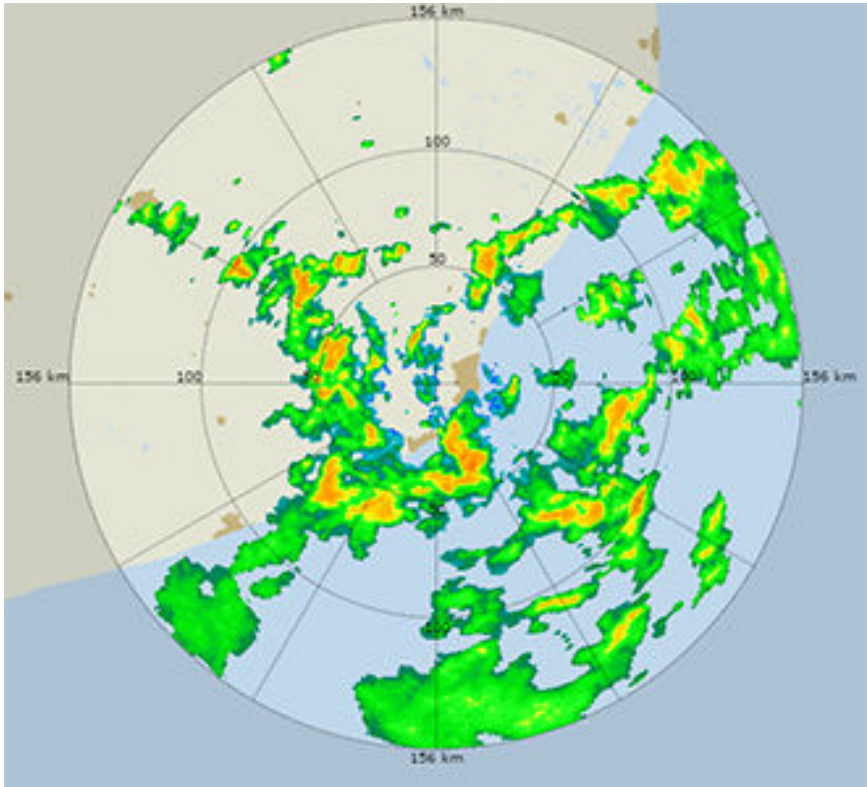


Figure 26 Signal reflectivity in precipitation

**More Information**

- [Color Scale Editor \(page 21\)](#)

## 5.4 Radar Product Smoothing

As they are processed, all radar products are rasterized as 2D bitmap images to be displayed on top of the map view area. The bitmap image is calculated by interpolation from the whole three-dimensional volume data.

On-demand radar products allow you to set a smoothing effect on the weather data layer. The smoothing value sets how close the radar product pixels must be in meters before their quantitative values are blended together. Larger values result in a heavily smoothed area, while a value of 0 disables smoothing completely.

Smoothing is only performed on the rasterized bitmap data. It does not take the vertical dimension of measurements into account.

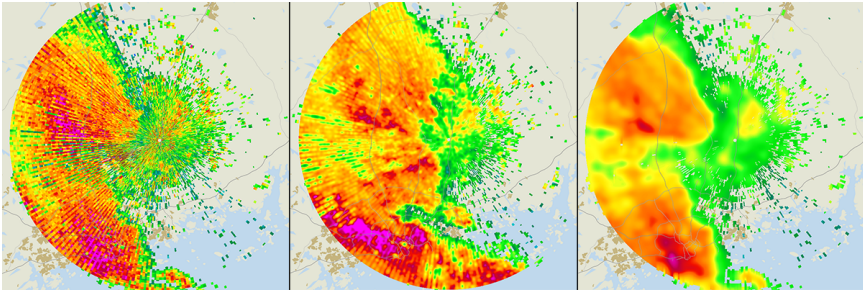


Figure 27 Smoothing Level Examples



Heavy smoothing may lose details that are detectable on lower smoothing levels.

**More Information**

- [On-demand Radar Products \(page 65\)](#)

## 5.5 Radar Product Reflectivity Threshold

Some on-demand radar products allow you to set a reflectivity threshold (dBZ) for the amount of data displayed in the image.

Use the slider to select a value within the range -32 ... 96 dBZ.

Low reflectivity threshold values display more data, while higher reflectivity threshold values filter out all data with reflectivity below the defined threshold to make it easier to focus on the most important data.

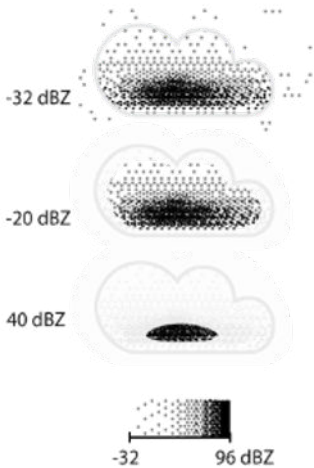


Figure 28 Reflectivity Threshold

#### More Information

- [BASE Threshold Value \(page 67\)](#)
- [THICK Threshold Value \(page 79\)](#)
- [TOPS Threshold Value \(page 82\)](#)

## 5.6 On-demand Radar Products

On-demand radar products displayed in IRIS Focus receive raw data from the IRIS back-end.

The raw volume data from the radar signal processor is stored in the data manager, which makes the data available to the IRIS Focus user interface.

IRIS Focus uses the data manager to read the raw volume data and generate radar products in real-time.

To optimize viewing, as the user pans and zooms the map, the location and size of each pixel changes. The on-demand products recalculate the value of each pixel based on the new geographical definition.

### 5.6.1 On-demand Echo Base (BASE)

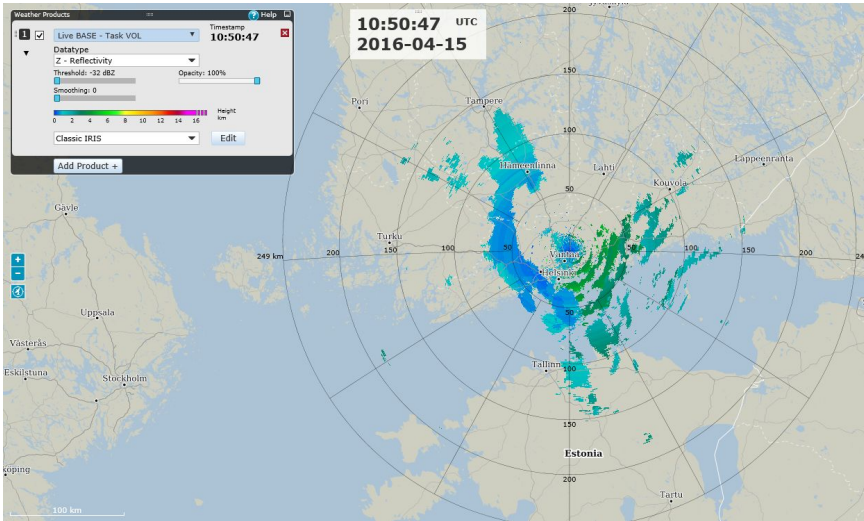


Figure 29 On-demand BASE Example

**BASE** (also known as echo base) is the radar-indicated bottom of an area of precipitation. The system locates the lowest altitude of the defined reflectivity **Threshold** at each pixel location.

**BASE** displays the base level of detected signal echoes, which usually reflects the bottom of the cloud base or precipitation area.



As the following image shows, the minimum height above ground where echo bases can be detected increases with measurement range due to the curvature of Earth.

The opposite of the **BASE** product is the **TOPS** product.

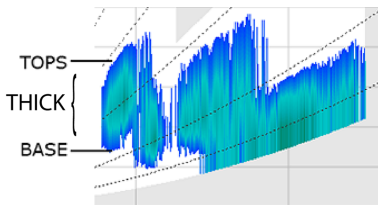


Figure 30 BASE and TOPS Products

**More Information**

- [On-demand Echo Tops \(TOPS\) \(page 81\)](#)
- [On-demand Echo Thickness \(THICK\) \(page 79\)](#)

**5.6.1.1 BASE Threshold Value**

The configurable threshold value defines the minimum reflectivity that must present to be displayed in the image.

The first of the following images shows **BASE** with a -20 dBZ threshold defined. In this image, the lower, less dense cloud is shown in the displayed image.

In the second image, with a 40 dBZ threshold, the lower cloud is not shown in the displayed image because its reflectivity value is lower than the defined threshold.

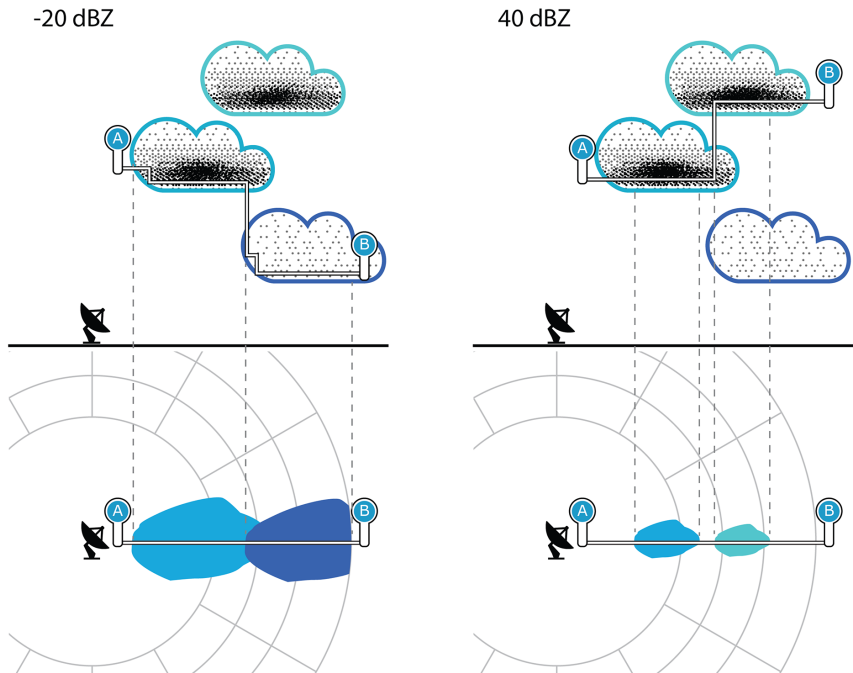


Figure 31 **BASE**, -20 and 40 dBZ Thresholds

**More Information**

- [Radar Product Reflectivity Threshold \(page 64\)](#)

### 5.6.1.2 Calculating On-demand BASE

For each pixel in the image, the algorithm calculates on-demand **BASE** as follows:

1. Calculates the azimuthal equidistant (AzEQ) point around the radar.
2. Uses co-ordinates in AzEQ to calculate the distance from the radar (vector length).
3. Checks if the AzEQ point is in the radar's range for the **BASE** product.
4. Calculates the azimuth angle to radar ( $\text{atan2}$ ).
5. Determines the lowest sweep with a reflectivity value over the threshold.
6. Optimizes the calculation of the minimum height by calculating the height of the lowest point with reflectivity over threshold from the height of the lowest sweep.  
The calculation uses the `minHeightOfSweep` by calculating downwards until reflectivity is no longer present.

The minimum height of a sweep represents the height with the minimum reflectivity as defined in the threshold.

The algorithm scans downwards until it finds a height for which there is no reflectivity value over the threshold. The last height with a valid reflectivity value is the result.

The final output of the product is a color-coded map of echo BASE heights for the selected dBZ threshold.

### 5.6.2 On-demand Constant Altitude Plan Position Indicator (CAPPI)

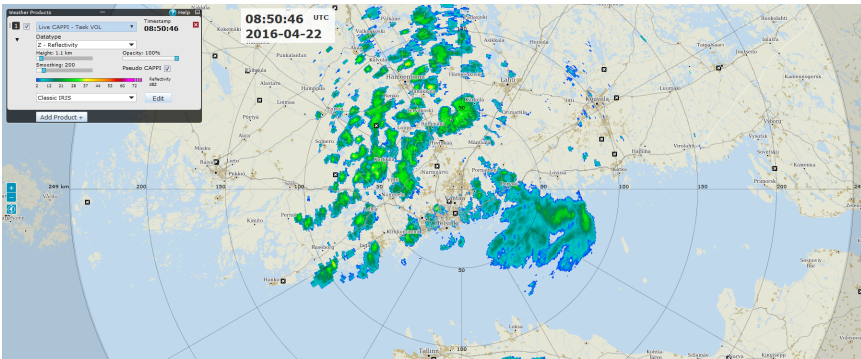


Figure 32 On-demand CAPPI Example

On-demand **CAPPI** (Constant Altitude PPI) displays a horizontal cross-section of the signal reflectivity at the selected altitude.

In the following cross-section image, the **CAPPI** product is calculated for a defined 5 km constant altitude. The red lines represent the interpolation from the ray data while the black line represents the constant altitude.

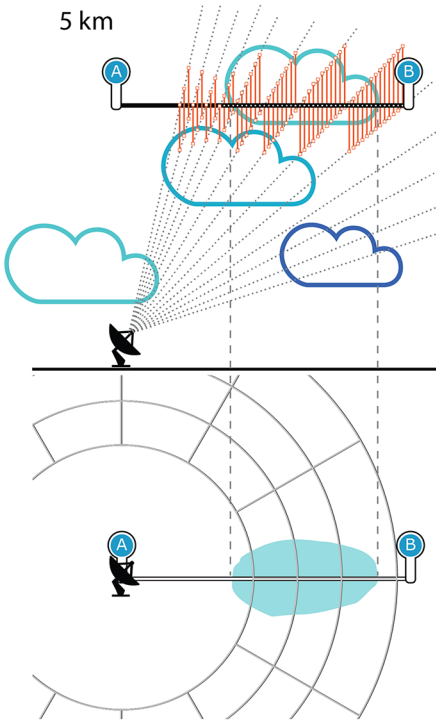


Figure 33 CAPPI Measuring the Defined Altitude



The image does not show the cloud reflectivity values that are included in an actual **CAPPI** product.



Optional radar product smoothing is performed on the bitmap image, not on the volume data.

#### More Information

- [Cross Section Tool \(page 23\)](#)
- [On-demand Plan Position Indicator \(PPI\) \(page 76\)](#)
- [Radar Product Layer Settings \(page 16\)](#)

### 5.6.2.1 CAPPI Height Value

The configurable height (km) defines the altitude of the cross-section displayed in the image.

Use the **Height** slider to define the displayed **CAPPI** height.

The first of the following images shows the weather displayed in a **CAPPI** with an altitude of 3 km.

The second image shows the weather displayed in a **CAPPI** with an altitude of 5 km.



A and B in the image indicate start and end of a vertical cross section through the radar's scan volume.

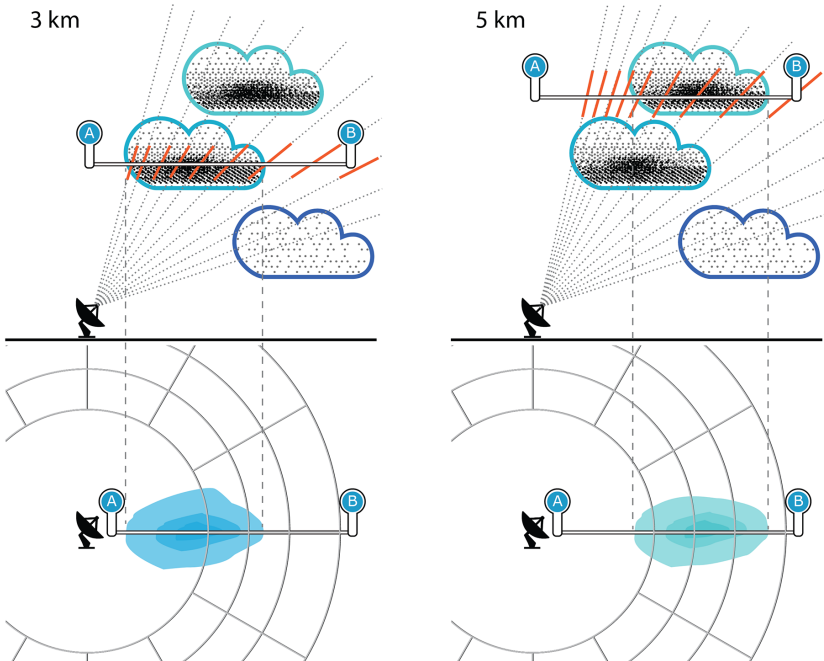


Figure 34 CAPPI with 3 km and 5 km Heights

### 5.6.2.2 Pseudo CAPPI

Select the **Pseudo CAPPI** option to add pseudo **CAPPI** calculations to your **CAPPI** product.

**Pseudo CAPPI** attempts to visualize those parts within the radar range that are not measured directly, including, for example, the area immediately around the radar, and the volume border with the highest altitude.

In the first cross-section image, the **CAPPI** product is calculated from ray data for a defined constant altitude. The red lines represent the interpolation from the ray data while the black line represents the constant altitude.

The heavy red lines in the second cross-section image indicate how the **Pseudo CAPPI** product uses the value of the closest ray to extend the **CAPPI** product above and below the constant altitude.

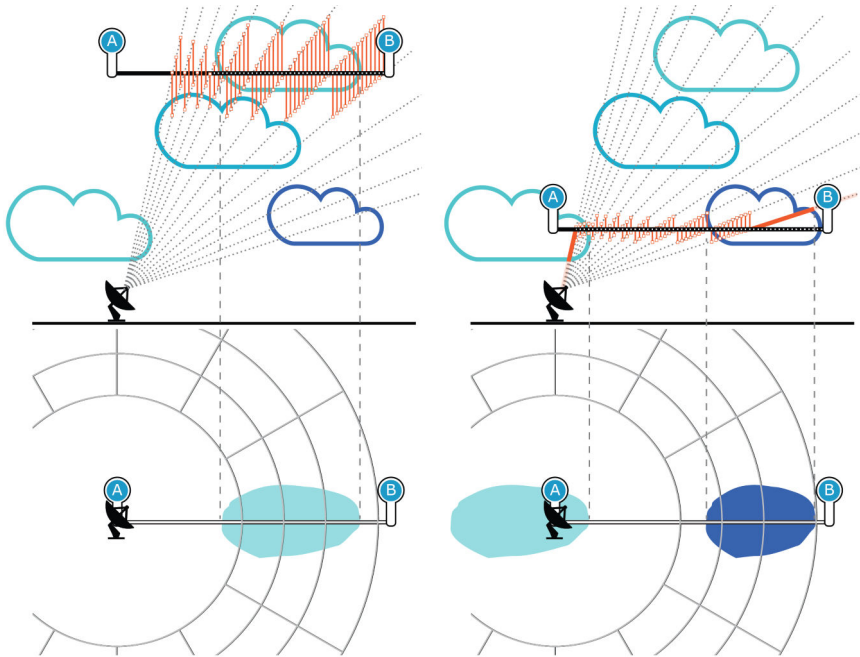


Figure 35 **Pseudo CAPPI Extending from CAPPI**



The image does not show the cloud reflectivity values that are included in an actual **CAPPI** product.



For **Pseudo CAPPI**, not all data comes from the **CAPPI** height and may be quite far from the actual height.

### 5.6.2.3 Calculating On-demand CAPPI

A **CAPPI** product is displayed on screen by reading the whole scan volume data and calculating a horizontal cross-section at the selected altitude. The cross-section is drawn as a rasterized bitmap. The directly measured data is only from the areas where radar pulses intersect the selected altitude layer. The rest of the bitmap is interpolated both horizontally and vertically from known values.

Calculating a **CAPPI** product requires that a full **PPI** volume scan is completed first. A **CAPPI** product is only updated when the whole volume has been scanned and processed.

For each pixel in the image, the algorithm calculates the **CAPPI** product as follows:

1. Checks the Azimuthal Equidistant (**AzEq**) cylinder volume from the 2 nearest (in elevation) volume data points of the **CAPPI** constant altitude plane point.
2. Linearly interpolates the volume data points at the nearest elevations to define a single **CAPPI** plane data point value.

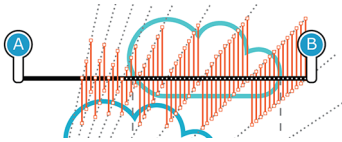


Figure 36 Calculating the AzEq Cylinder Volume From 2 Nearest Data Points

#### More Information

- [Calculating On-demand PPI \(page 78\)](#)

### 5.6.3 On-demand Maximum Data (MAX)

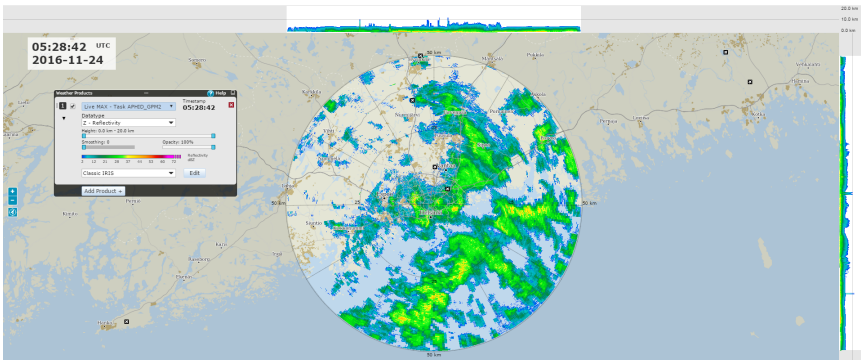


Figure 37 On-demand MAX Example




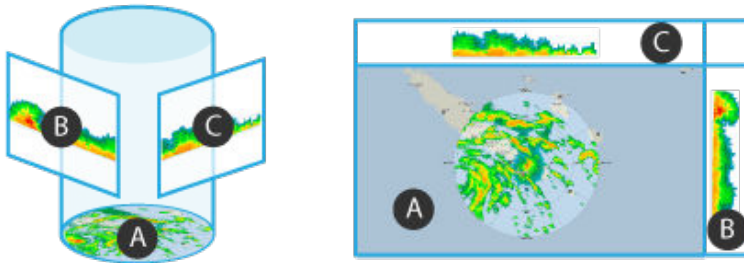


Figure 38 **MAX** Views

- A Horizontal maximum projection
- B North-South maximum projection
- C East-West maximum projection



Hover over the measured area in either the map view or side panel for detailed information about the measured area.

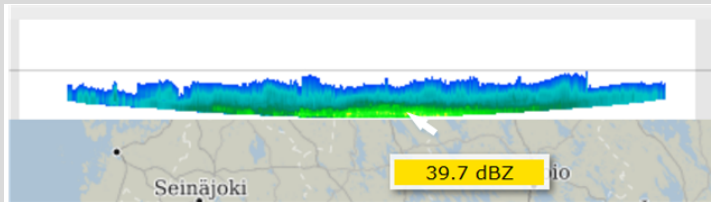

### 5.6.3.1 MAX Height Values

The configurable heights defines the measured area above sea level (MSL) for calculating the **MAX** product

Use the **Height** slider to define the displayed **MAX** upper and lower heights.

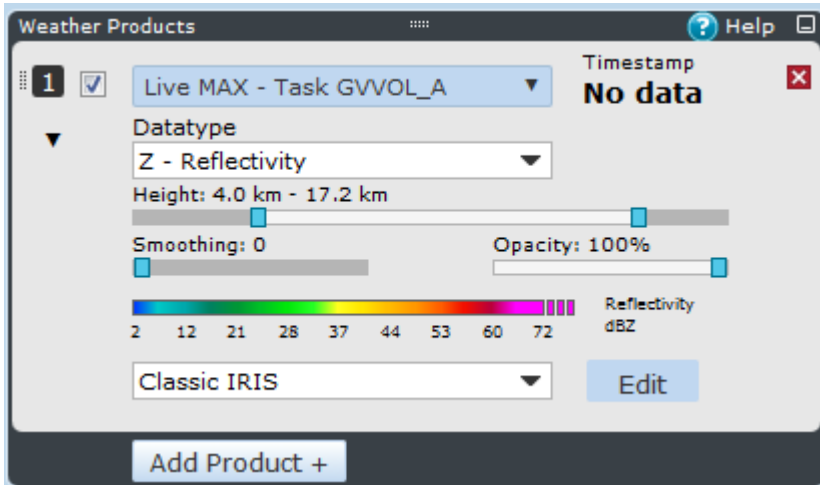


Figure 39 MAX Settings



In most cases, do not use smoothing as the maxima can be diminished by the smoothing filter.



You can check the height values in the top right of the display.

#### More Information

- [Radar Product Smoothing \(page 64\)](#)

### 5.6.3.2 Calculating On-demand MAX

For each pixel in the image, the algorithm calculates **MAX** as follows:

1. Calculates the azimuthal equidistant (**AzEQ**) cylinder volume around the radar.
2. Uses co-ordinates in **AzEQ** to calculate the distance from the radar (vector length).
3. If the point is in the radar's range for that particular product, the algorithm calculates the azimuth angle to the radar.
4. Using the previous calculations, the algorithm calculates the maximum data value of the specific air column.

The horizontal maximum projection is calculated by taking the highest data value in the user-specified layer over each pixel.

The east-west maximum projection is obtained by taking the maximum reflectivity for each pixel along the corresponding north-south line.

The north-south maximum projection is obtained by taking the maximum reflectivity along east-west lines.

## 5.6.4 On-demand Plan Position Indicator (PPI)

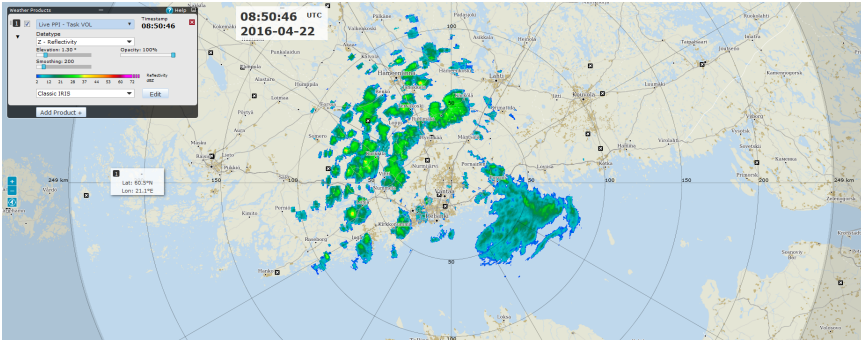


Figure 40 On-demand PPI Example

**PPI** (Plan Position Indicator) displays the signal reflectivity on a surface layer that is formed as the radar performs a full 360° horizontal sweep at a constant elevation.

**PPI** is the classical radar view that is used for visual weather surveillance and air traffic control, among other uses. The products are refreshed as soon as the sweep is completed instead of waiting for the end of a full volume scan.

In the following image, the **PPI** scan is performed on the highlighted elevation.

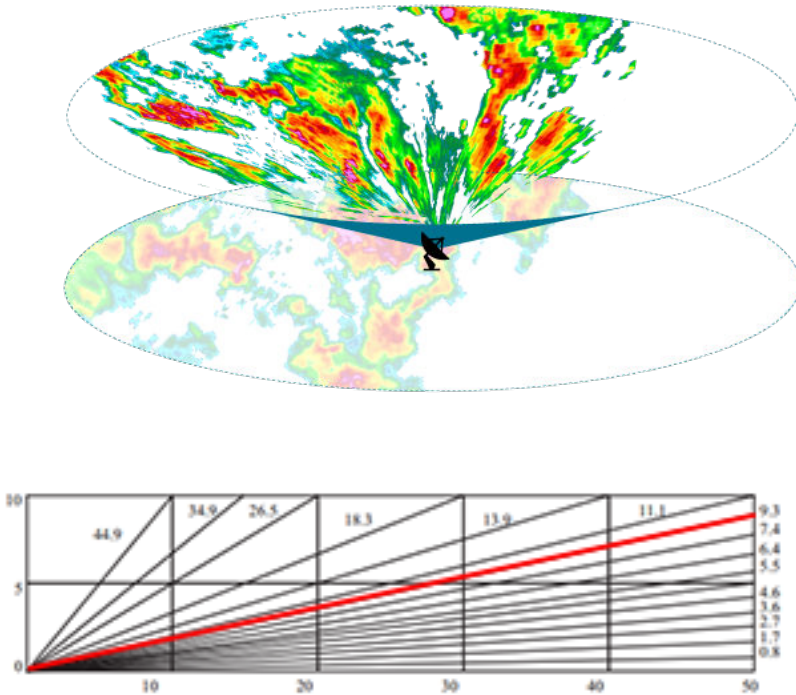


Figure 41 PPI Measuring the Defined Elevation

### 5.6.4.1 PPI Elevation Angle

The configurable elevation angle defines which elevation angle sweep is displayed in the image.

Use the elevation slider to define the displayed **PPI** elevation.

The first image shows **PPI** with a 45° elevation angle defined. In this image, the high-level clouds are displayed in the IRIS product.

The second images shows **PPI** with a 20° elevation angle defined. In this image, the lower-level clouds are displayed in the IRIS product.



A and B in the image indicate start and end of a vertical cross section through the radar's scan volume.

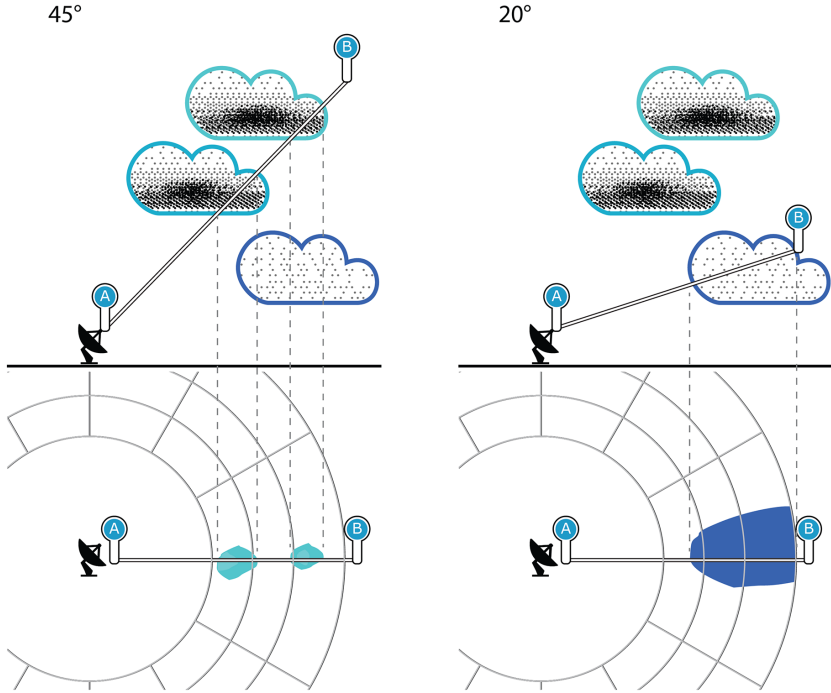


Figure 42 PPI With Elevation Angles of 45° and 20°

### 5.6.4.2 Calculating On-demand PPI

For each pixel in the image, the algorithm calculates on-demand **PPI** as follows:

1. Convert pixel coordinates to map coordinates.
2. Convert the map coordinates to Azimuthal Equidistant (AzEq) around the radar.
3. Calculate distance to radar (vector length) and azimuth angle to radar  $\text{atan2}$ .
4. Calculate the actual value at that point using a sweep parameter.

## 5.6.5 On-demand Echo Thickness (THICK)

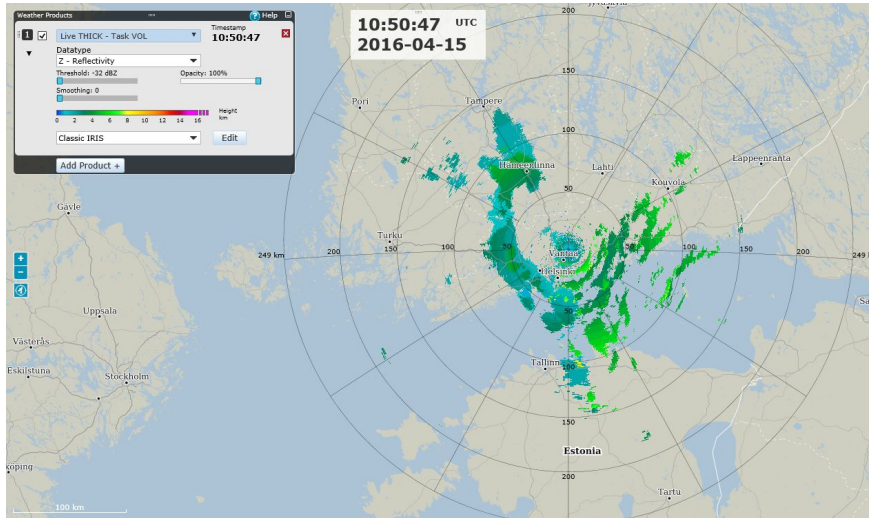


Figure 43 On-demand **THICK** Example

**THICK** is the radar-indicated cloud cover thickness of an area of precipitation.

**THICK** calculates the difference between the **BASE** and **TOPS** products.

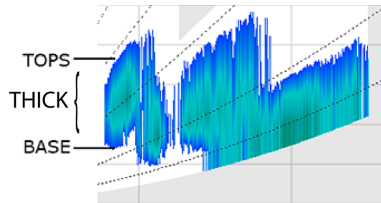


Figure 44 **THICK** with **BASE** and **TOPS**

### More Information

- On-demand Echo Base (BASE) (page 66)
- On-demand Echo Tops (TOPS) (page 81)

### 5.6.5.1 THICK Threshold Value

The configurable threshold value defines the minimum reflectivity that must be present to be displayed in the image.

The first of the following images shows **THICK** with a -20 dBZ threshold defined. In this image, more data is displayed in the image, including the lower, less dense cloud content.

In the second image, with a 40 dBZ threshold, a much smaller set of data comprising only cloud cover with a reflectivity of 40 dBZ or higher, is displayed.

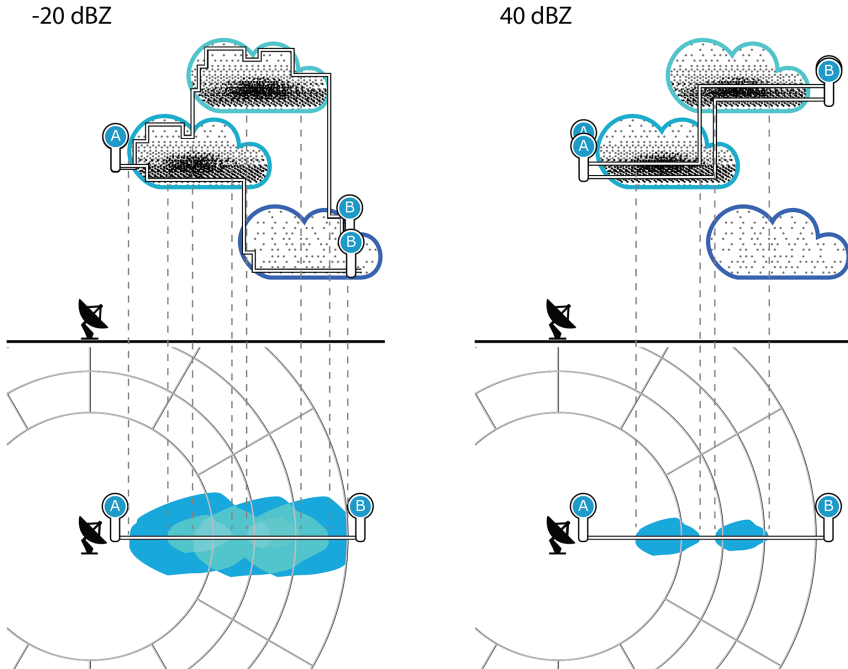


Figure 45 THICK with -20 dBZ and 40 dBZ Thresholds

**More Information**

- [Radar Product Reflectivity Threshold \(page 64\)](#)

### 5.6.5.2 Calculating On-demand THICK

IRIS Focus calculates **THICK** by calculating both **TOPS** and **BASE** at a point and subtracting **BASE** from **TOPS**.

**More Information**

- [Calculating On-demand BASE \(page 68\)](#)
- [Calculating On-demand TOPS \(page 83\)](#)

## 5.6.6 On-demand Echo Tops (TOPS)

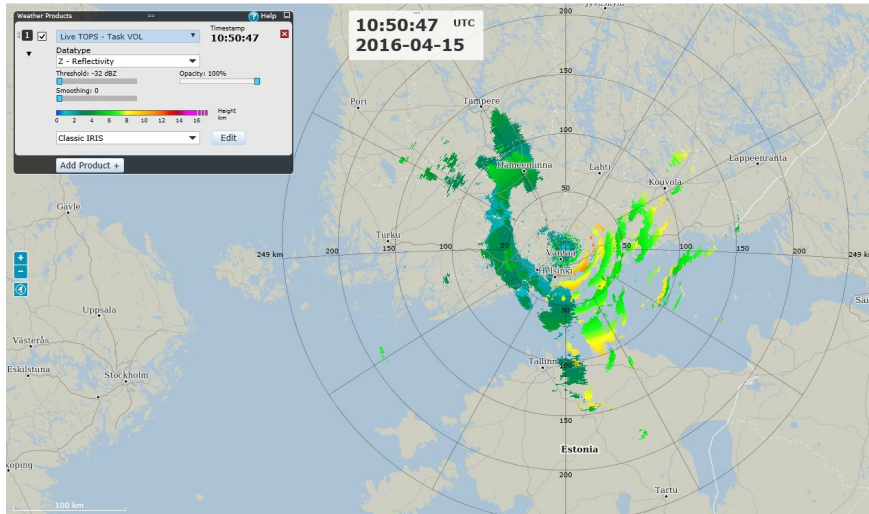


Figure 46 On-demand **TOPS** Example

**TOPS** (also known as echo tops) is the radar-indicated top of an area of precipitation. The system locates the highest altitude of the defined reflectivity threshold at each pixel location.

**TOPS** displays the detected signal echoes above the value defined in the **Threshold** (dBZ), which usually measures the top of the precipitation area or cloud cover.

**TOPS** can be useful when identifying strong updrafts, severe weather, and hail.

The opposite of the **TOPS** product is the **BASE** product.

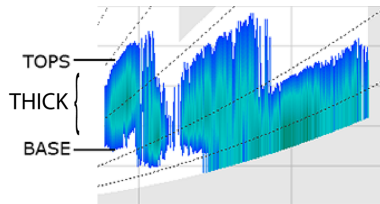


Figure 47 **BASE** and **TOPS** Products

### More Information

- On-demand Echo Base (BASE) (page 66)
- On-demand Echo Thickness (THICK) (page 79)

### 5.6.6.1 TOPS Threshold Value

The configurable threshold value defines the minimum reflectivity that must present to be displayed in the image.

The first of the following images shows **TOPS** with a -20 dBZ threshold defined. In this image, the higher, less dense parts of the cloud are shown in the displayed image. In **TOPS**, using lower threshold values can help determine the height of surrounding precipitation. For example, a 50 dBZ TOP 1 km above the freezing level can be produced only by a vigorous convective storm, and is probably caused by the presence of hail.

In the second image, with a 40 dBZ threshold, higher part of the cloud is not shown in the displayed image because its reflectivity value is lower than the defined threshold.

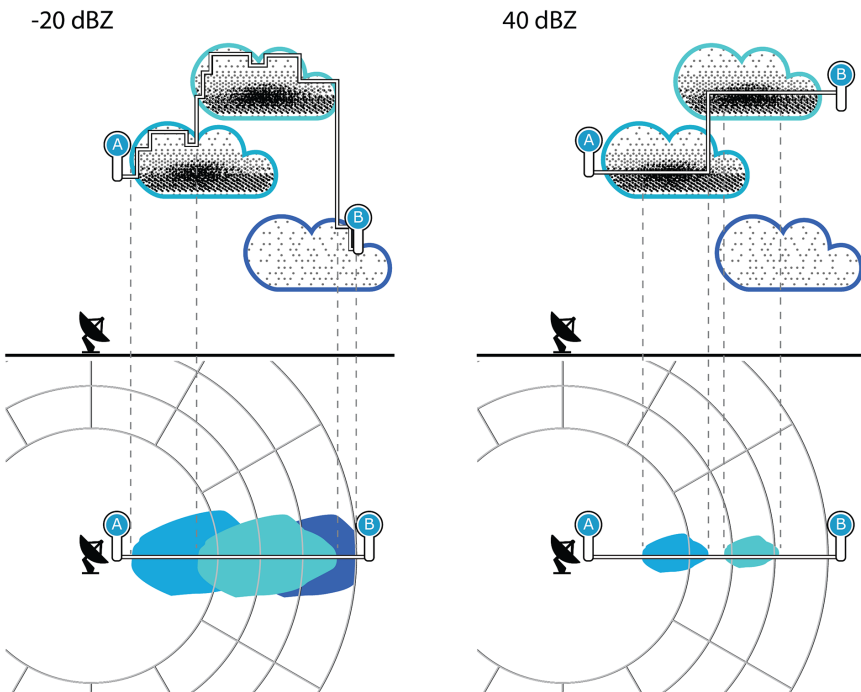


Figure 48 TOPS with -20 dBZ and 40 dBZ Thresholds

#### More Information

- [Radar Product Reflectivity Threshold \(page 64\)](#)

### 5.6.6.2 Calculating On-demand TOPS

For each pixel in the image, the algorithm calculates on-demand **TOPS** as follows:

1. Calculates the azimuthal equidistant (**AzEQ**) point around the radar.
2. Uses coordinates in **AzEQ** to calculate the distance from the radar (**vector length**).
3. Checks if the **AzEQ** point is in the radar's range for the **TOPS** product.
4. Calculates the azimuth angle to radar (**atan2**).
5. Determines the highest sweep with a reflectivity value over the threshold.
6. Optimizes the calculation of the maximum height by calculating the height of the highest point with reflectivity over threshold from the height of the highest sweep.  
The calculation uses the **maxHeightOfSweep** by calculating upwards until reflectivity is no longer present.

The maximum height of a sweep represents the height with the minimum reflectivity as defined in the threshold.

The algorithm scans upwards until it finds a height for which there is no reflectivity value over the threshold. The last height with a valid reflectivity value is the result.

The final output of the product is a color-coded map of echo top heights for the selected dBZ threshold.

## 5.7 IRIS Analysis Radar Products

IRIS Analysis radar products are generated by signal processing components in IRIS Analysis. IRIS Focus reads the list of products, and allows you to select which one to display on the IRIS Focus map view.

The radar products and their settings are pre-configured, and only displayed in IRIS Focus. They cannot be edited in the IRIS Focus map view.

There is no upper limit to the number of pre-configured radar products that IRIS Focus can have.

The raw volume data is not stored for later processing. All the information that is not used in radar product generation is lost.

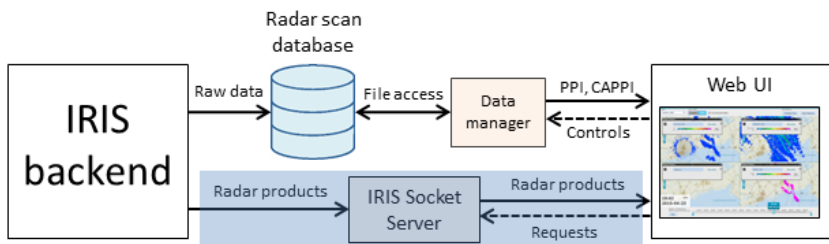


Figure 49 IRIS Analysis Product Data Flow to IRIS Focus

The radar products are rasterized into 2D bitmap images, based on the back-end signal processing settings. The images are sent to the IRIS Focus web user interface through the IRIS Socket Server interface.

When you select a pre-configured product in IRIS Focus, IRIS Focus polls the Socket Server and loads the image.

For information on setting up IRIS Analysis products, see *IRIS Product and Display Guide*.

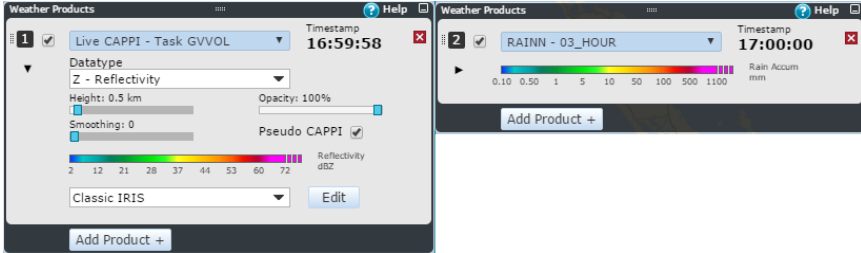


Figure 50 On-demand and IRIS Analysis Product Settings

**More Information**

- [IRIS Focus Overview \(page 9\)](#)
- [Radar Product Codes \(page 61\)](#)
- [Data Types \(page 59\)](#)

**5.7.1 Supported IRIS Analysis Products**

The following tables provide an overview of the IRIS Analysis products supported in IRIS Focus.

Table 9 IRIS Analysis Products Supported in IRIS Focus

Product	Description
<b>BASE</b> Echo Base	<b>BASE</b> is used to determine the base of echoes.
<b>BEAM</b> Antenna Beam Pattern	<b>BEAM</b> is a full screen cross-section format image showing range-averaged intensity in azimuth and elevation coordinates. <b>BEAM</b> is used during calibration and alignment and to verify antenna patterns.
<b>CAPPi</b> Constant Altitude PPI	<b>CAPPi</b> (Constant Altitude PPI) is a horizontal cut at a selected altitude used for surveillance and severe storm identification. It is also useful for monitoring the weather at specific flight levels for air traffic applications.

Product	Description
<b>HMAX</b> Height of Maximum Intensity Product	<b>HMAX</b> displays the height of the maximum data above each output pixel. This product requires a volume scan.
<b>LAYER</b>	<b>LAYER</b> can compute layer averages of any polar data types in the ingest files. <b>LAYER</b> can also convert to liquid first and compute <b>VIL Density</b> . When computing <b>VIL Density</b> , the output is in g/m <sup>3</sup> .
<b>MAX</b> Maximum Data	<b>MAX</b> shows the maximum data over each pixel as well as the East-West and North-South maximum projects in side panels.
<b>MLHGT</b> Melting Level Height	<b>MLHGT</b> displays a map of the melting layer altitudes.
<b>MVF</b> Motion Vector Field	The motion vector field (MVF) describes the general <i>motion</i> of weather in a set of products. In IRIS Focus, motion vector fields are illustrated with wind barb symbols. IRIS Focus calculates current motion vectors (MVF) as the first step in nowcasting calculations.
<b>PPI</b> Plan Position Indicator	<b>PPI</b> is a full screen image used primarily for weather surveillance purposes.
<b>RAINI</b> Hourly Rain Accumulation	<b>RAINI</b> is hourly rainfall accumulation.
<b>RAIN-N</b> N-Hour Rain Accumulation	<b>RAIN-N</b> is rainfall accumulation of the last N hours, where N is selected by the user.
<b>RHI</b> Range Height Indicator	<b>RHI</b> is a full screen image showing the detailed cross-sectional structure of a storm, used for identifying severe storms, hail and bright band.
<b>RTI</b> Range Time Indicator	<b>RTI</b> displays time along the horizontal axis and the vertical axis displays range from the radar. Often used for manual scans when observing a fixed target.
<b>SRI</b> Surface Rainfall Intensity	<b>SRI</b> (Surface Rainfall Intensity) provides input for the <b>RAINI</b> product to obtain the best possible estimates of accumulated precipitation even at longer ranges from the radar.
<b>SHEAR</b> Wind Shear	<b>SHEAR</b> detects wind shear in the atmosphere, allowing the detection of microbursts, gust fronts, mesocyclones, cold fronts, and atmospheric waves.
<b>SLINE</b> Shear Line (frontal boundary)	<b>SLINE</b> (shear line, or frontal boundary) marks the transition between two air masses on the image.

Product	Description
<b>THICK</b> Echo Thickness	<b>THICK</b> shows the thickness of cloud echoes. <b>THICK</b> is the same as the difference between the <b>TOPS</b> and <b>BASE</b> values. The <b>THICK</b> product also computes the average reflectivity in the layer identified by the selected <b>dBZ Contour</b> .
<b>TOPS</b> Echo Tops Map	<b>TOPS</b> is a color-coded contour map of the top of a selected dBZ level. Either Z or ZT can be used as the basis for the estimate.
<b>VAD</b> Velocity Azimuth Display	<b>VAD</b> is a display of the mean Doppler velocity at a given range as a function of the azimuth angle as the radar antenna rotates through an azimuth scan at a constant elevation.
<b>VIL</b> Vertically Integrated Liquid	<b>VIL</b> is a color-coded map of the estimated depth of water (in mm) contained in a selectable atmospheric layer. This is an excellent indicator of severe storms.
<b>VVP</b> Velocity Volume Processing	<b>VVP</b> (Velocity Volume Processing) provides line graphs or time against height cross-sections of wind speed, wind direction and divergence against height.
<b>WARN</b> Warning/Centroid	<b>WARN</b> is automatic warning and centroid plotting. Automatic warnings can be set for protected areas and user-selectable warning criteria. Output is a warning message and a situation overlay showing the centroid locations of storm features, such as high <b>VIL</b> or reflectivity.
<b>WIND</b> Wind Speed and Direction	<b>WIND</b> displays wind speed and direction with either wind bars or wind strings. You can specify the range and height of the data, and the range and azimuth spacing of the lines that are displayed.

## 5.7.2 Motion Vector Field (MVF)

The motion vector field (MVF) describes the general *motion* of weather in a set of products. In IRIS Focus, motion vector fields are illustrated with wind barb symbols.

IRIS Focus calculates current motion vectors (MVF) as the first step in nowcasting calculations.

You can check the **MVF** product to check the direction and velocity of precipitation in the atmosphere and to verify the nowcasting configurations.




Figure 51 MVF Example

## Motion Vector Indicators

Motion vectors on the display show the direction from which the weather is moving. Short barbs and pennants on the vectors indicate the speed, similar to wind barbs on wind displays. A circle indicates calm conditions.

Table 10 MVF Wind Barb Symbols

Symbol	Speed (m/s)	Wind speed (knots)
○	Calm	Calm
—	<1.5	<3
—┘	2.6	5
—┘┘	5.1	10
—┘┘┘	7.7	15
—┘┘┘┘	10.2	20
—┘┘┘┘┘	25.7	50

Symbol	Speed (m/s)	Wind speed (knots)
	38.5	75

IRIS Focus calculates the **MVF** by passing a configurable number of a radar products through a nowcasting algorithm.

Because **MVF** generation can take some time, IRIS Focus generates only one **MVF** product per site. Once this is configured, IRIS Focus generates **MVF** products automatically when a new product of the configured type arrives from IRIS.



You must configure the **MVF** before you can start using nowcasting. Many users perform the configuration during installation, but it can also be done later.

After configuration, IRIS Focus generates the **MVF** automatically when a new product of the configured type arrives from IRIS. **MVF** products are not calculated for historical input products.

#### More Information

- [Nowcasting \(page 30\)](#)
- [Configuring Nowcasting \(page 107\)](#)

### 5.7.2.1 Calculating Motion Velocity

IRIS Focus nowcasting uses the TREC algorithm to determine the predicted velocity of fields in the motion vector field (**MVF**).

#### TREC Algorithm

The TREC (tracking radar echoes by correlation) algorithm is an iterative search method based on a maximum cross-correlation criteria used to estimate motion in a vector grid between consecutive images.

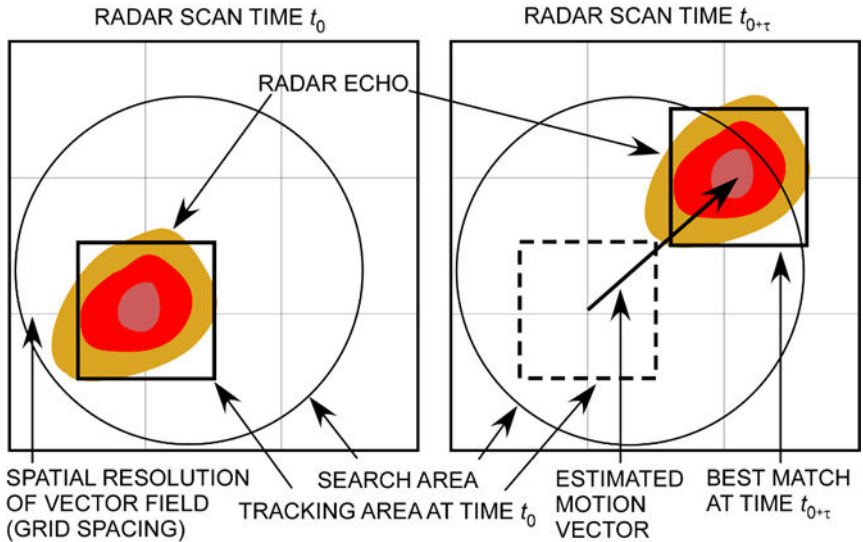


Figure 52 Calculating TREC

$t_0$  Current time  
 $t_{t_0+\tau}$  Nowcasting predicted time

1. Calculate the cross-correlation coefficient corresponding to the data within this subgrid and to a time in the future ( $\tau$ ),  $t_{t_0+\tau}$ .
2. Compute a motion vector between these locations.
3. Repeat for each grid point or a subset of grid points in the data field.

## References

For more information on TREC calculations, see the publically available references. For example:

- Chornoboy, E. S., A. M. Matlin, and J. P. Morgan, 1994: Automatic storm tracking for air traffic control *Lincoln Labs. J.*, **7**, 427–448.
- Li, L. W., W. Schmid, and J. Joss, 1995: Nowcasting of motion and growth of precipitation with radar over a complex orography. *J. Appl. Meteor.*, **34**, 1286–1299.
- Mecklenburg, S., J. Joss, and W. Schmid, 2000: Improving the nowcasting of precipitation in an Alpine region with an enhanced radar echo tracking algorithm. *J. Hydrol.*, **239**, 46–68.
- Rinehart, R. E., and E. T. Garvey, 1978: Three-dimensional storm motion detection by conventional weather radar. *Nature*, **273**, 287–289.
- Rinehart, R. E., 1981: A pattern-recognition technique for use with conventional weather radar to determine internal storm motions. *Atmos. Technol.*, **13**, 119–134.

- Tuttle, J. D., and G. B. Foote, 1990: Determination of the boundary layer airflow from a single Doppler radar. *J. Atmos. Oceanic Technol.*, **7**, 218–232.
- Wolfson, M. M., B. E. Forman, R. G. Hollowell and M. P. Moore, 1999: The growth and decay storm tracker. Preprints, *Eighth Conf. on Aviation, Range, and Aerospace Meteorology*, Dallas, TX, Amer. Meteor. Soc., 58–62.

### 5.7.3 Warning/Centroid (WARN)

**WARN** is automatic warning and centroid plotting.

Automatic warnings can be set for protected areas and user-selectable warning criteria.

Output is a warning message and a situation overlay showing the centroid locations of storm features, such as high **VIL** or reflectivity.

#### 5.7.3.1 Configuring an IRIS Output Device for WARN Products

In IRIS, you must configure the IRIS Focus server as an output device to which IRIS copies **WARN** product files. The output device configuration would look something like the following, except the *Menu alias* and *Recipient host name* fields would be filled in with a name for the output device and with the network address of the FIRE server (don't forget to save and restart IRIS after making changes to output device configurations):

- ▶ 1. In the IRIS terminal window, type: **setup&**  
The IRIS **Setup** utility starts.
2. In the IRIS **Setup** utility, select **Output**.
3. In **Number of Output Devices**, raise the number of devices by 1.

4. Scroll down to the first unconfigured output device and begin configuring the device for IRIS Focus **WARN** products.

The screenshot shows a configuration window titled "Output Device #5" with a "Help" button. The configuration fields are as follows:

Device type	Network
Menu alias	FIRE-FLY
Min time between output	0 sec
File format	IRIS (Def)
Filename format	Default
Compression scheme	None
Notification scheme	None
Target directory	/srv/vaisala/radarsw/product/warn
Copy scheme	SCP
User name	warnreader
Recipient host name	172.24.114.45

Below the configuration fields, there is a section for "Output Device #6" with a "Help" button.


- a. For **Device type**, select **Network**.
  - b. For **Menu alias** type the name of the output device.  
The image shows an example.
  - c. **Recipient host name** type the network address of the IRIS Focus Server.  
The image shows an example.
5. Save your changes and restart IRIS to take the changes into effect.

### 5.7.3.2 Sending WARN Products from IRIS to IRIS Focus

When you have configured and scheduled the **WARN** product, you can start sending **WARN** products over the network to IRIS Focus.

1. In the IRIS terminal window, type: **iris&**  
The IRIS Radar application starts.

2. Select **Menus > Product Output**.
3. In the **Device** menu, select the IRIS Focus device you want to send products to.

 This is the device you configured in [Configuring an IRIS Output Device for WARN Products \(page 90\)](#).

4. Filter the list of output products:

Malatya Product Output NETWORK6 MARKO : DEFAULT

File Menus Device Commands Help

Site Type Product Name Task From To Day Mon Year Files

X6T WARN \* \* \* \* \* \* \* \* 100

Apply Grab All Wild Wild Time Commands

56/16001 Files 363.0K/39994.0M Bytes Default Opt Time

Site	Type	Name	Product-Specific-Parameters	Task	Date
WARN	R	01_04_155			
X6T	WARN	R_01_04_155	SLI 0.05sqkm 1:In 3:Areas	GVVOL_A	13:23:20 15 DEC 2016
X6T	WARN	R_01_04_155	SLI 0.05sqkm 1:In 3:Areas	GVVOL_A	13:11:20 15 DEC 2016
X6T	WARN	R_01_04_155	SLI 0.05sqkm 1:In 3:Areas	GVVOL_A	12:59:20 15 DEC 2016
X6T	WARN	R_01_04_155	SLI 0.05sqkm 1:In 3:Areas	GVVOL_A	12:47:21 15 DEC 2016
X6T	WARN	R_01_04_155	SLI 0.05sqkm 1:In 3:Areas	GVVOL_A	12:35:20 15 DEC 2016
X6T	WARN	R_01_04_155	SLI 0.05sqkm 1:In 3:Areas	GVVOL_A	12:23:20 15 DEC 2016
X6T	WARN	R_01_04_155	SLI 0.05sqkm 1:In 3:Areas	GVVOL_A	12:11:20 15 DEC 2016
X6T	WARN	R_01_04_155	SLI 0.05sqkm 1:In 3:Areas	GVVOL_A	11:59:20 15 DEC 2016
X6T	WARN	R_01_04_155	SLI 0.05sqkm 1:In 3:Areas	GVVOL_A	11:47:20 15 DEC 2016
X6T	WARN	R_01_04_155	SLI 0.05sqkm 1:In 3:Areas	GVVOL_A	11:35:20 15 DEC 2016
X6T	WARN	R_01_04_155	SLI 0.05sqkm 1:In 3:Areas	GVVOL_A	11:23:21 15 DEC 2016
X6T	WARN	R_01_04_155	SLI 0.05sqkm 1:In 3:Areas	GVVOL_A	11:11:20 15 DEC 2016
X6T	WARN	R_01_04_155	SLI 0.05sqkm 1:In 3:Areas	GVVOL_A	10:59:20 15 DEC 2016
WARN	THUNDERSTRM				
X6T	WARN	THUNDERSTRM	THU 0.55sqkm 1:In 13:Areas	SURV TRMM	13:34:20 15 DEC 2016
X6T	WARN	THUNDERSTRM	THU 0.55sqkm 1:In 13:Areas	SURV TRMM	13:22:20 15 DEC 2016
X6T	WARN	THUNDERSTRM	THU 0.55sqkm 1:In 13:Areas	SURV TRMM	13:10:19 15 DEC 2016
X6T	WARN	THUNDERSTRM	THU 0.55sqkm 1:In 13:Areas	SURV TRMM	12:58:20 15 DEC 2016
X6T	WARN	THUNDERSTRM	THU 0.55sqkm 1:In 13:Areas	SURV TRMM	12:46:20 15 DEC 2016
X6T	WARN	THUNDERSTRM	THU 0.55sqkm 1:In 13:Areas	SURV TRMM	12:34:21 15 DEC 2016
X6T	WARN	THUNDERSTRM	THU 0.55sqkm 1:In 13:Areas	SURV TRMM	12:22:20 15 DEC 2016

All XXX ANK MAL KER KWA A-M X6T X7T X8T X9T X10 Exit

- a. For the **Site** field, select the correct radar site.
- b. For the **Type** field, select **WARN**.
- c. Select **Apply**.

The **WARN** products that are generated for this radar site are shown.

5. Right-clicking the **Request** column and select the site you want to start sending the product to.  
In the example above, the **THUNDERSTRM** **WARN** product will be sent to the **X6T** site.

## 6. Administration

### System Administration

All system administration tasks, such as managing licensing and users, are done in the **Administrator** panel, which is enabled when you are logged in with an administrator account.

Login as **admin** and select **Admin** to show the administrator panel with the following sections:

- **User** - User and organization
- **Map** - Map layer management
- **System** - License management and notification texts for the login page
- **Licenses** - Lists the software license



If the **Admin** button is not visible, you are not logged in as an administrator.

For more information on system administration, see *IRIS Focus Administrator Guide*.

### Application Administration and Configuration

Login as **admin** and select **Product Configuration** to perform advanced product configuration tasks such as managing nowcasting or setting up pre-defined composites.

## 6.1 Managing Users

Access to IRIS Focus features depends on the roles enabled for each user account. Each user account belongs to one or more organizations.

For example, the administration features are available to user accounts with the **administrator** role.

Table 11 IRIS Focus User Roles

Role	Description
<b>administrator</b>	Can access administration features. Users with an <b>administrator</b> role must belong to the <b>root</b> organization.
<b>focus</b>	Can access the full IRIS Focus feature set.
<b>poweruser</b>	Can access the full IRIS Focus feature set. Can create organization-level event criteria and places of interest that are visible to all users in an organization.
<b>user</b>	Can access the limited set of features available with IRIS Focus Light.
<b>kiosk</b>	Can only access the non-interactive, full-screen Kiosk mode.



To enable all IRIS Focus features for an account, set both **user** and **focus** roles for that account.

## Seat Allocation and Restrictions

Each logged-in user account with a **focus** role reserves one IRIS Focus seat from the license pool. When the user logs out, the seat is released.

A user account that has **user** or **administrator** role, or another role without a **focus** role, enters IRIS Focus Light, which has a map view with limited features and does not provide access to features such as cross-section or on-demand radar products.

If a user with a **focus** role logs in and there are no IRIS Focus seats available, the user enters IRIS Focus Light. When a seat is available, the user is provided with an opportunity to switch to IRIS Focus.



To avoid reserving an IRIS Focus license when performing administration tasks, the default administrator account does not have the **focus** role.

### More Information

- [Licensing \(page 11\)](#)
- [Managing Organizations \(page 101\)](#)
- [Required User Roles for Event Criteria and Places of Interest \(page 39\)](#)

## 6.1.1 Users View

Username	State	Email	First name	Last name	Organizations and roles	Time zone	Language	Actions
admin	Active	admin@vaisala.com			root (administrator)			
focus-light	Active	focus-light@email.com			root (user)			Edit Delete
image-export	Active	imageExport@vaisala.com			root (focus, user)	Local		Edit Delete
kiosk	Active	kiosk@email.com			root (kiosk)			Edit Delete
poweruser	Active	poweruser@email.com			root (poweruser)			Edit Delete
user	Active	user@email.com			root (focus, user)			Edit Delete

Figure 53 Users View

The currently defined user accounts are listed in the **Admin > Users** view.

User accounts have the following parameters:

- **Username** - Permanent ID for the user. Used when logging in.
- **Password** - User password. Must conform to password requirements.
- **State** - Set as **Active** to enable login for that account. Set as **Locked** to disable the account without deleting it.
- **Email, First name, and Last name.**

- **Organization and roles** - Which organization(s) the user belongs to and what features of the application the user can access.  
If a user account belongs to multiple organizations, the user roles are applied according to the organization that has the highest **Rank**.
- **Time zone** and **Language**.

## 6.1.2 Creating User Accounts

- ▶ 1. Log in to IRIS Focus as **admin**.
2. Select **Admin > Organizations**.
3. Choose which organization you want to create your users in:
  - Use the default **root** organization.
  - If you require more control over license seat allocation, create a new organization in the **Organizations** tab.



Users with an **administrator** role must belong to the **root** organization.

4. In the **Application Subscriptions** tab, subscribe the organization to a license pool.
  - a. Select the **radarsw** organization.
  - b. Enter the validity period.
  - c. Enter the maximum allocated users (licenses).

**Add Application Subscription**

**Application Subscription**

Code: IRIS Focus

Description: Subscription to IRIS Focus

Organization: Example Inc.

Application: radarsw

Start date: 2015-10-21

End date: 2016-10-21

Max number of users: 5

Save Cancel

5. To add users to the organization, select **Admin > Users > Add New User**.

**User Account Information**

Username

Password

Confirm password

State

---

Email

First name

Last name

City

Country

Time zone

Language

Search

Selected	Organization	Roles	Rank
<input checked="" type="checkbox"/>	root	focus, user	1

Selected organization

Roles

Rank

- a. Add user details.
- b. Select an organization for user.  
 If a user account belongs to multiple organizations, the user roles are applied according to the organization that has the highest **Rank**.

## 6. Assign roles to the user.



To avoid reserving an IRIS Focus license when performing administration tasks, the default administrator account does not have the **focus** role.

- a. In the organization list panel, make sure the organization is highlighted.
- b. In the **Roles** panel, select the role.  
To assign multiple roles to a user account, press **SHIFT+CTRL** and select roles from the list.
- c. To enable IRIS Focus features for a user account, select both the **user** and **focus** roles.
- d. To enable advanced IRIS Focus features such as creating event criteria and organization-level places of interest for an account, select the **poweruser** role.

**More Information**

- [Application Subscriptions View \(page 100\)](#)

**6.1.3 Managing User Accounts**

- ▶ 1. Log in with an *administrator* account.
- 2. Select **Admin** in the upper right corner.
- 3. Select **Users** to add, edit, or delete users.

**6.1.4 Removing User Accounts**

- ▶ 1. Login as **admin**.
- 2. Select **Admin > User > Users**.
- 3. Select a user and then **Delete**.  
The user is no longer listed as a user in IRIS Focus. However, the user name of the deleted account remains in the system database. This keeps log files intact, as references to deleted users remain in the audit logs.  
IRIS Focus does not allow you to create a new user with the same username as an existing one. This applies even when the account has been removed earlier, because the account name remains in the database.

**6.1.5 Logged In Users View**

**Logged In Users** view displays all the currently logged in user accounts.

To force individual users to log out, select **Log Off User** at the end of each non-administrator user account.

Username	Host	Primary organization	Application	Last login time	Last access time	Login duration	Actions
admin	127.0.0.1	root	radarsw	2015-10-21 09:58	2015-10-21 09:58	24 mins	
admin	127.0.0.1	root	radarsw	2015-10-21 10:04	2015-10-21 10:04	18 mins	
admin	172.25.122.86	root	radarsw	2015-10-21 10:00	2015-10-21 10:23	23 mins	
admin	127.0.0.1	root	radarsw	2015-10-21 10:06	2015-10-21 10:06	17 mins	
anonymous	127.0.0.1			2015-10-21 10:22	2015-10-21 10:22	1 min	<a href="#">Log out user</a>
anonymous	127.0.0.1			2015-10-21 10:22	2015-10-21 10:22	50 secs	<a href="#">Log out user</a>
anonymous	127.0.0.1			2015-10-21 10:22	2015-10-21 10:22	43 secs	<a href="#">Log out user</a>
user	127.0.0.1	root	radarsw	2015-10-21 10:04	2015-10-21 10:04	18 mins	<a href="#">Log out user</a>
user	127.0.0.1	root	radarsw	2015-10-21 10:10	2015-10-21 10:10	12 mins	<a href="#">Log out user</a>
user	127.0.0.1	root	radarsw	2015-10-21 10:03	2015-10-21 10:03	19 mins	<a href="#">Log out user</a>

Figure 54 Logged In Users View

### 6.1.6 Identity Configuration

Identity Configuration view defines the following user account security settings:

- Lock on failure - Enable to lock user accounts after too many login failures
- Max attempts before lock - How many times a user can attempt logging in before being locked out
- Lock duration - How long (in seconds) the lockout time lasts
- Expire password - Enable to set an expiration counter for the password
- Password validity - How many days the password is valid before the user is prompted to change it

**Identity Configuration**

Lock on failure

Max attempts before lock

Lock duration (seconds)

Expire password

Password validity (days)

Figure 55 Identity Configuration view

## 6.1.7 Password Configuration View

**Password Configuration** view defines requirements for password complexity. The settings for the password are:

- Minimum and maximum length
- Required combination of (upper and lower case) letters or digits
- Whether the password must contain special characters (!"#\$%&'()\*+,-./:;<=>?@[ ]^\_`{|}~)
- Whether the password must conform to a defined regular expression
- How many previous passwords are forbidden to reuse

The screenshot shows the 'Password Configuration' view. At the top, there is a navigation bar with tabs for 'Users', 'Logged In Users', 'Identity Configuration', 'Password Configuration', 'Organizations', and 'Application Subscriptions'. Below the navigation bar, the title 'Password Configuration' is displayed. The main content area contains several configuration options:

- Min length: 4
- Max length: 20
- Must contain letters:
- Must contain digits:
- Must contain upper and lower case:
- Must contain special characters:
- Must validate regular expression:
- Number of previous passwords to exclude: 2

At the bottom of the form, there are two buttons: 'Save' and 'Cancel'.

Figure 56 Password Configuration view

## 6.1.8 Publishing Notifications to Users

The application login page contains text fields where you can publish your own status messages or other notifications.

**Welcome Message**

Version DEV-SNAPSHOT\_7710

**Login**

User name

Password

Login

Notification Message

Figure 57 Login Page

- ▶ 1. Login as **admin**.
2. Select **System > System Properties**.
3. Type a **Notification text** or a **Welcome text**.

Notification text

Welcome text

Save Cancel

4. Select **Save**.

## 6.1.9 Application Subscriptions View

Subscriptions provide a way to manage available licenses between different organizations.

**Application Subscriptions** view lists all active and expired subscriptions. Each subscription creates a relationship where the organization subscribes to the application for a defined length of time. By subscribing, the organization reserves a pool of licenses to allocate for users in that organization.

You can only subscribe organizations to the IRIS Focus application, *radarsw*.

Code	Description	Organization	Application	Start date	End date	Max user	Actions
IRIS Focus	Subscription to IRIS Focus	Example Inc.	radarsw	2015-10-20	2016-10-20	5	<a href="#">Edit</a>
FireSubscription	Subscription for the root organi root		radarsw	2014-09-22	2114-09-22	500	<a href="#">Edit</a>

Figure 58 Application Subscriptions view

**Add Application Subscription**

**Application Subscription**

Code:

Description:

Organization:

Application:

Start date:

End date:

Max number of users:

Figure 59 Creating a new Subscription

### More Information

- [Licensing Management \(page 103\)](#)

## 6.2 Managing Organizations

Each user account belongs to one or more organizations. You can use organizations to manage:

- Subscriptions to selected software to a selected number of users.
- License availability for subgroups with separate license pools.
- Events and places of interest created by a *poweruser*.




Users with an **administrator** role must belong to the **root** organization.

**More Information**

- [Licensing Management \(page 103\)](#)
- [Managing Users \(page 93\)](#)
- [Required User Roles for Event Criteria and Places of Interest \(page 39\)](#)

## 6.2.1 Setting-up and Viewing Organizations

The **Organizations** view lists the organizations that have been set up in IRIS Focus.



**CAUTION!** IRIS Focus is configured with a default *root* organization. Do not delete the *root* organization.


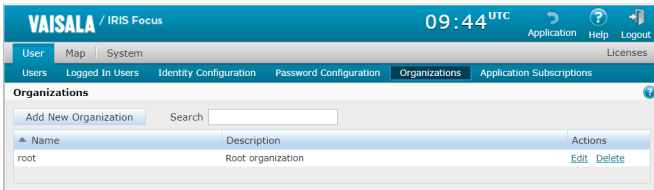


Figure 60 **Organizations View**

- ▶ 1. Login as **admin**.
- 2. To create a new organization, select **User > Organizations**.
- 3. Select **Add New Organization**.
- 4. Type the following information:
  - **Name** - Name of the organization. This is visible when assigning users to organizations
  - **Description** - Full text description of the organization
- 5. To edit an existing organization, select an organization on the list and select **Edit**.
- 6. Select **Save**.

You can now assign users to IRIS Focus organizations.

## 6.3 Licensing Management

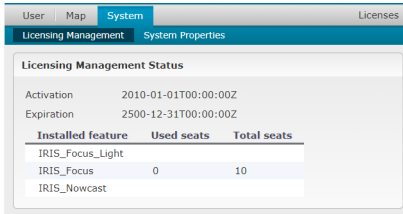

Installed feature	Used seats	Total seats
IRIS_Focus_Light		
IRIS_Focus	0	10
IRIS_Nowcast		

Figure 61 Licensing Management Status

### IRIS\_Nowcast and IRIS\_Focus\_LIGHT

The seat columns are empty because these licenses are server-based and do not rely on a seat allocation.

### IRIS\_Focus

**Total seats** - Size of the active license pool. This depends on your licensing plan.

**Used seats** - Number of seats currently in use.



Due to restrictions you might have set for organizations or application subscriptions, an organization can run out of licenses even when there are available IRIS Focus seats in the total license pool.

1. Log in to IRIS Focus as **admin**.
2. To display the current allocation status of the IRIS Focus license pool, select **System > Licensing Management**.

#### More Information

- [Application Subscriptions View \(page 100\)](#)
- [Managing Organizations \(page 101\)](#)
- [Licensing \(page 11\)](#)

### 6.3.1 Licensing on Server Restart

Active sessions and their licenses are not stored when the IRIS Focus server is shut down.

When the server restarts, the licensing seats are allocated from scratch to users who log in. The total number of seats in the license pool is unaffected.

#### More Information

- [Licensing \(page 11\)](#)

## 6.4 Map Management

The standard installation of IRIS Focus includes a complete world map that is suitable for most scenarios.

The map consists of separate layers that are further separated into base layers and non-base layers. One base layer and one non-base layer are always rendered on the screen. Typically, base maps contain the underlying terrain and the non-base layers contain additional details that can be displayed on top of the base map.

Map data is served to the IRIS Focus web interface by GeoServer map server using Web Map Service (WMS) protocol. To improve performance, instead of calling for new map data each time the map view changes, the maps are cached in pre-rendered PNG tiles using GeoWebCache.

Administrators can add custom map layers or edit existing layers.

IRIS Focus users can view map layers in the **Map** view by selecting **Map Features**.

### More Information

- [Map View \(page 13\)](#)

### 6.4.1 Working with Map Layers

- ▶ 1. Login as **admin**.
2. Select **Admin > Map > Map Layers**.  
The **Map Layers** view lists the available map data layers. Each layer has the following properties:
  - **Base layer** - Enable to set this layer as a base layer
  - **Title** - Layer name
  - **Type** - WMS layers
  - **URL** - Address for the WMS server
  - **Layer** - Title of the layer on the server
3. To add a new layer, select **Add New Layer**.
  - a. Type the layer information, including **Title**, **URL**, and **Layer**.
  - b. Define map layer properties such as:
    - **Transparent** - Enable to use PNG or GIF alpha channel for transparency
    - **MIME type** - Select image type
4. To edit a layer, select **Edit** for that layer and make your changes  
The **Map Layer Information** window for that layer opens.
5. Select **Save**.

### More Information

- [Map Layer Configuration Options \(page 115\)](#)

## 6.4.2 Map View Context

The **Map View Contexts** view lists all defined maps.

Only the default **TheMap** context is available.



You perform all map layer customization in the default **TheMap** context, you do not create new map contexts for custom map layers.

- To set which layers are enabled and which are disabled for users in the map view, edit **TheMap**.
- To set the order in which multiple map layers are rendered on screen, change the **Z level** of map layers.  
The lowest number is rendered first, and higher numbers rendered on top of that.

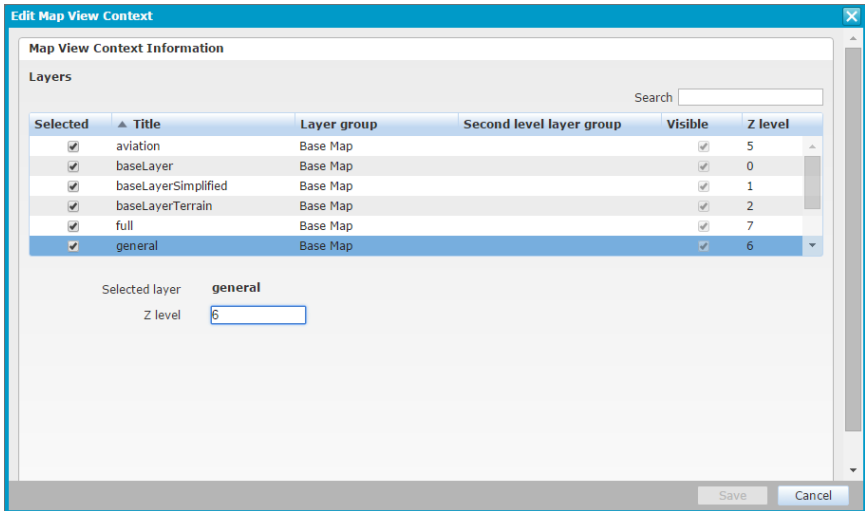


Figure 62 Editing the Map Context

## 6.4.3 Adding External Map Layers

You can import an external map layer such as a shapefile into Geoserver for IRIS Focus to display on the map.

1. Make sure you have a shapefile (*.shp*) available.  
For an example resource with shapefiles available for download, see the WGS84 projection examples at:  
<http://openstreetmapdata.com/data/coastlines>
2. Copy the shapefile to the server.

3. Login to the server as **radarop**.
4. Open the file: `/etc/vaisala/radarsw/configuration/gis-override.ini`
5. Copy the `geoserver.admin.password`.  
This password is autogenerated during installation.
6. Using a browser, login to IRIS Focus Geoserver at:  
[http://<IRIS\\_Focus\\_server\\_name>:34180/geoserver/web/](http://<IRIS_Focus_server_name>:34180/geoserver/web/)  
Login using the username **admin** and the password you copied earlier.



Depending on your own network configuration you may need to do this at the server, over a remote console, or by using your local browser.

7. Add a new **Store**:
  - a. Select **Stores > Add New Store**.
  - b. Choose the data source: **Shapefile - ESRI(tm) Shapefiles (\*.shp)**
  - c. Select the following (the following list shows example values).
    - **Workspace:** `Vaisala`
    - **Data Source Name:** `coastlines`
    - **Description:** leave blank
    - **Shapefile location:** browse to the shapefile  
For example: `files\lines.shp`
  - d. Leave the other fields as default.
  - e. Select **Save**.
8. Publish the layer:
  - a. Check that the **New Layer** menu opens.
  - b. If the **New Layer** menu does not open automatically, select **Layers > Add New Layer**.
  - c. In the **Add layer from** list, find the new layer.
  - d. Select **Publish**.

The **Edit Layer** menu shows the new layer name. For example, `vaisala:coastlines`.

9. In the **Edit Layer** menu:
  - a. Leave all inputs as they are except:
    - **Name:** `coastlines`
    - **Title:** `coastlines`
    - **Coordinate Reference Systems > Declared SRS**
    - Select **Find** and search for 4326 (WGS 84).
  - b. To fill the bounding boxes, select **Compute from data** and **Compute from native bounds**.
  - c. Select **Save**.

10. Select **Layer Groups**.
  - a. Select an existing layer group (for example, `vai_full_en`) and then select **Add Layer**.
  - b. Find the new layer and add it.  
The layer is now listed in the **Layers** table.
  - c. Select **Save**.
11. Login to IRIS Focus as a user.
12. To confirm that the new layer is visible, select **Map Features > Map Detail > Full Detail**.

## 6.5 Configuring Nowcasting

Nowcasting is enabled by default. However, during installation or later, you can adjust the nowcasting configuration.

Configuring IRIS Focus for nowcasting includes:

- Enabling nowcasting in the IRIS Focus web application and the nowcasting server.  
*See [IRIS Focus Administrator Guide](#)*
- Configuring MVF and nowcasting criteria.
- Fine-tune the algorithms.  
Most users do not need to adjust the nowcasting algorithms.

### More Information

- [Configuring MVF \(page 107\)](#)
- [nowcast.ini \(page 116\)](#)

### 6.5.1 Configuring MVF

To use nowcasting, for each radar site you must enable motion vector field (**MVF**) generation and pre-configure the **MVF** product to define a product type and product name.



IRIS Focus generates one **MVF** product per site. If meteorological conditions vary across your radar sites, you may wish to use different products for each radar site.

The screenshot shows the 'VAISALA / IRIS Focus' interface with the 'Product Configuration' tab selected. The 'Motion Vector Field Settings' section is active, featuring a table of radar sites and their configurations. A 'Save' button is located at the bottom right of the settings area.

Site	Reference Product	MVF Generation
KER (Kerava, radar)	CAPPI - 1KM_REFL_ADV	<input checked="" type="checkbox"/> On
PLA (Philippines_A)	PPI - SURVEILLANCE	<input checked="" type="checkbox"/> On
PLB (Philippines_B)		<input type="checkbox"/> Off
PLC (Philippines_C)		<input type="checkbox"/> Off
X2T (X2_Argentina)		<input type="checkbox"/> Off
PHP (Philippines)	PPI - SURVEILLANCE	<input type="checkbox"/> Off

- ▶ 1. Log in to IRIS Focus as **admin**.
- 2. Select **Product Configuration > Motion Vector Field Settings**.
- 3. For each radar site, select whether **MVF** generation is enabled for that site. To minimize performance problems, do not enable **MVF** generation for sites that do not need the nowcasting feature.
- 4. For the sites with **MVF** generation enabled, select the product used to create **MVF** products. The product can be of any data type except **V** and **PHIDP**.

**i** Minimize performance problems by avoiding:

- Products that generate too much data, for example, those with large resolutions. Vaisala recommends using a **CAPPI** at 2km height at with a 480x480 resolution.
- Generating the **MVF** product too frequently. Vaisala recommends using products that are configured to be created no less than 10 minutes apart.

For more information on pre-configuring products, see *IRIS Radar User Guide* and *IRIS Product and Display Guide*.

5. Select **Save**.

#### More Information

- [File Locations \(page 114\)](#)
- [Radar Products \(page 56\)](#)
- [Radar Product Codes \(page 61\)](#)
- [vsoweb-override.ini \(page 118\)](#)
- [nowcast.ini \(page 116\)](#)

## 6.6 Configuring Composites

IRIS Focus administrators can set up and manage pre-defined composites.

Configuring pre-defined composites provides more control over settings such as the combining algorithm and **Max Time Span**.

IRIS Analysis Composites are set up in IRIS Analysis as IRIS **COMP** products and sent to IRIS Focus much like other pre-configured products.

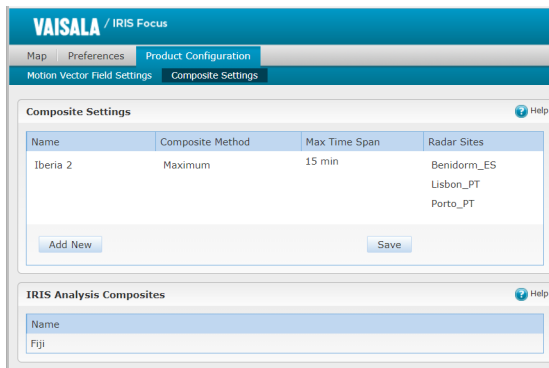


Figure 63 Composite Settings

#### More Information

- [Composites \(page 27\)](#)

### 6.6.1 Setting-up Pre-defined Composites

1. Log in to IRIS Focus as **admin**.
2. Select **Product Configuration > Composite Settings**.
3. Select **Add New**.
4. Give the composite site a name.

5. Under **Composite Method**, select the algorithm applied to overlapping data.  
See [IRIS Focus Composite Methods \(page 29\)](#).
6. Define the **Max Time Span** for the composite.  
See [Max Time Span \(page 110\)](#).
7. Under **Radar Sites**, select the sites you want to include in the composite.
8. Select **Save**.

## 6.6.2 Editing Pre-defined Composites

- ▶ 1. Log in to IRIS Focus as **admin**.
- 2. Select **Product Configuration > Composite Settings**.
- 3. Select a composite on the list.
- 4. Adjust the composite method or time interval as needed.
- 5. Under **Radar Sites**, select the sites you want to include in the composite.
- 6. To remove a site from the composite, select the **X** next to the site you want to remove.
- 7. Select **Save**.

## 6.6.3 Deleting Pre-defined Composites

- ▶ 1. Log in to IRIS Focus as **admin**.
- 2. Select **Product Configuration > Composite Settings**.
- 3. Select a composite on the list and then select **Delete**.
- 4. Select **Save**.

## 6.6.4 Max Time Span

**Max Time Span** is the maximum time (minutes) allowed between the newest and oldest points of data. When new data is processed, points that are older than the specified time span are removed.

The following example shows **Max Time Span** for composite radar radar data:

- Each radar has a different task schedule with tasks 5, 7, and 10 minutes apart.
- **Max Time Span** the composite calculations is set to 10 minutes.
- Over time, the composite calculation uses **Max Time Span** value when considering which tasks are available within the time span 'window'.

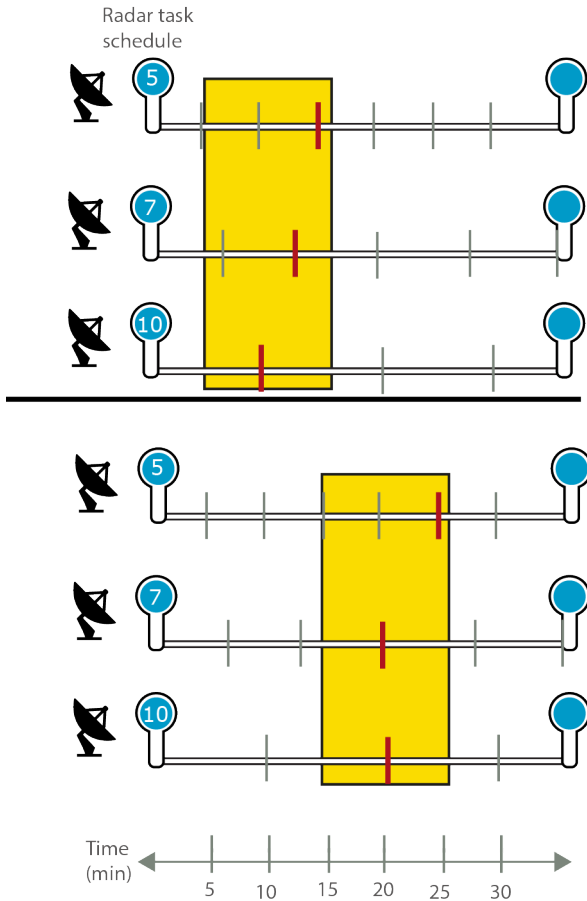


Figure 64 10 minute Max Time Span

### 6.6.5 Viewing a List of IRIS Analysis Composites

IRIS Analysis Composites are set up in IRIS Analysis as IRIS **COMP** products and sent to IRIS Focus much like other pre-configured products.

- ▶ 1. Log in to IRIS Focus as **admin**.
2. Select **Product Configuration > Composite Settings**.
3. Scroll down to the **IRIS Analysis Composites** pane.

## 6.7 Setting-up Dataflow Alerts

Enable and set-up data flow alerts to monitor the flow of radar data to IRIS Focus through Data Manager.

- ▶ Run the radar system for some time to allow the Data Manager database to populate.
- Log in to IRIS Focus as **admin**.
- Select **Admin > Data Manager > Data Flow Alerts**.  
The **Data Flow Alerts** page opens.

The screenshot shows the 'Dataflow Alerts' page in the Data Manager interface. The page has a navigation bar with 'User', 'Map', 'System', and 'Data Manager'. Below the navigation bar is a 'Dataflow Alerts' header. The main content area is titled 'Dataflow Alerts' and includes a 'Filter' dropdown set to 'Enabled Alerts'. A table lists tasks with their status, duration, and trigger time. A 'Refresh' button is located above the table. A 'Save' button is at the bottom right. A tip on the right explains how to adjust the alert trigger time.

Task	Enabled Alerts	Task Duration	Alert Trigger Time
All	<input checked="" type="checkbox"/> 2 tasks	<a href="#">Refresh</a>	<input type="text"/> <a href="#">Apply all</a>
▼ Benidorm_ES	<input checked="" type="checkbox"/> 1 task		
VOL	<input checked="" type="checkbox"/>	5 min (2018-08-21 02:14)	<input type="text" value="5"/> min
▼ FMI_Korpo	<input checked="" type="checkbox"/> 1 task		
PP11	<input checked="" type="checkbox"/>	15 min (2018-08-21 02:10)	<input type="text" value="15"/> min

Tip! To increase the alert trigger time for all alerts, type, for example, +5 in the Alert Trigger Time input field. To decrease the time, type, for example, -5.

### Task

Radar task associated with the dataflow.

### Enabled Alerts

If selected, IRIS Focus generates an alert if the dataflow for that task is interrupted.

### Task Interval

Shows the interval between task run times. (minutes).

Data Manager re-calculates the frequency automatically each time you open the **Data Flow Alerts** page. To refresh the times manually, select **Refresh**.

The timestamp shows the last detected date for received data.

### Alert Trigger Time

The time (minutes) after which IRIS Focus generates an alert if the dataflow is interrupted.

4. To receive alerts about interruptions to the flow of task data:
  - a. In the **Enabled Alerts** column, select the check box.
  - b. In the **Alert Trigger Time** column, set a time that is higher than the expected data flow interval.
  - c. To manage all enabled alerts in the same way, use the input filed at the top of the **Alert Trigger Time** column and then select **Apply all**:
    - To set the same trigger time for all alerts, type a number in the input field.
    - To increase the alert trigger time for all alerts, type, for example, +5 in the input field. To decrease the time, type, for example, -5.
    - To set a trigger time that is the same as detected interval between task run times for all alerts, leave the input field blank.
5. Select **Save**.


## 6.8 Viewing Dataflow Alerts

If there is a break in the flow of radar product data, IRIS Focus sends a dataflow alert.

- ▶ 1. On the right side of the main menu, select **Alerts > Technical**.
2. In the **Alerts** panel, acknowledge the alert.  
The acknowledgement records who has seen the alert and when.  
Acknowledging alerts has no effect on the alert status.


## Appendix A. File Locations

Table 12 IRIS Focus Application and Configuration Files

File or Directory	Description
<p><i>/etc/vaisala/radarsw/configuration</i></p> <ul style="list-style-type: none"> <li>• <i>gis-override.ini</i> GeoServer database settings.</li> <li>• <i>logback.xml</i> Logging level settings.</li> <li>• <i>radar_centers.properties</i> List of stored radar site center points.</li> </ul>	<p>Configuration files for IRIS Focus module settings. The files listed here are the most important.</p> <div style="border: 1px solid gray; padding: 10px;">  <p><b>CAUTION!</b> Some settings have a default config file and an override file. For example:</p> <ul style="list-style-type: none"> <li>• <i>gis-config.ini</i></li> <li>• <i>gis-override.ini</i></li> </ul> <p>When needed, edit the override file.</p> </div>
<i>/etc/vaisala/radarsw/configuration/vsoweb-override.ini</i>	Connection settings for socket server, lightning layers, nowcasting and so on.
<i>/etc/vaisala/radarsw/nowcast/nowcast.ini</i>	Configuration files for the nowcast server.
<i>/usr/vaisala/radarsw/configuration</i>	Configuration files for helper applications used in IRIS Focus maintenance.
<i>/var/lib/radarweb</i>	Home directory of the <code>radarweb</code> user. The IRIS Focus Web Application is deployed here.
<i>/var/lib/radardm</i>	Home directory of the <code>radardm</code> user.
<i>/var/lib/radardmininput</i>	Home directory of the <code>radardmininput</code> user.
<i>/srv/vaisala/radarsw/datamanager/input</i>	Files sent from an IRIS Analysis machine are copied here. The data manager input service processes files copied here.
<i>/srv/vaisala/radarsw/datamanager/storage</i>	This is where data manager stores polar or RAW data.
<i>/var/lib/warnreader</i>	Configuration files for events and alerts.
<i>/var/log/vaisala/radarsw</i>	Log files from IRIS Focus web application

## Appendix B. Map Layer Configuration Options

Table 13 Map Layer Configuration Options

Option	Description	WMS Layer Only
<b>Map Layer Information</b>	Defines basic map settings such as the title and the URL address of the Web Map Service (WMS).	--
<b>Title</b>	Title of the layer. Visible in the Layer Selector	--
<b>Type</b>	<ul style="list-style-type: none"> <li>• <b>wms</b>: generic GIS services such as base maps or raster-type forecast data</li> <li>• <b>google</b>: Google base maps.</li> <li>• <b>marker</b>: observations from stations configured using the JX source service on the map.</li> </ul>	--
<b>URL</b>	Address of the WMS service.	✓
<b>Layer</b>	Name of the layer in the map server. If using GeoServer, usually <code>workspace:layer</code> .	--
<b>Base layer</b>	Select if the layer is a base map.	--
<b>Transparent</b>	Select for WMS to request a transparent background for the layer.	✓
<b>Request as Tiles</b>	Use if the map layer should be requested as tiles. Usually selected for base maps.	✓
<b>MIME type</b>	Map image type. Change if the service does not support the default <code>image/png</code> .	✓
<b>Default opacity</b>	 Not used in IRIS Focus.	--
<b>Layer query settings</b>		--
<b>Supported Coordinate Reference Systems</b>	Select supported coordinate reference systems for the layer.	--
<b>Time Support</b>	Configure for layers using time dimensions.	✓
<b>Coverage</b>	Maximum bounding box for the layer.	✓
<b>Layer style</b>	For advanced configurations, add SLD (Styled Layer Descriptor) parameters.	--

### More Information

- [Working with Map Layers \(page 104\)](#)

## Appendix C. Nowcasting Configuration Files

### C.1. nowcast.ini

The following example shows the *nowcast.ini* configuration file for configuring the nowcasting HTTP server.

```
; Algorithm to use.
correlator=trec
```

#### TREC

```
[trec]
; Number of decimals to keep in data when converting to integers.
; Range: [0 ; 3]. Default: 2.
input_precision=2
```

```
; The value in image that declares a missing/invalid value.
; Default: -999.0.
missing_value=-999.0
```

```
; The value in image that declares a not-scanned pixel, outside the aperture
area.
; Default: -900.0.
not_scanned_value=-900.0
```

```
; Minimum measurement aperture coverage (%) in correlation region.
; Range: [0.0 ; 1.0]. Default: 0.60.
aperture_coverage_threshold=0.60
```

```
; Minimum signal value for the pixel to be 'active' and used.
; Default: 10.0.
signal_threshold=10.0
```

```
; Feature box size.
; Range: > 0 Default: 14
field_feature_box_width=14
```

```
; Amount of skip when calculating field values.
; Range: > 0. Default: 1 (no skip).
field_feature_box_spacing=1
```

```
; Minimum fraction (%) of active pixels in feature box needed to trigger
correlation analysis.
; Range: [0.0 ; 1.0] Default: 0.10
field_signal_coverage_threshold=0.10
```

```
; Minimum allowable cross-correlation coefficient.
; Range: [0.0 ; 1.0] Default: 0.55
correlation_threshold=0.55
```

```
; Maximum storm movement between images, search region radius.
; Range: > 0 Default: 15
speed_limit=15
```

```
; Spatial smoothing factor,  $\exp(-d/\text{decay})$ . Used for spreading effect
; of local motion vector to its surroundings.
; Range:  $\geq 0$  (0 == no spatial smoothing) Default: 6
field_spatial_decay=6
```

```
; Spatial filtering flag. Whether to discard points that differ from global
average.
; Range: 0 == NO; 1 == GLOBAL; 2 == LOCAL . Default: 1(GLOBAL)
field_use_spatial_filtering=1
```

```
; Feature box size for local spatial thresholding (applied only when using
local spatial thresholding).
; Range: > 0 Default: 9
field_spatial_filtering_box_width=9
```

```
; Maximum allowed direction difference from mean motion (applied only when
using spatial filtering).
; Range: [0 ; 180] Default: 90
field_spatial_direction_threshold=90
```

```
; Maximum allowed speed ( $\text{mgt} \times \text{mean\_motion}$ ) above mean motion (applied only when
using global spatial filtering).
; Range:  $\geq 1.0$  Default: 3.0
field_spatial_magnitude_threshold=3.0
```

```
; Global vector weight applied to local values.
; Range: [0.0 ; 1.0] (0.0 = no global weighting). Default: 0.25
field_global_weight=0.25
```

```
; Method for temporal smoothing.
; Range: 0 == NO_TEMPORAL_SMOOTHING; 1 == HISTORY_WEIGHTING; 2 ==
CHANGE_WEIGHTING.
; Default: 1(HISTORY_WEIGHTING)
temporal_smoothing_method=1
```

```
; History weight factor (applied when temporal smoothing is made by using
HISTORY_WEIGHTING).
; Range: ]0.0 ; 1.0] Default: 0.25
temporal_smoothing_history_weight=0.25
```

```
; Change weight factor (applied when temporal smoothing is made by using
CHANGE_WEIGHTING).
; Range: ]0.0 ; 1.0] Default: 0.33
temporal_smoothing_change_weight=0.33
```

### More Information

- [Configuring MVF \(page 107\)](#)

## C.2. vsoweb-override.ini

The *vsoweb-override.ini* configuration file contains setting for managing the **MVF** (motion vector field) product and advection used in nowcasting.



Vaisala has carefully chosen good defaults for the nowcasting configuration. The raster product, such as **PPI**, **CAPPI**, of any intensity moments like Z, R, KDP, or **rhoHV** that is used as an input for MVF generation should have:

- As little as possible of ground clutter and the near-radar clear air or particulates (such as dust) returns.
- The bounding box not smaller than any other raster product produced from this site's data.

Because the two conditions are contradictory, the easiest way to satisfy first condition is to use a true (not pseudo) **CAPPI** product with a height of 1.5 ... 2km , but the longest range (biggest bounding box) product is a raster product generated from the survey scans, which usually consist of just one **PPI** scan and cannot be used to generate true **CAPPI** products. You must balance these two conditions.



If there are not enough valid products to generate an MVF request, the iteration is skipped and the system waits for the next product to arrive from IRIS.

## Basic Settings

`nowcast.mvf.run` defines if MVF generation is enabled in IRIS Focus. By default, MVF generation is enabled (**true**).

```
[NOWCAST]
nowcast.mvf.run = true
```

The nowcast server URL identifies where the nowcast HTTP server runs. The default value is for a fully local installation, which is the default installation configuration.

```
nowcast.http.server.url = http://localhost:34480/api/v1/mvf/
```

The *netCDF* directory stores MVF generation requests and responses to the Nowcast HTTP Server in netCDF format as well as internal representations of MVF serialized to disk. This directory is cleaned periodically by default.

```
nowcast.netcdf.dir = /srv/vaisala/radarsw/product/nowcast/
```

## Advanced Settings

**nowcast.mvf.request.num.rasters** defines the number of products sent to the nowcast server for generating the MVF. Default is 2.

```
nowcast.mvf.request.num.rasters = 2
```

**nowcast.mvf.product.age.limit.minutes** defines the maximum number of minutes (5 ... 1000) the system goes back in time to find valid products (of the type used to define MVF generation for a site) to use in generating the MVF. Default is 100.

```
nowcast.mvf.product.age.limit.minutes = 100
```

**nowcast.mvf.max.gap.minutes** defines the maximum acceptable gap in minutes (1 ... 1000) between products for MVF generation. Default is 30.

MVF is a shift in pixels per time interval between frames of the product which was used to generate MVF. The interval between advected products may be different from the interval between advected frames. For example, if MVF was generated from the product which was available every 5 minutes but the interval between advected frames has to be 10 minutes, the MVF shift should be doubled. That MVF scaling is taken into account by a scaling shift in every iteration.

```
nowcast.mvf.max.gap.minutes = 30
```

**nowcast.product.times.age.limit.minutes** defines the time range for calculating advected product times (2 ... 2880 minutes. 2880 is the entire two-day range). Default is 100

Advected product times must be evenly spaced (due to the calculation). The time is derived by dividing the last number of minutes defined in this property by *n* products found in that period.

The spacing is used as the time gap between advected products. In most cases, set this value to match the value in **nowcast.mvf.product.age.limit.minutes**.

```
nowcast.product.times.age.limit.minutes = 100
```

**nowcast.advection.mvf.age.limit.minutes** is the maximum number of minutes to go back in time to find an MVF when generating advected products. If an MVF is not found in the time span given, the iteration is skipped and Focus waits for the next product to arrive from IRIS. Range: 5 ... 1000 minutes. Default is 30.

```
nowcast.advection.mvf.age.limit.minutes=30
```

**nowcast.advection.time.span.minutes** defines the time limit when extending nowcasted products into the future (minutes). The normal range is 1 ... 3 hours. Default is 120.

You can raise the time span to up to 6 hours but this is not recommended as accuracy decreases as time extends into the future.

```
nowcast.advection.time.span.minutes=120
```

## Glossary

### **advection**

The transfer of a property of the atmosphere, such as heat, cold, or humidity, by the horizontal movement of an air mass. Advection calculations are used to perform some of the nowcasting calculations.

### **alarm**

An alarm is an alert of highest severity.

### **alert**

Alert is a state that requires user intervention or recognition. Different types of alerts include alarms, warning, and informational alerts.

### **area of interest**

An area of interest is a geographical area that is monitored for certain weather events. If the system detects a weather event in an area of interest, it generates an alert.

### **bin**

A single sample of weather data detected at a known direction, altitude, and distance from the radar site. The radial size of a bin depends on decreases with distance, so bins further from the radar site cover a larger area than nearby bins.

### **composite**

Composites combine data (for example, a group of **CAPPI**, **VIL**, **PPI**, or **TOPS** products) from many radars in one image.

### **data manager**

The raw volume data from the radar signal processor is stored in the data manager, which makes the data available to the IRIS Focus user interface. Through the data manager, IRIS Focus can read raw volume data and generate on-demand radar products in real-time.

### **dynamic composite**

A radar composite of on-demand products created by selecting multiple radar sites on the fly. The combining criteria are based on standardized settings.

### **event**

Event is a record of a momentary change of state or an occurrence produced by a source or some other entity. An event can indicate an error or a warning or can be just for information.

### **hydrometeor**

A particle of condensed water vapor in the atmosphere. Rain, snow, and hail are examples of hydrometeors.

### **Max Time Span**

Max Time Span is the maximum time (minutes) allowed between the newest and oldest points of data. When new data is processed, points that are older than the specified time span are removed. Used in, for example, composites of radar data.

**MSL**

Mean sea level. An average level for the surface of the sea or ocean.

**NDOP product**

Dual-Doppler velocity product. Combines the velocity measurements from 2 or more radars to get the wind direction and speed.

**nowcasting**

Weather forecasting up to the next 2 hours.

**NWP**

Numerical weather prediction

**on-demand product**

On-demand products are based on raw data from the IRIS back-end. IRIS Focus reads raw volume data and generate radar products in real-time. Users can manipulate product criteria in the user interface in real time.

**pin**

Pins on a map indicate points of interest with reference points and labels.

**place of interest**

A location on the map that is either a single point (pin) or a larger area. See [area of interest \(page 121\)](#) and [pin \(page 122\)](#).

**pre-configured products**

Pre-configured products are products with default settings used for advanced data visualization such as nowcasting, warnings, or multilayer products.

**pre-defined composite**

A pre-defined radar composite with customized settings such as the combining algorithm.

**PRF**

Pulse Repetition Frequency measured in Hz (pulses per second). When measuring PRF, a *pulse* contains transmit, receive, and dead time phases. PRF affects *range folding* and *velocity folding* detection. Normal PRF values for Doppler radars are up to 1000 Hz. Vaisala radars generally operate around 400-700 Hz. In Vaisala IRIS products, PRF limits the area displayed in radar images and the maximum measurable wind speed.

**product**

Radar products are raw signal data from a radar receiver processed to provide information about current weather conditions. Radar products are calculated from ingest files that are collected during the execution of radar tasks. Products may be data, pictures, or text. For example, **PPI** and **RHI**.

**pulse**

A short burst transmission signal sent by the radar, used to measure the weather activity in atmosphere. The reflection measurements from a pulse are sorted into bins.

**radar product**

See [product \(page 122\)](#).

**range folding**

Radar signal echoes from outside the radar maximum range that are incorrectly displayed within the radar measurement area. Also called range aliasing.

**RAW product**

Spherical coordinate data product obtained directly from the raw ingest data. The data are stored in compressed format so they can be recorded on tape or sent to a workstation for further processing.

**ray**

A group of pulses processed together according to configuration rules. See also [pulse \(page 122\)](#).

**signal processor**

A programmable device for digitizing and processing video signals from the radar receiver.

**sweep**

A collection of pulses at a constant elevation as the radar rotates around its axis 360°. After a sweep, the radar usually changes its elevation and starts a new sweep. Each sweep typically contains the same number of bins independent of the elevation.

**task**

A set of instructions to the radar and signal processing systems including, but not limited to, the scan type (PPI or RHI), PRF, pulse width, signal processing data types, time and range averaging criteria. For example, a PPI volume scan at multiple elevation angles or an RHI at a single azimuth. Also called radar task.

**velocity folding**

Erroneous readings due to particles in the measurement area exceeding the maximum velocity detection threshold of the radar system. The measured velocity "wraps around" to the other end of the scale, resulting in discontinuous readings. Also called velocity aliasing.

**volume**

Complete set of raw measurement data collected from sweeps, that is used to calculate a model of the atmosphere. The maximum volume is half of a sphere (from 0° elevation upwards), but other shapes are more typical.

**warning**

A warning is an alert of medium severity.



## Index

### A

administration	
application.....	93
licensing.....	93
system.....	93
users.....	93
alert.....	9
area of interest.....	40, 41, 53
configure	
event criteria.....	47
criteria, examples.....	47
dataflow, set-up.....	112
dataflow, view.....	113
technical.....	113
view.....	54
weather.....	38, 45, 51
weather, criteria.....	47
algorithm	
BASE.....	68
CAPPI.....	72
MAX.....	75
PPI.....	78
TOPS.....	83
animation	
nowcasting.....	20
playback.....	20
time line.....	20
application files.....	114
application subscription.....	100
area of interest.....	9, 40
circle.....	42
delete.....	44
draw.....	40
edit.....	41
enable, disable.....	44
event criteria.....	50
map display.....	53
remove.....	44

shape.....	43
user roles.....	39
view.....	53

### B

BASE	
calculating.....	68
on-demand.....	66
threshold.....	67
base layers	
roads.....	14
bin.....	57
browsers.....	37

### C

CAPPI	
calculating.....	72
height.....	70
on-demand.....	68
pseudo CAPPI.....	68, 70
circle	
area of interest.....	42
color scale editor.....	21
composites	
algorithm.....	29
dynamic.....	27
dynamic, create.....	28
IRIS Analysis.....	27, 111
max time span.....	110
method.....	29
pre-defined.....	27
pre-defined, delete.....	110
pre-defined, edit.....	110
pre-defined, set-up.....	109
set-up.....	110
view.....	28

composites, IRIS Analysis.....	109
composites, pre-defined configure.....	109
configuration files.....	114
constant altitude plan position indicator.....	68
cross section tool.....	23
cursor tool.....	21

**D**

data flow.....	59
dataflow alert set-up.....	112
view.....	113
data manager.....	65
dataflow alert, set-up.....	112
dataflow alert, view.....	113
data type.....	16, 59

**E**

Earth curvature.....	57
echo base.....	66
echo thickness.....	79
echo TOPS.....	81
event view.....	54
weather.....	45
event criteria.....	45
assign.....	50
configure.....	47
examples.....	47
user roles.....	39
events.....	9

**F**

file locations.....	114
---------------------	-----

**H**

history data.....	9, 20
hydrometeor.....	56

**I**

identity configuration.....	98
IRIS product family.....	10
IRIS Analysis.....	59
IRIS Analysis products.....	83
BASE.....	84
BEAM.....	84
CAPPI.....	84
HMAX.....	84
LAYER.....	84
MAX.....	84
MLHGT.....	84
PPI.....	84
RAIN1.....	84
RAINN.....	84
RHI.....	84
RTI.....	84
SHEAR.....	84
SLINE.....	84
SRI.....	84
THICK.....	84
TOPS.....	84
VAD.....	84
VIL.....	84
VVP.....	84
WARN.....	84, 90
WIND.....	84
IRIS Focus.....	9
licensing.....	11
organizations.....	101
roles.....	93
users.....	93, 94

**L**

layer settings.....	16
licensing IRIS Focus.....	11
IRIS Focus Light.....	11
management.....	103

- nowcasting..... 11
- seats..... 11
- server restart.....103
- M**
- map
  - data..... 13
  - pin..... 52
  - units, aviation ..... 17
  - units, imperial..... 17
  - units, metric.....17
  - view..... 13
- map features
  - area of interest
    - places of interest.....53
  - pin..... 53
- map layers
  - base..... 13
  - editing base layer..... 14
  - external..... 105
  - product..... 13
  - shapefile..... 105
  - style.....14
  - visibility.....14
  - WMS.....105
- maps
  - external layers..... 105
  - geoserver..... 105
  - layer configuration..... 115
  - layers.....104
  - manage..... 104
  - shapefile..... 105
  - TheMap context.....105
  - view context.....105
  - WMS.....105
  - world map.....104
- map tools
  - color scale editor..... 21
  - cross section.....23
  - cursor.....21
  - product colors.....63
  - ruler..... 24
  - tracking..... 25
- MAX
  - calculating.....75
  - height..... 74
  - on-demand..... 72
- maximum data..... 72
- max time span.....110
- motion vector.....86
  - configure.....107
- multiple radars..... 27, 28, 111
- N**
- notifications..... 99
- nowcasting..... 9, 20, 30
  - advection..... 33
  - advection, settings.....118
  - algorithms.....32
  - configuration file..... 116, 118
  - configure.....107
  - configure MVF..... 107
  - enable..... 107
  - motion vector.....86
  - MVF, settings.....118
  - TREC..... 88, 116
  - velocity..... 88
- O**
- on-demand products..... 65
  - BASE.....66
  - BASE, calculating ..... 68
  - CAPPI..... 68
  - CAPPI, calculating.....72
  - MAX..... 72
  - MAX, calculating.....75
  - PPI..... 76
  - PPI, calculating ..... 78
  - pseudo CAPPI..... 70
  - reflectivity.....64

smoothing.....	64	pulse.....	57
THICK.....	79	<b>R</b>	
THICK, calculating .....	80	radar beam.....	57
threshold.....	64	radar data.....	56
TOPS.....	81	radar products.....	9, 56
TOPS, calculating .....	83	attributes.....	16
organization.....	102	codes.....	61
application subscription.....	100	colors.....	63
events.....	101	layers.....	15
license availability.....	101	layer settings.....	16
new.....	95	radar site.....	18
places of interest.....	101	radar tasks.....	59
root.....	95	reflectivity threshold.....	64
users.....	93, 101	related documents.....	7
<b>P</b>		remove users.....	97
password configuration.....	99	role	
pin		administrator.....	93
delete.....	53	focus.....	93
enable, disable.....	53	kiosk.....	93
map.....	52	poweruser.....	93
map display.....	53	user.....	93
place of interest.....	52	ruler tool.....	24
remove.....	53	<b>S</b>	
view.....	53	saved views.....	36
place of interest		shape	
area.....	40, 52	area of interest.....	43
pin.....	52	smoothing.....	16, 64
places of interest		snapshot.....	25
map display.....	53	status messages.....	99
view.....	53	subscription.....	100
plan position indicator.....	76	sweep.....	57
playback.....	20	system properties.....	99
PPI		<b>T</b>	
calculating.....	78	THICK	
elevation.....	77	calculating.....	80
on-demand.....	76	on-demand.....	79
pre-configured products		threshold.....	79
motion vector .....	86		
pseudo CAPPI.....	16, 68, 70		

threshold.....	16, 64	symbols.....	51
time line.....	20	view.....	54
TOPS		weather event	
calculating.....	83	criteria.....	45
on demand.....	81		
threshold.....	82		
tracking tool.....	25		
trademarks.....	7		
<b>U</b>			
user accounts.....	94, 97		
create.....	95		
users.....	94		
accounts.....	93, 97, 101		
administrator.....	93, 97, 101		
areas of interest.....	39		
event criteria.....	39		
force log out.....	97		
identity.....	98		
logged in user view.....	97		
manage.....	93, 101		
organization.....	93		
organizations.....	101		
password.....	99		
<b>V</b>			
version information.....	7		
volume.....	57		
<b>W</b>			
WARN			
IRIS Analysis.....	90		
output device.....	90		
send from IRIS.....	91		
weather alert			
acknowledge.....	51		
criteria.....	45		
criteria, assign.....	50		
criteria, configure.....	47		
criteria, examples.....	47		



## Warranty

For standard warranty terms and conditions, see [www.vaisala.com/warranty](http://www.vaisala.com/warranty).

Please observe that any such warranty may not be valid in case of damage due to normal wear and tear, exceptional operating conditions, negligent handling or installation, or unauthorized modifications. Please see the applicable supply contract or Conditions of Sale for details of the warranty for each product.

## Technical Support



Contact Vaisala technical support at [helpdesk@vaisala.com](mailto:helpdesk@vaisala.com). Provide at least the following supporting information:

- Product name, model, and serial number
- Name and location of the installation site
- Name and contact information of a technical person who can provide further information on the problem

For more information, see [www.vaisala.com/support](http://www.vaisala.com/support).

## Recycling



Recycle all applicable material.



Follow the statutory regulations for disposing of the product and packaging.





**VAISALA**

[www.vaisala.com](http://www.vaisala.com)

